


# **V-TONE BL-8808**

**Instrukcja obsługi / User Manual**

## **Spis treści**

Zasady bezpieczeństwa użytkowania.....	2
Konserwacja .....	2
Budowa i obsługa .....	3
Informacja o zużytych sprzęcie elektrycznym i elektronicznym .....	13

## Zasady bezpieczeństwa użytkownika

 
	Przed użyciem prosimy o szczegółowe zapoznanie się z instrukcją obsługi. Prosimy również o zachowanie jej na przyszłość. Instrukcja zawiera zasady bezpiecznego korzystania z urządzenia.
	Po otrzymaniu produktu należy go rozpakować i sprawdzić, czy produkt jest kompletny i czy podczas transportu nie powstały żadne uszkodzenia. W przypadku uszkodzeń powstałych podczas transportu, prosimy nie używać produktu i niezwłocznie skontaktować się ze sprzedawcą lub producentem.
	<b>UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH.</b> To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobiegnięcia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi. Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.
	Produkt opisany w tej instrukcji jest zgodny z dyrektywami europejskimi, dlatego jest oznaczony znakiem CE.
	Urządzenie należy trzymać z dala od dzieci i niewykwalifikowanych osób. Producent nie ponosi odpowiedzialności za szkody spowodowane nieprawidłowym użytkowaniem.
	Przed użyciem upewnij się, że obudowa nie jest uszkodzona.
	Korzystać wyłącznie z dołączonego do produktu zasilacza dedykowanego DC 9-12V! Odłączenie produktu od zasilania odbywa się poprzez pociągnięcie za wtyczkę przewodu zasilającego - nie ciągnąć bezpośrednio za przewód zasilający! Odłącz urządzenie z zasilania przed zdjęciem obudowy lub konserwacją. W razie stwierdzenia uszkodzenia przewodu zasilającego - nie używaj go!
	Urządzenie do użytku wewnętrznego w dobrze wentylowanym pomieszczeniu, trzymać z dala od wilgoci. Nie należy narażać produktu na bezpośrednie działanie słońca. Nie wolno przechowywać i korzystać z urządzenia w pobliżu źródeł ognia!
	Nie wolno narażać urządzenia na pracę w wysokich temperaturach!
	W razie wystąpienia zakłóceń w pracy urządzenia, natychmiast odłącz je od źródła zasilania!

## Konserwacja

1. Urządzenie może użytkować tylko wykwalifikowany personel, szkody spowodowane użytkowaniem niezgodnym z przeznaczeniem lub próbą samodzielnej naprawy nie podlegają gwarancji. Wewnątrz opakowania nie ma żadnych części serwisowych, naprawy mogą być wykonywane wyłącznie przez autoryzowany punkt serwisowy.
2. Nie pozwól, aby produkt wszedł w kontakt z olejem, tłuszczem lub jakimkolwiek podobnym płynem.
3. Regularne czyszczenie umożliwia długotrwałe użytkowanie oraz pozwala na zachowanie odpowiedniego funkcjonowania urządzenia. Do czyszczenia używaj miękkiej, suchej szmatki.



## Budowa i obsługa

### Montaż statywu

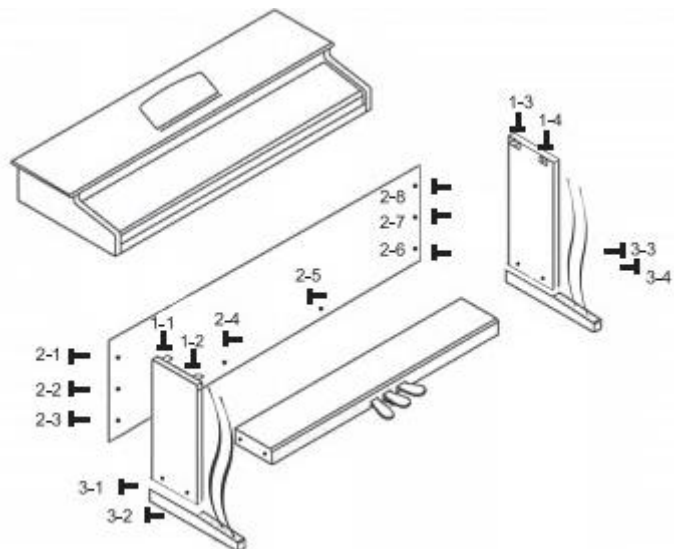

1. 1-1 do 1-4: plastikowe śruby mocujące M6X25 (4 sztuki).
2. 2-1 do 2-8: śruby M6X20 (8 sztuk).
3. 3-1 do 3-4: śruby M6X60 (4 sztuki).

### Panel sterowania i gniazda

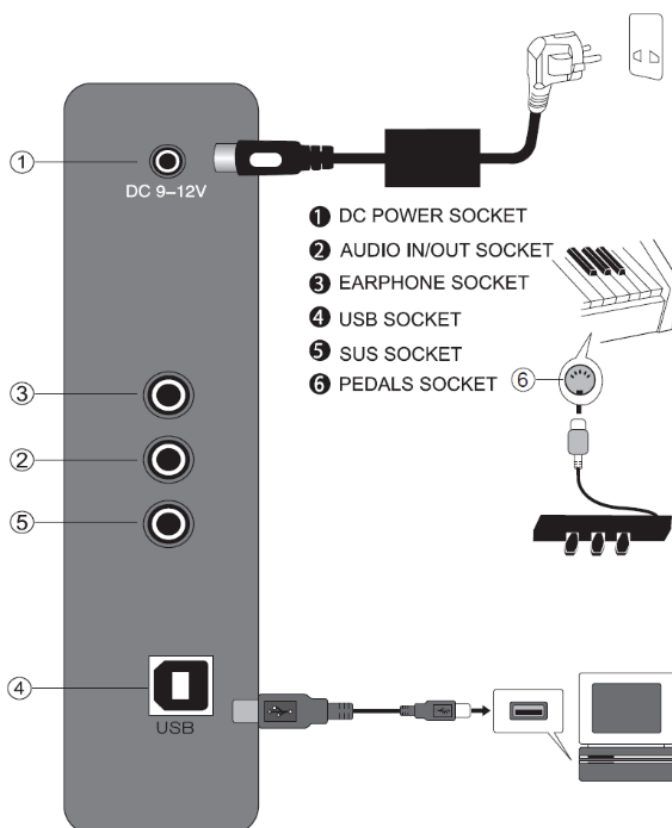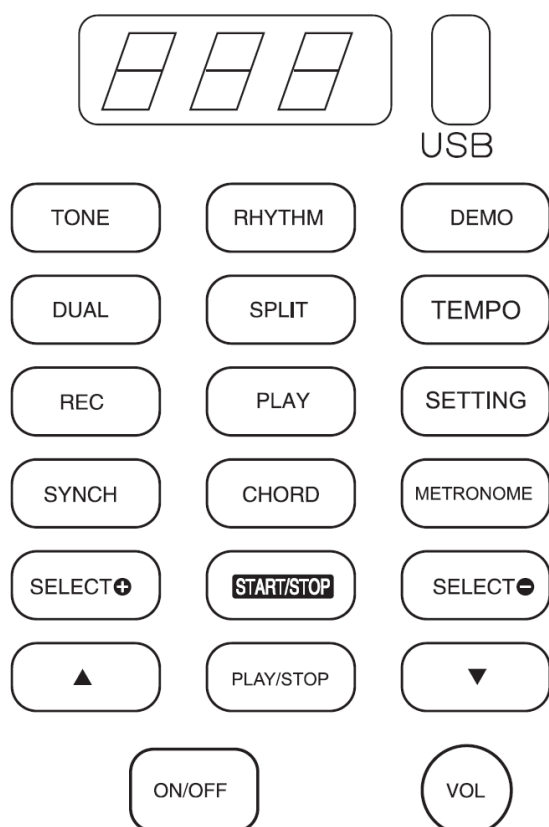  

- |                          |                         |                     |
|--------------------------|-------------------------|---------------------|
| 1. Gniazdo zasilania.    | 3. Gniazdo słuchawkowe. | 5. Gniazdo sustain. |
| 2. Gniazdo Audio In/Out. | 4. Gniazdo USB.         | 6. Gniazdo MIDI.    |

### Przygotowanie urządzenia

- Urządzenie wymaga podłączenia do źródła zasilania za pomocą dedykowanego przewodu zasilającego. Przy podłączaniu urządzenia do źródła zasilania zachować zasady ostrożności.
- Należy użyć dedykowanego zasilacza. Okrągłą wtyczkę przewodu zasilacza należy podłączyć do portu zasilania, a następnie drugi koniec do gniazda zasilania. Napięcie wejściowe zasilacza powinno być zgodne z napięciem zasilania.
- Audio In/Out: po pierwsze, wyłączyć urządzenie i zewnętrzne urządzenia audio, po drugie, podłączyć wtyczkę przewodu audio do gniazda Audio In/Out, a następnie podłączyć drugi koniec do portu wejściowego zewnętrznego urządzenia audio.
- Podłączenie słuchawek: Po podłączeniu słuchawek do gniazda słuchawkowego, głośnik zostanie automatycznie wyłączony. Dzięki temu można grać bez przeszkadzania innym. Uwaga! Podczas korzystania z słuchawek nie należy zwiększać i utrzymywać przez dłuższy czas maksymalnej głośności - może to spowodować uszkodzenia lub/i utratę słuchu.

### Podstawowa obsługa

- Nacisnąć przycisk wł./wył. zasilania, wyświetlacz LED włączy się i pokaże wartość "001"; można rozpocząć grę na pianinie zgodnie z zasadami instrukcji.
- Regulacja głośności - użyć gałki VOL, aby zmniejszyć lub zwiększyć głośność.
- Wybór tonu - nacisnąć przycisk TONE, aby przejść do trybu wyboru tonu; między poszczególnymi tonami można wybierać za pomocą przycisków SELECT+ i SELECT-; domyślny ton to PIANO.
- Wybór podkładu rytmicznego - nacisnąć przycisk RHYTHM, aby przejść do trybu wyboru podkładu rytmicznego; między poszczególnymi podkładami rytmicznymi można wybierać za pomocą przycisków SELECT+ i SELECT-; nacisnąć przycisk START/STOP, aby rozpocząć odtwarzanie lub zatrzymać wybrany podkład rytmiczny.
- Regulacja tempa - nacisnąć TEMPO, aby ustawić tempo podkładu rytmicznego; tempo można zwiększyć za pomocą przycisku SELECT+ lub zmniejszyć za pomocą przycisku SELECT-; zakres tempa - 20-280.
- Akompaniament akordowy - wybrać podkład rytmiczny; w trybie wyboru podkładu rytmicznego, nacisnąć przycisk CHORD, aby przejść w tryb akompaniamentu akordowego; zagrać akompaniament z wykorzystaniem klawiszy 1-34 od lewej strony; nacisnąć przycisk CHORD ponownie, aby wyjść z trybu akompaniamentu akordowego.
- Start synchroniczny - wybrać podkład rytmiczny, tempo i akompaniament akordowy; w trybie wyboru podkładu rytmicznego, nacisnąć przycisk SYNCH, aby wejść w trybu startu synchronicznego; zagrać akordy (z wykorzystaniem klawiszy 1-34 od lewej strony), a akompaniament zacznie grać automatycznie; nacisnąć przycisk START/STOP, aby wyłączyć start synchroniczny.
- SETTING - nacisnąć jednokrotnie, aby zwiększyć/zmniejszyć czułość klawiszy za pomocą przycisków SELECT+ i SELECT-; nacisnąć dwukrotnie, aby zwiększyć/zmniejszyć (SELECT+/SELECT-) głośność podkładu rytmicznego (0-32); nacisnąć trzykrotnie, aby zwiększyć/zmniejszyć (SELECT+/SELECT-) tonację (-12 - 12).

- Metronom - nacisnąć przycisk METRONOME, aby włączyć funkcję metronomu - wskaźnik LED podświetli się; nacisnąć przycisk METRONOME ponownie, aby wyłączyć funkcję metronomu.
- Odtwarzanie utworów demo - nacisnąć przycisk DEMO, system przejdzie w tryb odtwarzania utworu demo; za pomocą przycisków SELECT+ i SELECT- wybierać między poszczególnymi utworami DEMO; nacisnąć przycisk DEMO ponownie, aby wyjść z trybu odtwarzania utworu demo.
- Nagrywanie - nacisnąć przycisk REC, aby wejść w tryb nagrywania; nacisnąć przycisk PLAY, aby odtworzyć nagranie.
- SPLIT - wybrać ton; nacisnąć przycisk SPLIT w trybie wyboru tonu - za pomocą przycisków SELECT+/SELECT- wybrać inny ton - klawiatura została podzielona na 2 wybrane tony; nacisnąć przycisk SPLIT ponownie, aby wyłączyć funkcję SPLIT.
- DUAL - wybrać ton; nacisnąć przycisk DUAL w trybie wyboru tonu - za pomocą przycisków SELECT+/SELECT- wybrać inny ton - każdy klawisz ma teraz 2 wybrane tony; nacisnąć przycisk DUAL ponownie, aby wyłączyć funkcję DUAL.
- Odtwarzanie pliku MP3 - umieścić urządzenie USB z plikiem MP3 w gnieździe USB; rozpocząć odtwarzanie za pomocą przycisku PLAY/STOP; można wybierać między plikami MP3 na urządzeniu za pomocą przycisków strzałek w górę i w dół.

### Tabela tonów

Number	Instrument		
PIANO		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTRT 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	BASS	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETLS BASS
GLOCK		037	SLAP BASS 1
009	CELESTA	038	SLAP BASS 2
010	GLOCKENSPIEL 1	039	SYN BASS 1
011	MUSIC BOX 1	040	SYN BASS 2
012	VIBRAPHONE 1	STRING	
013	MARIMBA 1	041	VIOLIN 1
014	XYLOPHONE 1	042	VIOLA 1
015	TUBULR BELLS 1	043	CELLO 1
016	DULCIMER 1	044	CONTRABASS 1
ORGAN		045	STR TREM 1
017	HAND ORGAN 1	046	STR PIZZ
018	PERCHY ORGAN 1	047	HARP 1
019	ROCK ORGAN	048	TIMPANI 1
020	CHURCH ORGAN 1	CONCERT	
021	REED ORGAN 1	049	STRINGS 1
022	ACCORDN 1	050	STRINGS 2
023	HARMONICA 1	051	STR SYN 1
024	TANGO ACCORDN 1	052	STR SYN 2
GUITAR		053	CHOIR AAHS 1
025	GUITAR NYLON 1	054	VOICE OOHS 1
026	GUITAR STEEL 1	055	VOICE SYN
027	GUITAR JAZZ 1	056	ORCH HIT 1
028	GUITAR CLEAN 1	BRASS	
		057	TRUMPT 1
		058	TROMBONE 1
		059	TUBA 1
		060	MUTE TPT 1
		061	FR HORN 1
		062	BRASS SECT 1
		063	BRASS SYN 1
		064	BRASS SYN 2
		PIPE	

## Instrukcja obsługi / User Manual

065	SAX SOPRANO	101	BRIGHT FX	138	GRAND PIANO DARK 1	178	HONKY-TONK /W 3
066	SAX ALTO 1	102	GOBLIN FX	139	GRAND PIANO DARK 2	179	HONKY-TONK /W 4
067	SAX TENOR 1	103	ECHO FX	140	VELOCITY CROSS PIANO 1	180	SHORT HONKY-TONK 1
068	SAX BTONE 1	104	SCI-FI FX	141	VELOCITY CROSS PIANO 2	181	SHORT HONKY-TONK 2
069	OBOE 1	FOLK SOUND		142	SOFT GRAND PIANO 1	182	E PIANO 1/W
070	ENG HORN 1	105	SITAR 1	143	SOFT GRAND PIANO 2	183	E PIANO 2/W
071	BASSON 1	106	BANJO 1	144	SOFT GRAND PIANO 3	184	E PIANO 3/W
072	CLARINET 1	107	SHAMISEN 1	145	STEREO BRIGHT PIANO	185	E PIANO 4/W
WOODPIPE		108	KOTO 1	146	BRIGHT PIANO 2	186	E PIANO 5/W
073	PICCOLO 1	109	KALIMBA	147	BRIGHT PIANO 3	187	E PIANO 6/W
074	FLUTE 1	110	BAGPIPE	148	BRIGHT PIANO 4	188	SOFT E.PIANO 1
075	RECORDER 1	111	FIDDLE	149	BRIGHT PIANO 5	189	SOFT E.PIANO 2
076	PAN FLUTE	112	SHANAI	150	BRIGHT PIANO /W 1	190	SOFT E.PIANO 3
077	BOTTLE BLOWN	PERCUSSION		151	BRIGHT PIANO /W 2	191	SOFT E.PIANO 4
078	SHAKHACHI	113	TINKLE BELL	152	SOFT BRIGHT PIANO 1	192	HARD E.PIANO 1
079	WHISTLE 1	114	AGOGO	153	SOFT BRIGHT PIANO 2	193	HARD E.PIANO 2
080	OCARINA	115	STEEL DRM	154	DEEP BRIGHT PIANO	194	SHORT E.PIANO 1
SYNTH PIPE		116	WOODBLK	155	VELOCITY CROSS BRIGHT PIANO	195	SHORT E.PIANO 2
081	SQR WAVE	117	TAIKO DRM	156	DETUNED E.PIANO 1	196	BRIGHTNESS E.P 1
082	SAW TOOTH	118	MLDY TOM	157	DETUNED E.PIANO 2	197	BRIGHTNESS E.P 2
083	CALLIOPE	119	SYNTH DRM	158	DETUNED E.PIANO 3	198	HARPSICHORD 1
084	CHIFF	120	REVRS CYM	159	DETUNED E.PIANO 3	199	HARPSICHORD 2
085	CHARANG	EFFECT		160	BRIGHT E.PIANO 1	200	SOFT HARPSICHORD 1
086	VOICE	121	GTR NOISE	161	BRIGHT E.PIANO 2	201	SOFT HARPSICHORD 2
087	FIFTHS	122	BREATH 1	162	BRIGHT E.PIANO 3	202	BRIGHT HARPSICHORD 1
088	BASS LEAD	123	SEASHORE	163	BRIGHT E.PIANO 4	203	BRIGHT HARPSICHORD 2
SYNTH VOICE		124	BIRD TWEET 1	164	E.PIANO /W 1	204	DARK HARPSICHORD 1
089	NEW AGE	125	TELEPHONE	165	E.PIANO /W 2	205	DARK HARPSICHORD 2
090	WARM PAD	126	HELICOPTER	166	E.PIANO /W 3	206	HARD HARPSICHORD 1
091	POLY SYNTH	127	APPLAUSE	167	E.PIANO /W 4	207	HARD HARPSICHORD 2
092	CHOIR PAD 1	128	GUNSHOT 1	168	DARK E.PIANO 1	208	CLAVI CHORD 2
093	BOW GLASS 1	129	GRAND PIANO2	169	DARK E.PIANO 3	209	CLAVI CHORD 3
094	METAL PAD 1	130	GRAND PIANO3	170	DARK E.PIANO 4	210	CLAVI /W
095	HALO PAD 1	131	GRAND PIANO4	171	SOFT HONKY-TONK 1	211	BRIGHT CLAVI
096	SWEEP	132	GRAND PIANO /W 1	172	SOFT HONKY-TONK 2	212	DARK CLAVI
SYNTH EFFECT		133	GRAND PIANO /W 2	173	VELOCITY CROSS HONKY-TONK	213	PERCHY CLAVI
097	RAIN FX	134	GRAND PIANO /W 3	174	DARK HONKY-TONK 1	214	BRIGHT CELESTA
098	SNDTRK FX	135	BRIGHTNESS PIANO 1	175	DARK HONKY-TONK 2	215	SHORT CELESTA
099	CRYSTAL FX	136	BRIGHTNESS PIANO 2	176	HONKY-TONK /W 1	216	PERCHY CELESTA
100	ATMOSPH FX	137	BRIGHTNESS PIANO 3	177	HONKY-TONK /W 2	217	DUET CELESTA

218	CELESTA HARMONIC	259	SANTUR	300	SLOW REED ORGAN	341	FAST TANGO ACCORDN
219	GLOCKENSPIEL 2	260	HAND ORGAN 2	301	SOFT REED ORGAN	342	GUITAR NYLON 2
220	GLOCKENSPIEL 3	261	HAND ORGAN 3	302	HARD REED ORGAN	343	GUITAR NYLON 3
221	GLOCKENSPIEL 4	262	SOFT HAND ORGAN	303	JAZZ REED ORGAN	344	GUITAR NYLON 4
222	BRIGHT GLOCKENSPIEL	263	BRIGHT SOFT HAMND ORGAN	304	ACCORDN 2	345	GUITAR NYLON 5
223	DARK GLOCKENSPIEL	264	HAMND ORGAN DETUNED	305	ACCORDN 3	346	GUITAR NYLON 6
224	GLOCKENSPIEL /W 1	265	PERCHY ORGAN 2	306	ACCORDN 4	347	GUITAR NYLON 7
225	GLOCKENSPIEL /W 2	266	PERCHY ORGAN 3	307	ACCORDN 5	348	GUITAR NYLON RELEASE
226	MUSIC BOX 2	267	BRIGHT PERCHY ORGAN	308	DISTR ACCORDN	349	VELOCITY CROSS RUITAR
227	MUSIC BOX 3	268	DISTR PERCHY ORGAN	309	BRIGHT ACCORDN	350	DETUNED GUITAR NYLON
228	MUSIC BOX 4	269	ROTART ORGAN	310	ACCORDN HARMONIC	351	BIRGHT GUITAR NYLON
229	TOY MUSIC BOX	270	SLOW ROTART ORGAN	311	ROCK ACCORDN	352	DARK GUITAR NYLON
230	BRIGHT MUSIC BOX	271	1960 ROCK ORGAN	312	SWEET ACCORDN	353	GUITAR NYLON HARMONIC 1
231	DARK MUSIC BOX	272	1990 ROCK ORGAN	313	DARK ACCORDN	354	GUITAR NYLON HARMONIC 2
232	VIBRAPHONE 2	273	BRIGHT ROCK ORGAN	314	FAST ACCORDN	355	GUITAR NYLON /W 1
233	VIBRAPHONE 3	274	DARK ROCK ORGAN	315	SLOW ACCORDN	356	GUITAR NYLON /W 2
234	SYN VIBRAPHONE	275	SOFT ROCK ORGAN	316	HARMONICA 2	357	GUITAR NYLON FAST
235	HARD VIBRAPHONE	276	CHURCH ORGAN 2	317	HARMONICA 3	358	GUITAR NYLON SLOW
236	VIBRAPHONE /W 1	277	CHURCH ORGAN 3	318	HARMONICA 4	359	HARD GUITAR NYLON
237	VIBRAPHONE /W 2	278	CHURCH ORGAN 4	319	HARMONICA 5	360	SOFT GUITAR NYLON
238	VIBRAPHONE SOFT	279	CHURCH ORGAN 5	320	SWEET HARMONICA	361	GUITAR STEEL 2
239	MARIMBA 2	280	CHURCH ORGAN 6	321	DISTR HARMONICA	362	GUITAR STEEL 3
240	MARIMBA /W	281	CHURCH ORGAN /W 1	322	SLOW HARMONICA	363	GUITAR STEEL 4
241	DARK MARIMBA	282	CHURCH ORGAN /W 2	323	FAST HARMONICA	364	VELOCITY CROSS GUITAR STEEL
242	BRIGHT MARIMBA	283	BIRGHT CHURCH ORGAN 1	324	BRIGHT HARMONICA	365	DARK GUITAR STEEL
243	DUTED MARIMBA	284	BIRGHT CHURCH ORGAN 2	325	DARK HARMONICA	366	BRIGHT GUITAR STEEL
244	DARK MARIMBA	285	DARK CHURCH ORGAN 1	326	SOFT HARMONICA	367	GUITAR STEEL HARMONIC 1
245	XYLOPHONE 2	286	DARK CHURCH ORGAN 2	327	HARMONICA /W 1	368	GUITAR STEEL HARMONIC 2
246	XYLOPHONE 3	287	SOUL CHURCH ORGAN	328	HARMONICA /W 2	369	HARD GUITAR STEEL
247	VELOCITY CROSS XYLOPHONE	288	CHURCH ORGAN HARMONIC	329	HARMONICA MUTED	370	SOFT GUITAR STEEL
248	DISTR XYLOPHONE	289	CHURCH ORGAN SLOW	330	TANGO ACCORDN 2	371	FAST GUITAR STEEL
249	BRIGHT XYLOPHONE	290	CHURCH ORGAN FAST	331	TANGO ACCORDN 3	372	SLOW GUITAR STEEL
250	FAST XYLOPHONE	291	SOFT CHURCH ORGAN	332	1960 TANGO ACCORDN	373	VELOCITY GUITAR STEEL
251	SLOW XYLOPHONE	292	REED ORGAN 2	333	1980 TANGO ACCORDN	374	GUITAR STEEL REALSE
252	TUBULR BELLS 2	293	REED ORGAN 3	334	BRIGHT TANGO ACCORDN	375	GUITAR STEEL /W 1
253	TUBULR BELLS 3	294	REED ORGAN 4	335	DARK TANGO ACCORDN	376	GUITAR STEEL /W 2
254	TUBULR BELLS 4	295	REED ORGAN 5	336	SOFT TANGO ACCORDN	377	GUITAR JAZZ 2
255	SYN TUBULR BELLS	296	BRIGHT REED ORGAN	337	HARD TANGO ACCORDN	378	GUITAR JAZZ 3
256	TUBULR BELLS DARK	297	DARK REED ORGAN	338	TANGO ACCORDN /W 1	379	GUITAR JAZZ 4
257	DULCIMER 2	298	REED ORGAN /W	339	TANGO ACCORDN /W 2	380	GUITAR JAZZ 5
258	DULCIMER 3	299	FAST REED ORGAN	340	SLOW TANGO ACCORDN		

## Instrukcja obsługi / User Manual

381	DARK GUITAR JAZZ
382	BRIGHT GUITAR JAZZ
383	SOFT GUITAR JAZZ
384	HARD GUITAR JAZZ
385	GUITAR JAZZ VELOCITY
386	GUITAR JAZZ RELEASE
387	GUITAR JAZZ HARMONIC
388	SOFT GUITAR JAZZ
389	GUITAR JAZZ /W 1
390	GUITAR JAZZ /W 2
391	GUITAR CLEAN 2
392	GUITAR CLEAN 3
393	GUITAR CLEAN 4
394	GUITAR CLEAN 5
395	VELOCITY CLEAN GUITAR
396	DUTED CLEAN GUITAR
397	BRIGHT CLEAN GUITAR
398	CLEAN GUITAR HARMONIC
399	CLEAN GUITAR /W 1
400	CLEAN GUITAR /W 2
401	SOFT CLEAN GUITAR
402	FAST CLEAN GUITAR
403	SLOW CLEAN GUITAR
404	CLEAN GUITAR RELEASE
405	GUITAR MUTED 2
406	GUITAR MUTED 3
407	GUITAR MUTED 4
408	GUITAR MUTED 5
409	BRIGHT GUITAR MUTED
410	DARK GUITAR MUTED
411	GUITAR MUTED HARMONIC
412	GUITAR MUTED RELEASE
413	GUITAR MUTED CHORUS
414	GUITAR MUTED HARD
415	GUITAR MUTED SOFT
416	GUITAR MUTED /W 1
417	GUITAR MUTED /W 2
418	GUITAR OVRDRV 2
419	GUITAR OVRDRV 3
420	GUITAR OVRDRV 4
421	FUNK GUITAR

422	GUITAR OVRDRV HARMONIC
423	BRIGHT GUITAR OVRDRV
424	DARK GUITAR OVRDRV
425	GUITAR OVRDRV RELEASE
426	HARD GUITAR OVRDRV
427	SOFT GUITAR OVRDRV
428	GUITAR OVRDRV /W 1
429	GUITAR OVRDRV /W 2
430	GUITAR DISTRT 2
431	GUITAR DISTRT 3
432	GUITAR DISTRT 4
433	GUITAR DISTRT 5
434	GUITAR DISTRT 6
435	GUITAR DISTRT HARMONIC
436	GUITAR DISTRT RELEASE
437	BRIGHT GUITAR DISTRT
438	DARK GUITAR DISTRT
439	SOFT GUITAR DISTRT
440	HARMONIC GUITAR DISTRT
441	HARD GUITAR DISTRT
442	GUITAR DISTRT /W 1
443	GUITAR DISTRT /W 2
444	SOFT GUITAR HRMNX
445	HARD GUITAR HRMNX
446	BRIGHT GUITAR HRMNX
447	DARK GUITAR HRMNX
448	FAST GUITAR HRMNX
449	SLOW GUITAR HRMNX
450	GUITAR HRMNX RELEASE
451	GUITAR HRMNX /W 1
452	GUITAR HRMNX /W 2
453	ACOUSTIC BASS 2
454	ACOUSTIC BASS 3
455	ACOUSTIC BASS 4
456	ACOUSTIC BASS 5
457	DETUNED BASS
458	BASS AND FILTER
459	SOFT BASS
460	BASS & RELEASE
461	FAST BASS
462	SLOW BASS

463	BRIGHT BASS
464	DARK BASS
465	BASS /W 1
466	BASS /W 2
467	FINGER BASS 2
468	FINGER BASS HARMONIC
469	SOFT FINGER BASS
470	FINGER BASS RELEASE
471	ELECT BASS 2
472	ELECT BASS 3
473	ELECT BASS 4
474	ELECT BASS 5
475	ELECT BASS 6
476	ELECT BASS RELEASE
477	ELECT BASS HARMONIC
478	SOFT ELECT BASS
479	FAST ELECT BASS
480	PICK BASS
481	BRIGHT ELECT BASS 1
482	BRIGHT ELECT BASS 2
483	DARK ELECT BASS 1
484	DARK ELECT BASS 2
485	SOFT FRETLS BASS
486	FAST FRETLS BASS
487	FRETLS BASS RELEASE
488	FRETLS BASS HARMONIC
489	FRETLESS BASS
490	FAST FRETLESS BASS
491	SLAP BASS 3
492	SLAP BASS 4
493	SLAP BASS 5
494	SLAP BASS 6
495	BRIGHT SLAP BASS 1
496	BRIGHT SLAP BASS 2
497	DARK SLAP BASS 1
498	DARK SLAP BASS 2
499	SOFT SLAP BASS 1
500	SOFT SLAP BASS 2
501	FAST SLAP BASS 1
502	FAST SLAP BASS 2
503	SLOW SLAP BASS 1

504	SLOW SLAP BASS 2
505	SLAP BASS HARMONIC 1
506	SLAP BASS HARMONIC 2
507	SLAP BASS RELEASE 1
508	SLAP BASS RELEASE 2
509	SYN BASS 3
510	SYN BASS 4
511	SYN BASS 5
512	SYN BASS 6
513	SYN BASS HARMONIC 1
514	SYN BASS HARMONIC 2
515	FAST SYN BASS 1
516	FAST SYN BASS 2
517	SOFT SYN BASS 1
518	SOFT SYN BASS 2
519	SLOW SYN BASS 1
520	SLOW SYN BASS 2
521	FAST SYN BASS 1
522	FAST SYN BASS 2
523	BRIGHT SYN BASS 1
524	BRIGHT SYN BASS 2
525	DARK SYN BASS 1
526	DARK SYN BASS 2
527	SYN BASS RELEASE 1
528	SYN BASS RELEASE 2
529	VIOLIN 2
530	VIOLIN 3
531	VIOLIN 4
532	VIOLIN 5
533	VIOLIN ENSEMBLE 1
534	VIOLIN ENSEMBLE 2
535	SLOW VIOLIN
536	FAST VOLIN
537	VOLIN /W
538	BRIGHT VOLIN
539	DARK VOLIN
540	SOFT VOLIN
541	VIOLA 2
542	VIOLA 3
543	VIOLA 4
544	DARK VIOLA

545	HARD VIOLA
546	VIOLA ENSEMBLE
547	SLOW VIOLA
548	VIOLA VIBRATO
549	VIOLA /W
550	BRIGHT VIOLA
551	FAST VIOLA
552	SOFT VIOLA
553	CELLO 2
554	CELLO 3
555	CELLO 4
556	DARK CELLO
557	HARD CELLO
558	CELLO ENSEMBLE 1
559	CELLO ENSEMBLE 2
560	SLOW CELLO
561	FAST CELLO
562	CELLO /W
563	BRIGHT CELLO
564	SOFT CELLO
565	CONTRABASS 2
566	CONTRABASS 3
567	CONTRABASS 4
568	CONTRA BASS ENSEMBLE 1
569	CONTRA BASS ENSEMBLE 2
570	CONTRA BASS ENSEMBLE 3
571	CONTRA BASS ENSEMBLE 4
572	DARK CONTRA BASS
573	CONTRA BASS VIBRATO
574	STR. TREM 2
575	STR. TREM 3
576	STR. TREM 4
577	STR. TREM SLOW
578	STR. TREM FAST
579	STR. TREM /W
580	BRIGHT STR. TREM
581	DARK STR. TREM
582	SOFT STR. TREM
583	BRIGHT STR. PIZZ
584	DARK STR. PIZZ
585	STR. PIZZ HARMONIC

586	STR. PIZZ /W
587	FAST STR. PIZZ
588	SLOW STR. PIZZ
589	SOFT STR. PIZZ
590	METAL STR. PIZZ
591	HARP 2
592	HARP 3
593	HARP 4
594	HARP /W 1
595	HARP /W 2
596	BRIGHT HARP 1
597	BRIGHT HARP 2
598	DARK HARP 1
599	DARK HARP 2
600	HARP HARMONIC
601	SOFT HARMONIC
602	TIMPANI 2
603	TIMPANI 3
604	TIMPANI 4
605	TIMPANI /W 1
606	TIMPANI /W 2
607	BRIGHT TIMPANI
608	DARK TIMPANI
609	STRINGS 3
610	STRINGS 4
611	STRINGS 5
612	STRINGS 6
613	SLOW STRINGS 1
614	SLOW STRINGS 2
615	FAST STRINGS 1
616	FAST STRINGS 2
617	DARK STINGS 1
618	DARK STINGS 2
619	BRIGHT STINGS 1
620	BRIGHT STINGS 2
621	RESONANT STRINGS
622	SFORZATO STRINGS
623	STR. SYN 3
624	STR. SYN 4
625	STR. SYN 5
626	STR. SYN 6

627	1960 STRINGS
628	1970 STRINGS
629	SLOW STRINGS 1
630	SLOW STRINGS 2
631	FAST STRINGS 1
632	FAST STRINGS 2
633	LEGATO STRINGS 1
634	LEGATO STRINGS 2
635	BRIGHT LEGATO STRINGS
636	DARK LEGATO STRINGS
637	CHOIR AAHS 2
638	CHOIR AAHS 3
639	CHOIR AAHS 4
640	CHOIR AAHS 5
641	WARM CHOIR AAHS
642	CHOIR AAHS /W 1
643	CHOIR AAHS /W 2
644	CHOIR AAHS HARMONIC
645	BRIGHT CHOIR AAHS
646	DARK CHOIR AAHS
647	FAST CHOIR AAHS
648	SLOW CHOIR AAHS
649	VOICE OOHs 2
650	WARM VOICE OOHs 1
651	WARM VOICE OOHs 2
652	VOICE OOHs /W
653	BRIGHT VOICE OOHs
654	DARK VOICE OOHs
655	FAST VOICE OOHs
656	SLOW VOICE OOHs
657	VOICE SYN HARMONIC
658	SLOW VOICE SYN
659	FAST VOICE SYN
660	BRIGHT VOICE SYN
661	ELE. VOICE SYN
662	ORCH. HIT 2
663	ORCH. HIT /W
664	BRIGHT ORCH. HIT
665	ORCH. HIT HARMONIC
666	SLOW ORCH. HIT
667	FAST ORCH. HIT

668	DARK ORCH. HIT
669	SOFT ORCH. HIT
670	TRUMPT 2
671	TRUMPT 3
672	TRUMPT 4
673	TRUMPT 5
674	TRUMPT 6
675	TRUMPT 7
676	DARK TRUMPT
677	BRIGHT TRUMPT
678	SWEET TRUMPT
679	MUTE TRUMPT
680	TRUMPT /W 1
681	TRUMPT /W 2
682	TROMBONE 2
683	TROMBONE 3
684	TROMBONE 4
685	TROMBONE 5
686	TROMBONE 6
687	TROMBONE 7
688	DARK TROMBONE
689	BRIGHT TROMBONE
690	SLOW BRIGHT TROMBONE
691	MUTE TROMBONE
692	TROMBONE /W
693	TUBA 2
694	TUBA 3
695	TUBA 4
696	TUBA 5
697	TUBA 6
698	SOFT TUBA
699	SLOW TUBA
700	TUBA SOLO
701	TUBA /W
702	BRIGHT TUBA
703	DARK TUBA
704	MUTE TUBA
705	MUTE TPT 2
706	DARK MUTE TPT
707	BRIGHT MUTE TPT
708	MUTE TPT /W

## Instrukcja obsługi / User Manual

709	SWEET MUTE TPT	750	SAX ALTO 6	791	ANALOG ENG HORN	832	PAN FLUTE FAST
710	FR HORN 2	751	SAX ALTO BRIGHT	792	WOODWINDS	833	PAN FLUTE HARMONIC
711	FR HORN 3	752	SAX ALTO MUTE	793	BASSON 2	834	PAN FLUTE DUTE
712	FR HORN 4	753	SAX ALTO /W	794	BASSON 3	835	PAN FLUTE/W
713	FR HORN 5	754	SOFT SAX ALTO	795	BASSON 4	836	BRIGHT PAN FLUTE
714	FR HORN 6	755	SLOW SAX ALTO	796	BASSON 5	837	BOTTLE BLOWN DARK
715	SWEET FR HORN	756	SWEET SAX ALTO	797	BRIGHT BASSON	838	BOTTLE BLOWN BRIGHTNESS
716	SLOW FR HORN	757	SAX TENOR 2	798	DARK BASSON	839	BOTTLE BLOWN WARM
717	FAST FR HORN	758	SAX TENOR 3	799	BASSON WELL	840	SOFT BOTTLE BLOWN
718	BRIGHT FR HORN	759	SAX TENOR 4	800	BRIGHT BASSON	841	SHAKHACHI HARMONIC
719	DARK FR HORN	760	SAX TENOR 5	801	MUTE BASSON	842	SHAKHACHI BRIGHT
720	BRASS SECT 2	761	SAX TENOR 6	802	SOFT BASSON	843	SHAKHACHI DARK
721	BRASS SECT 3	762	SWEET SAX TENOR	803	CLARINET 2	844	SLOW SHAKHACHI
722	BRASS SECT 4	763	DARK SAX TENOR	804	CLARINET 3	845	FAST SHAKHACHI
723	BRASS SECT 5	764	SUPER SAX TENOR	805	CLARINET 4	846	WHISTLE 2
724	BRASS SECT 6	765	SAX TENOR /W 1	806	CLARINET 5	847	WHISTLE 3
725	DARK BRASS SECT	766	SAX TENOR /W 2	807	CLARINET HARMONIC	848	WHISTLE 4
726	BRASS SECT WELL	767	SAX TENOR HARMONIC	808	DARK CLARINET	849	WHISTLE 5
727	BRIGHT BRASS SECT	768	SAX TENOR BRIGHT	809	BRIGHT CLARINET	850	SQUARE
728	FAST BRASS SECT	769	SAX BTONE 2	810	CLARINET WELL	851	SINE LEAD
729	SLOW BRASS SECT	770	SAX BTONE 3	811	CLARINET MUTE	852	SINE SLOW
730	BRASS SECT /W	771	SAX BTONE 4	812	CLARINET SOFT	853	SINE FAST
731	BRASS SYN 3	772	SAX BTONE 5	813	PICCOLO 2	854	SAW SLOW
732	BRASS SYN 4	773	SAX BTONE WELL	814	PICCOLO 3	855	SAW FAST
733	BRASS SYN 5	774	MUTE SAX BTONE	815	PICCOLO 4	856	SAW HARMONIC
734	BRASS SYN 6	775	SWEET SAX BTONE	816	PICCOLO DARK	857	VOICE LEAD
735	BRASS SYN 7	776	DARK SAX BTONE	817	PICCOLO HARMONIC	858	VOICE SLOW
736	SOFT BRASS SYN	777	OBOE 2	818	BRIGHT PICCOLO	859	VOICE FAST
737	SFORZATO BRASS SYN	778	OBOE 3	819	SOFT PICCOLO	860	SOFT STH LEAD
738	DARK BRASS SYN	779	OBOE 4	820	FLUTE 2	861	STH LEAD
739	BRIGHT BRASS SYN	780	OBOE 5	821	FLUTE 3	862	MASSINESS
740	WELL BRASS SYN	781	SWEET OBOE	822	FLUTE 4	863	BASS & LEAD
741	MUTE BRASS SYN	782	OBOE WELL	823	FLUTE HARMONIC	864	NEW AGE SLOW
742	SWEET BRASS SYN	783	BRIGHT OBOE	824	DARK FLUTE	865	NEW AGE FAST
743	HOMONIC BRASS SYN	784	DARK OBOE	825	BRIGHT FLUTE	866	NEW AGE HARMONIC
744	SLOW BRASS SYN	785	MUTE OBOE	826	FLUTE MUTE	867	WARM PAD FAST
745	FAST BRASS SYN	786	ENG HORN 2	827	SOFT FLUTE	868	WARM PAD SLOW
746	SAX ALTO 2	787	ENG HORN 3	828	RECORDER 2	869	WARM PAD HARMONIC
747	SAX ALTO 3	788	ENG HORN 4	829	RECORDER 3	870	PWM PAD
748	SAX ALTO 4	789	ENG HORN 5	830	RECORDER 4	871	POLY SYNTH SLOW
749	SAX ALTO 5	790	ENG HORN 6	831	PAN FLUTE SLOW	872	POLY SYNTH FAST

873	CLICK PAD
874	ANALOG PAD
875	POLY PAD
876	CHOIR PAD 2
877	CHOID PAD HARMONIC
878	BOW GLASS 2
879	BOW GLASS HARMONIC
880	METAL PAD 2
881	PAN PAD 1
882	PAN PAD 2
883	HALO PAD 2
884	HALO PAD 3
885	DISPERSE
886	RISING
887	CONGREGATE
888	PROGENITOR
889	PRELUDE
890	WARM AIR
891	SMOG
892	PAN ECHO
893	LARGE PAN
894	ECHO SLOW
895	FANTASYLAND
896	SITAR 2
897	SITAR 3
898	SITAR 4
899	DISTRIT SITAR
900	BRIGHT SITAR

## Tabela podkładów rytmicznych

	Number	Instrument
<b>8 BEAT</b>	001	8 Beat 1A
	002	8 Beat 2A
	003	8 Beat 3A
	004	8 Beat 4A
	005	8 Beat BeatA
	006	8 Beat Pop 1A
	007	8 Beat Pop 2A
<b>BALLAD</b>	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
	011	Organ BalladA
	012	Bluse BalladA
	013	Epic BalladA
	014	Rock BalladA
	015	Slow BalladA
	016	Pop Ballad
	017	Electro Pop Ballad
	018	Polk BalladA
	<b>16 BEAT</b>	019
020		16 Beat 2A
021		16 Beat 3A
022		16 Beat 4A
023		16 Beat FunkA
024		16 Beat Pop A
025		16 Beat BalladA
<b>LATIN</b>	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
	030	Cha ChaA
	031	RumbaA
	032	TEX TEXA
<b>COUNTRY</b>	033	CountryA
	034	Country RockA
	035	Country ShuffleA
	036	Country SwingA
	037	Country BalladA
	038	Country WaltzA
	039	50's RockA
<b>ROCK R&amp;B</b>	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
	044	Slow RockA

	045	Hard RockA		092	TarantellaA		
	046	Rock & Roll 1A		093	Slow WaltzA		
	047	Rock & Roll 2A		094	Ober WaltzA		
<b>RHYTHM&amp;BLUES</b>	048	Chicago BluesA		095			
	049	Fast GospelA		096			
	050	Groove SoulA		097			
	051	RapA		098			
	052	GospelSIA		099			
	053	BluesA		100			
	054	Slow BluesA		<b>8 BEAT</b>	101	8 Beat 1B	
	055	FoxtrotA			102	8 Beat 2B	
	056	Disco TropicA			103	8 Beat 3B	
<b>Disco</b>	057	Disco BandaA		104	8 Beat 4B		
	058	Two StepA		105	8 Beat BeatB		
	059	Polk PopA		106	8 Beat Pop 1B		
	060	Waltz 1A		107	8 Beat Pop 2B		
	061	Waltz Pop 1A	<b>BALLAD</b>	108	Ballad 1B		
	062	Waltz Pop 2A		109	Ballad 2B		
	<b>WORLD MUSIC</b>	063	BaiA		110	Guitar BalladB	
064		Twist 1A	111		Organ BalladB		
	065	Twist 2A		112	Bluse BalladB		
	066	Miami PopA		113	Epic BalladB		
	067	NotownA		114	Rock BalladB		
	068	ReggaeA		115	Slow BalladB		
	069	Swing ReggaeA		116	Pop BalladB		
	070	MarboA		117	Electro Pop BalladB		
	071	BeguineA		118	Polk BalladB		
	072	MusetteA		<b>16 BEAT</b>	119	16 Beat 1B	
	<b>DANCE</b>	073		HouseA		120	16 Beat 2B
		074		Slow FoxA		121	16 Beat 3B
	075	Vienna WaltzA		122	16 Beat 4B		
	076	SalsaA		123	16 Beat FunkB		
	077	DiscoA		124	16 Beat Pop B		
	078	Hip Hop PopA		125	16 Beat BalladB		
	079	Analog PopA		<b>LATIN</b>	126	Bossa Nova 1B	
	080	Club DanceA			127	Guitar BossaB	
	<b>JAZZ&amp;SWING</b>	081		BoogieA		128	Pop BossaB
082		Funky PopA	129	TangoB			
	083	Jazz RockA		130	Cha ChaB		
	084	Swing 1A		131	RumbaB		
	085	DirielandA		132	TEX TEXB		
	086	Jazz SambaA		<b>COUNTRY</b>	133	CountryB	
	087	MarchA			134	Country RockB	
<b>TRADITIONAL</b>	088	BS. MarchA		135	Country ShuffleB		
	089	Sarbo A		136	Country SwingB		
	090	PolkaA		137	Country BalladB		
	091	Polka OberA		138	Country WaltzB		



	513	Slow Ballad		562	Waltz Pop 2SP		609	Ballad 2C		656	Disco Tango
	514	Pop Ballad		563	Ballad		610	Guitar Ballad		657	Disco Tango
	515	Country Pop Ballad	<b>WORLD MUSIC</b>	564	Disco 1SP		611	Disco Ballad		658	Disco Tango
	516	Folk Ballad		565	Disco 2SP		612	Blues Ballad		659	Folk Pop
<b>16 BEAT</b>	519	16 Beat 1SP		566	Blues Pop		613	Easy Ballad	<b>DANCE</b>	660	Ballad 1C
	520	16 Beat 2SP		567	Blues		614	Rock Ballad		661	Ballad Pop 1C
	521	16 Beat 3SP		568	Blues		615	Slow Ballad		662	Ballad Pop 2C
	522	16 Beat 4SP		569	Rock Reggae		616	Pop Ballad		663	Ballad
	523	16 Beat Funk		570	Blues		617	Electro Pop Ballad		664	Ballad 1C
	524	16 Beat Pop R		571	Blues		618	Pop Ballad		665	Ballad 2C
	525	16 Beat Ballad		572	Musette		619	16 Beat 1C		666	Blues Pop
<b>LATIN</b>	526	Bossa Nova 1SP	<b>DANCE</b>	573	Bossa		620	16 Beat 2C		667	Blues
	527	Guitar Bossa		574	Slow Pop		621	16 Beat 3C		668	Blues
	528	Pop Bossa		575	Vienna Waltz		622	16 Beat 4C		669	Rock Reggae
	529	Tango		576	Polka		623	16 Beat Funk		670	Rock
	530	Cha Cha		577	Disco		624	16 Beat Pop 2		671	Blues
	531	Disco		578	Pop Pop Pop		625	16 Beat Ballad		672	Musette
	532	Disco Disco		579	Swing Pop		626	Bossa Nova 1C		673	Bossa
<b>COUNTRY</b>	533	Country		580	Club Dance		627	Guitar Bossa		674	Slow Pop
	534	Country Rock	<b>JAZZ/POP</b>	581	Swing		628	Pop Bossa		675	Vienna Waltz
	535	Country Shuffle		582	Funk Pop		629	Tango		676	Ballad
	536	Country Swing		583	Slow Rock		630	Cha Cha		677	Disco
	537	Country Ballad		584	Rock 1SP		631	Disco		678	Pop Pop
	538	Country Waltz		585	Disco		632	Disco		679	Swing Pop
<b>ROCK 3/4</b>	539	Rock 3/4		586	Slow Swing		633	Country		680	Club Dance
	540	Rock Ballad	<b>TRADITIONAL</b>	587	Rock		634	Country Rock		681	Rock
	541	Rock 1SP		588	US March		635	Country Shuffle		682	Funk Pop
	542	Rock 2SP		589	Swing		636	Country Swing		683	Rock
	543	Soft Rock		590	Polka		637	Country Ballad		684	Swing 1C
	544	Slow Rock		591	Polka Over		638	Country Waltz		685	Disco
	545	Hard Rock		592	Tarentella		639	Pop & Rock		686	Slow Swing
	546	Rock & Roll 1SP		593	Slow Waltz		640	Heavy Metal		687	Rock
	547	Rock & Roll 2SP		594			641	Rock 1C		688	US March
<b>RHYTHM/BS</b>	548	Chicago Blues		595			642	Rock 2C		689	Rock
	549	Fast Gospel		596			643	Soft Rock		690	Polka
	550	Gospel		597			644	Slow Rock		691	Polka Over
	551	Pop		598			645	Hard Rock		692	Tarentella
	552	Gospel		599			646	Rock & Roll 1C		693	Slow Ballad
	553	Blues		600			647	Rock & Roll 2C	<b>JAZZ/POP</b>	694	Slow Ballad
	554	Slow Blues		601	8 Beat 1C		648	Chicago Blues		695	Disco Ballad
	555	Country		602	8 Beat 2C		649	Fast Gospel		696	Ballad 2C
<b>Blues</b>	556	Disco Tango		603	8 Beat 3C		650	Gospel		697	Guitar Ballad
	557	Disco Tango		604	8 Beat 4C		651	Pop		698	3/4 Piano 1C
	558	Disco		605	8 Beat 5C		652	Country		699	3/4 Piano 2C
	559	Folk Pop		606	8 Beat Pop 1C		653	Blues		700	3/4 Piano 1C
	560	Ballad 1SP		607	8 Beat Pop 2C		654	Slow Blues			
	561	Ballad Pop 1SP		608	Ballad 1C		655	Country			

Tabela utworów demonstracyjnych

NO	SongName	029	HapyBirh	058	SingKite	087	Beyer 90
001	MinutWlz	030	PraiseSng	059	TongChil	088	Beyer 98
002	DJ Dance	031	Dolly	060	DoReMi	089	Beyer 99
003	Fountain	032	Market	061	We Happy	090	Beyer 26
004	SpanGirl	033	Family	062	LittlBee	091	Beyer 27
005	SonataPn	034	A cradle	063	Russia	092	Beyer 28
006	SuperSng	035	At Home	064	Plaster	093	Beyer 29
007	LittlBee	036	Seasons	065	Foison	094	Beyer 31
008	HorseRac	037	YearsAgo	066	JingleBe	095	Beyer 106
009	Nocturne	038	Pigeons	067	PaperBoy	096	Beyer 48
010	TheSpain	039	InnerVic	068	Swallow	097	Beyer 52
011	BusyTran	040	Violin	069	New Year	098	Beyer 107
012	Mexico	041	Swan	070	Edelweis	099	Beyer 18
013	MozartPn	042	Musettes	071	MoonRivr	100	Beyer 21
014	Minuet	043	GypsyRnd	072	Beyer 10	101	Beyer 23
015	Nifuma	044	Serenade	073	Beyer 20	102	Beyer 25
016	Disco	045	Polka	074	Beyer 30	103	Beyer 36
017	FolkSong	046	SoilPull	075	Beyer 40	104	Beyer 84
018	Girl Sea	047	Trout	076	Beyer 50	105	Beyer 88
019	LittStar	048	Send-off	077	Beyer 60	106	Beyer 32
020	KindeGtn	049	March	078	Beyer 70	107	Beyer 35
021	Wahaha	050	ForElise	079	Beyer 71	108	Beyer 11
022	Duck&Cik	051	SwaniRiv	080	Beyer 72	109	Beyer 16
023	Humorous	052	France	081	Beyer 75	110	Beyer 18
024	Joy Song	053	Danube	082	Beyer 76		
025	GoingHom	054	Hungary	083	Beyer 77		
026	Dove	055	Spaceman	084	Beyer 78		
027	Auldlang	056	Patriot	085	Beyer 79		
028	Moonligh	057	Cuckoo	086	Beyer 80		

Lista akordów jednopalcowych

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Lista akordów wielopalcowych


## **Informacja o zużytych sprzęcie elektrycznym i elektronicznym**











Głównym celem regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstałych ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczonego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.

**ENGLISH**

**Table of contents**

Safety Instructions .....	15
Maintenance .....	15
Structure and Operation .....	16
Information about Waste Electrical and Electronic Equipment.....	26

## Safety Instructions

 
	Please read the user manual in detail before use. Please also keep it for future reference. The manual contains rules for the safe use of the device.
	After receiving the product, please unpack and check whether it is complete and whether there is any damage caused by transportation. If there is damage caused by transportation, please do not use this product and contact the dealer or manufacturer as soon as possible.
	<b>WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.</b> This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.
	The product described in this manual comply with European directives and it is therefore CE marked.
	Keep the device away from children and unqualified persons. The manufacturer is not liable for damage caused by improper use.
	Before use, make sure the housing is not damaged.
	Use only the dedicated DC 9-12V power supply included with the product! Disconnect the product from the power supply by pulling on the power plug - do not pull directly on the power cord! Disconnect the device from the power supply before removing the housing or performing maintenance. If you find the power cord is damaged - do not use it!
	Indoor device, use in a well-ventilated room, keep away from moisture. Do not expose the product to direct sunlight. Do not store or use the device near a fire source!
	Do not expose the device to high temperatures!
	In the event of a malfunction, disconnect the device from the power supply immediately!

## Maintenance

1. The device may only be used by qualified personnel, damage caused by improper use or attempted repair is not covered by the warranty. There are no service parts inside the packaging, repairs may only be carried out by authorized service center.
2. Do not allow the product to come into contact with oil, grease or any similar liquid!
3. Regular cleaning allows of long term use and maintains proper operations. Use soft, dry cloth to clean the product.



## Structure and Operation

### Stand Assembly

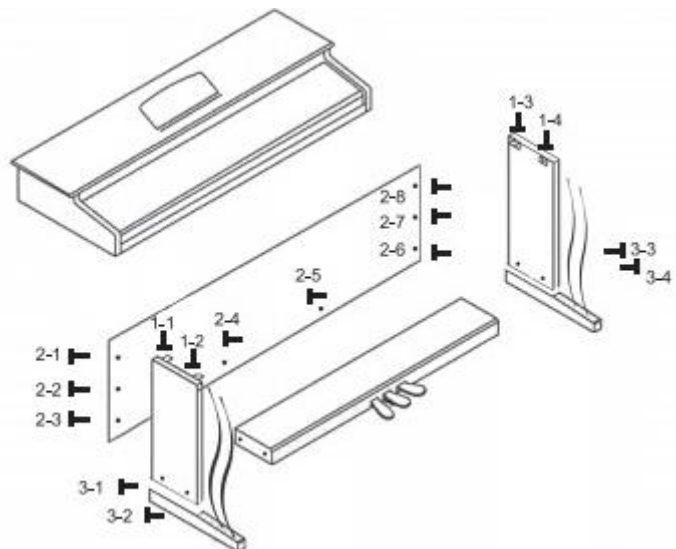

1. 1-1 to 1-4: plastic fix part screws M6X25 (4 pieces).
2. 2-1 to 2-8: screws M6X20 (8 pieces).
3. 3-1 to 3-4: screws M6X60 (4 pieces).

### Control Panel and Sockets

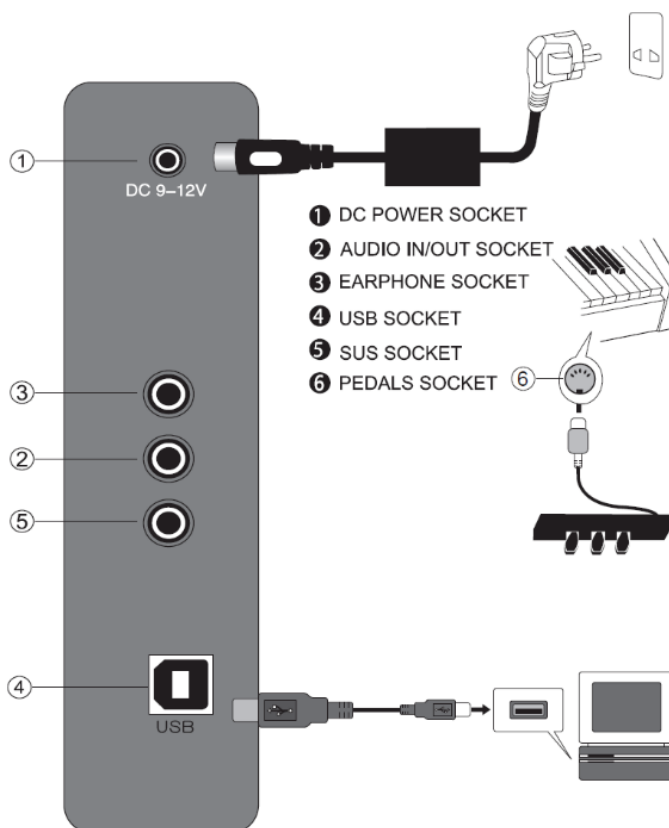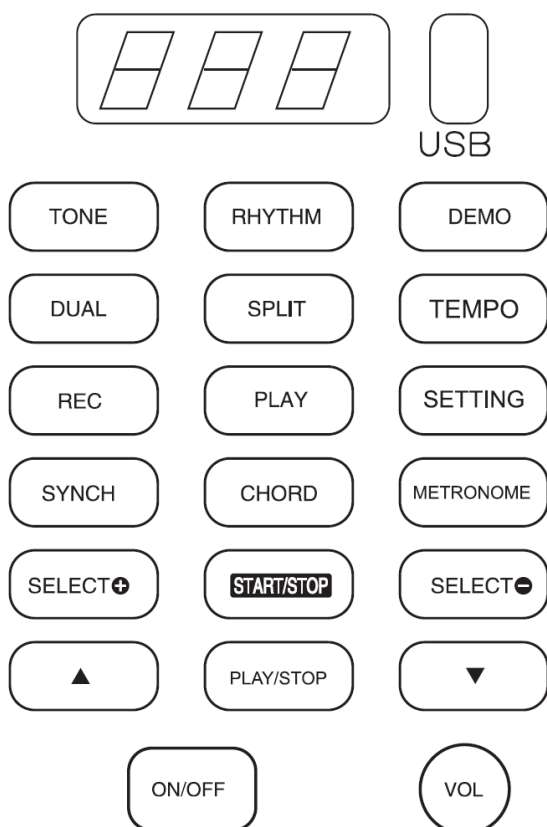  

## Performance Preparation

- The device requires connection to a power source using a dedicated power cable. Observe caution when connecting the device to a power source.
- The dedicated power adapter shall be used. Connect the output end of the adaptor to the power port, and then the other end to the power socket. The input voltage of the adaptor shall be compatible with the power supply voltage.
- Audio In/Out: firstly, turn off the piano and the external audio devices, secondly, connect one end of the audio cable to the Audio In/Out port, and then connect the other end to the audio input port of the audio devices.
- Headphones connection: When connecting a headphone to the Audio In/Out port, the speaker will be disabled automatically. This way, you can perform without disturbing others. Note! When using a headphones, do not turn up and keep the volume to the maximum for a long time, which may cause hearing loss.

## Basic Performance

- Press ON/OFF button, the LED display will turn on and show the value "001"; then you may play the keyboard as required.
- Volume control - use the VOL knob to decrease or increase the volume.
- Tone selection - press the TONE button to enter the tone selection mode; you can select between different tones using the SELECT+ and SELECT- buttons; the default tone is PIANO.
- Rhythm selection - press the RHYTHM button to enter the rhythm selection mode; you can select between rhythms using the SELECT+ and SELECT- buttons; press the START/STOP button to start playing or stop selected rhythm.
- Tempo adjustment - press TEMPO to set the tempo of the rhythm; the tempo can be increased with SELECT+ or decreased with SELECT-; tempo range - 20-280.
- Chord accompaniment - select a rhythm; in rhythm selection mode, press the CHORD button to enter the chord accompaniment mode; play the accompaniment using keys 1-34 from the left; press the CHORD button again to exit the chord accompaniment mode.
- Synchronous start - select the rhythm, tempo and chord accompaniment; in the rhythm selection mode, press the SYNCH button to enter the synchronous start mode; play the chords (using keys 1-34 from the left), and the accompaniment will start playing automatically; press the START/STOP button to turn off the synchro start.
- SETTING - press once to increase/decrease the sensitivity of the keys using the SELECT+ and SELECT- buttons; press twice to increase/decrease (SELECT+/SELECT-) the volume of the rhythm (0-32); press three times to increase/decrease (SELECT+/SELECT-) the pitch shifts (-12 - 12).
- Metronome - press the METRONOME button to enable the metronome function - the LED indicator will light up; press the METRONOME button again to disable the metronome function.
- Playing demonstration songs - press the DEMO button, the system will enter the demo track playing mode; use the SELECT+ and SELECT- buttons to select between each DEMO track; press the DEMO button again to exit the demo track playing mode.
- Recording - press REC button to enter recording mode; press PLAY button to play the recording.
- SPLIT - select a tone; press the SPLIT button in the tone selection mode - use the SELECT+/SELECT- buttons to select another tone - the keyboard has been divided into 2 selected tones; press the SPLIT button again to disable the SPLIT feature.

- DUAL - select a tone; press the DUAL button in the tone selection mode - use the SELECT+/SELECT- buttons to select another tone - the keys now have dual tone; press the DUAL button again to disable the DUAL feature.
- MP3 file playback - place a USB device with an MP3 file in the USB socket; start playback with the PLAY/STOP button; you can select between MP3 files on the device with the up and down arrow buttons.

### Tone Table

Number	Instrument		
PIANO		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTR1 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	BASS	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETL5 BASS
GLOCK		037	SLAP BASS 1
009	CELESTA	038	SLAP BASS 2
010	GLOCKENSPIEL 1	039	SYN BASS 1
011	MUSIC BOX 1	040	SYN BASS 2
012	VIBRAPHONE 1	STRING	
013	MARIMBA 1	041	VIOLIN 1
014	XYLOPHONE 1	042	VIOLA 1
015	TUBULR BELLS 1	043	CELLO 1
016	DULCIMER 1	044	CONTRABASS 1
ORGAN		045	STR TREM 1
017	HAND ORGAN 1	046	STR PIZZ
018	PERCHY ORGAN 1	047	HARP 1
019	ROCK ORGAN	048	TIMPANI 1
020	CHURCH ORGAN 1	CONCERT	
021	REED ORGAN 1	049	STRINGS 1
022	ACCORDN 1	050	STRINGS 2
023	HARMONICA 1	051	STR SYN 1
024	TANGO ACCORDN 1	052	STR SYN 2
GUITAR		053	CHOIR AAHS 1
025	GUITAR NYLON 1	054	VOICE OOHS 1
026	GUITAR STEEL 1	055	VOICE SYN
027	GUITAR JAZZ 1	056	ORCH HIT 1
028	GUITAR CLEAN 1	BRASS	
		057	TRUMPT 1
		058	TROMBONE 1
		059	TUBA 1
		060	MUTE TPT 1
		061	FR HORN 1
		062	BRASS SECT 1
		063	BRASS SYN 1
		064	BRASS SYN 2
		PIPE	

## Instrukcja obsługi / User Manual

065	SAX SOPRANO	101	BRIGHT FX	138	GRAND PIANO DARK 1	178	HONKY-TONK /W 3
066	SAX ALTO 1	102	GOBLIN FX	139	GRAND PIANO DARK 2	179	HONKY-TONK /W 4
067	SAX TENOR 1	103	ECHO FX	140	VELOCITY CROSS PIANO 1	180	SHORT HONKY-TONK 1
068	SAX BTONE 1	104	SCI-FI FX	141	VELOCITY CROSS PIANO 2	181	SHORT HONKY-TONK 2
069	OBOE 1	FOLK SOUND		142	SOFT GRAND PIANO 1	182	E PIANO 1/W
070	ENG HORN 1	105	SITAR 1	143	SOFT GRAND PIANO 2	183	E PIANO 2/W
071	BASSON 1	106	BANJO 1	144	SOFT GRAND PIANO 3	184	E PIANO 3/W
072	CLARINET 1	107	SHAMISEN 1	145	STEREO BRIGHT PIANO	185	E PIANO 4/W
WOODPIPE		108	KOTO 1	146	BRIGHT PIANO 2	186	E PIANO 5/W
073	PICCOLO 1	109	KALIMBA	147	BRIGHT PIANO 3	187	E PIANO 6/W
074	FLUTE 1	110	BAGPIPE	148	BRIGHT PIANO 4	188	SOFT E.PIANO 1
075	RECORDER 1	111	FIDDLE	149	BRIGHT PIANO 5	189	SOFT E.PIANO 2
076	PAN FLUTE	112	SHANAI	150	BRIGHT PIANO /W 1	190	SOFT E.PIANO 3
077	BOTTLE BLOWN	PERCUSSION		151	BRIGHT PIANO /W 2	191	SOFT E.PIANO 4
078	SHAKHACHI	113	TINKLE BELL	152	SOFT BRIGHT PIANO 1	192	HARD E.PIANO 1
079	WHISTLE 1	114	AGOGO	153	SOFT BRIGHT PIANO 2	193	HARD E.PIANO 2
080	OCARINA	115	STEEL DRM	154	DEEP BRIGHT PIANO	194	SHORT E.PIANO 1
SYNTH PIPE		116	WOODBLK	155	VELOCITY CROSS BRIGHT PIANO	195	SHORT E.PIANO 2
081	SQR WAVE	117	TAIKO DRM	156	DETUNED E.PIANO 1	196	BRIGHTNESS E.P 1
082	SAW TOOTH	118	MLDY TOM	157	DETUNED E.PIANO 2	197	BRIGHTNESS E.P 2
083	CALLIOPE	119	SYNTH DRM	158	DETUNED E.PIANO 3	198	HARPSICHORD 1
084	CHIFF	120	REVRS CYM	159	DETUNED E.PIANO 3	199	HARPSICHORD 2
085	CHARANG	EFFECT		160	BRIGHT E.PIANO 1	200	SOFT HARPSICHORD 1
086	VOICE	121	GTR NOISE	161	BRIGHT E.PIANO 2	201	SOFT HARPSICHORD 2
087	FIFTHS	122	BREATH 1	162	BRIGHT E.PIANO 3	202	BRIGHT HARPSICHORD 1
088	BASS LEAD	123	SEASHORE	163	BRIGHT E.PIANO 4	203	BRIGHT HARPSICHORD 2
SYNTH VOICE		124	BIRD TWEET 1	164	E.PIANO /W 1	204	DARK HARPSICHORD 1
089	NEW AGE	125	TELEPHONE	165	E.PIANO /W 2	205	DARK HARPSICHORD 2
090	WARM PAD	126	HELICOPTER	166	E.PIANO /W 3	206	HARD HARPSICHORD 1
091	POLY SYNTH	127	APPLAUSE	167	E.PIANO /W 4	207	HARD HARPSICHORD 2
092	CHOIR PAD 1	128	GUNSHOT 1	168	DARK E.PIANO 1	208	CLAVI CHORD 2
093	BOW GLASS 1	129	GRAND PIANO2	169	DARK E.PIANO 2	209	CLAVI CHORD 3
094	METAL PAD 1	130	GRAND PIANO3	170	DARK E.PIANO 3	210	CLAVI /W
095	HALO PAD 1	131	GRAND PIANO4	171	DARK E.PIANO 4	211	BRIGHT CLAVI
096	SWEEP	132	GRAND PIANO /W 1	172	SOFT HONKY-TONK 1	212	DARK CLAVI
SYNTH EFFECT		133	GRAND PIANO /W 2	173	SOFT HONKY-TONK 2	213	PERCHY CLAVI
097	RAIN FX	134	GRAND PIANO /W 3	174	VELOCITY CROSS HONKY-TONK	214	BRIGHT CELESTA
098	SNDTRK FX	135	GRAND PIANO /W 4	175	DARK HONKY-TONK 1	215	SHORT CELESTA
099	CRYSTAL FX	136	BRIGHTNESS PIANO 1	176	DARK HONKY-TONK 2	216	PERCHY CELESTA
100	ATMOSPH FX	137	BRIGHTNESS PIANO 2	177	HONKY-TONK /W 1	217	DUET CELESTA
			BRIGHTNESS PIANO 3		HONKY-TONK /W 2		

218	CELESTA HARMONIC	259	SANTUR	300	SLOW REED ORGAN	341	FAST TANGO ACCORDN
219	GLOCKENSPIEL 2	260	HAND ORGAN 2	301	SOFT REED ORGAN	342	GUITAR NYLON 2
220	GLOCKENSPIEL 3	261	HAND ORGAN 3	302	HARD REED ORGAN	343	GUITAR NYLON 3
221	GLOCKENSPIEL 4	262	SOFT HAND ORGAN	303	JAZZ REED ORGAN	344	GUITAR NYLON 4
222	BRIGHT GLOCKENSPIEL	263	BRIGHT SOFT HAMND ORGAN	304	ACCORDN 2	345	GUITAR NYLON 5
223	DARK GLOCKENSPIEL	264	HAMND ORGAN DETUNED	305	ACCORDN 3	346	GUITAR NYLON 6
224	GLOCKENSPIEL /W 1	265	PERCHY ORGAN 2	306	ACCORDN 4	347	GUITAR NYLON 7
225	GLOCKENSPIEL /W 2	266	PERCHY ORGAN 3	307	ACCORDN 5	348	GUITAR NYLON RELEASE
226	MUSIC BOX 2	267	BRIGHT PERCHY ORGAN	308	DISTR ACCORDN	349	VELOCITY CROSS RUITAR
227	MUSIC BOX 3	268	DISTR PERCHY ORGAN	309	BRIGHT ACCORDN	350	DETUNED GUITAR NYLON
228	MUSIC BOX 4	269	ROTART ORGAN	310	ACCORDN HARMONIC	351	BIRGHT GUITAR NYLON
229	TOY MUSIC BOX	270	SLOW ROTART ORGAN	311	ROCK ACCORDN	352	DARK GUITAR NYLON
230	BRIGHT MUSIC BOX	271	1960 ROCK ORGAN	312	SWEET ACCORDN	353	GUITAR NYLON HARMONIC 1
231	DARK MUSIC BOX	272	1990 ROCK ORGAN	313	DARK ACCORDN	354	GUITAR NYLON HARMONIC 2
232	VIBRAPHONE 2	273	BRIGHT ROCK ORGAN	314	FAST ACCORDN	355	GUITAR NYLON /W 1
233	VIBRAPHONE 3	274	DARK ROCK ORGAN	315	SLOW ACCORDN	356	GUITAR NYLON /W 2
234	SYN VIBRAPHONE	275	SOFT ROCK ORGAN	316	HARMONICA 2	357	GUITAR NYLON FAST
235	HARD VIBRAPHONE	276	CHURCH ORGAN 2	317	HARMONICA 3	358	GUITAR NYLON SLOW
236	VIBRAPHONE /W 1	277	CHURCH ORGAN 3	318	HARMONICA 4	359	HARD GUITAR NYLON
237	VIBRAPHONE /W 2	278	CHURCH ORGAN 4	319	HARMONICA 5	360	SOFT GUITAR NYLON
238	VIBRAPHONE SOFT	279	CHURCH ORGAN 5	320	SWEET HARMONICA	361	GUITAR STEEL 2
239	MARIMBA 2	280	CHURCH ORGAN 6	321	DISTR HARMONICA	362	GUITAR STEEL 3
240	MARIMBA /W	281	CHURCH ORGAN /W 1	322	SLOW HARMONICA	363	GUITAR STEEL 4
241	DARK MARIMBA	282	CHURCH ORGAN /W 2	323	FAST HARMONICA	364	VELOCITY CROSS GUITAR STEEL
242	BRIGHT MARIMBA	283	BIRGHT CHURCH ORGAN 1	324	BRIGHT HARMONICA	365	DARK GUITAR STEEL
243	DUTED MARIMBA	284	BIRGHT CHURCH ORGAN 2	325	DARK HARMONICA	366	BRIGHT GUITAR STEEL
244	DARK MARIMBA	285	DARK CHURCH ORGAN 1	326	SOFT HARMONICA	367	GUITAR STEEL HARMONIC 1
245	XYLOPHONE 2	286	DARK CHURCH ORGAN 2	327	HARMONICA /W 1	368	GUITAR STEEL HARMONIC 2
246	XYLOPHONE 3	287	SOUL CHURCH ORGAN	328	HARMONICA /W 2	369	HARD GUITAR STEEL
247	VELOCITY CROSS XYLOPHONE	288	CHURCH ORGAN HARMONIC	329	HARMONICA MUTED	370	SOFT GUITAR STEEL
248	DISTR XYLOPHONE	289	CHURCH ORGAN SLOW	330	TANGO ACCORDN 2	371	FAST GUITAR STEEL
249	BRIGHT XYLOPHONE	290	CHURCH ORGAN FAST	331	TANGO ACCORDN 3	372	SLOW GUITAR STEEL
250	FAST XYLOPHONE	291	SOFT CHURCH ORGAN	332	1960 TANGO ACCORDN	373	VELOCITY GUITAR STEEL
251	SLOW XYLOPHONE	292	REED ORGAN 2	333	1980 TANGO ACCORDN	374	GUITAR STEEL REALSE
252	TUBULR BELLS 2	293	REED ORGAN 3	334	BRIGHT TANGO ACCORDN	375	GUITAR STEEL /W 1
253	TUBULR BELLS 3	294	REED ORGAN 4	335	DARK TANGO ACCORDN	376	GUITAR STEEL /W 2
254	TUBULR BELLS 4	295	REED ORGAN 5	336	SOFT TANGO ACCORDN	377	GUITAR JAZZ 2
255	SYN TUBULR BELLS	296	BRIGHT REED ORGAN	337	HARD TANGO ACCORDN	378	GUITAR JAZZ 3
256	TUBULR BELLS DARK	297	DARK REED ORGAN	338	TANGO ACCORDN /W 1	379	GUITAR JAZZ 4
257	DULCIMER 2	298	REED ORGAN /W	339	TANGO ACCORDN /W 2	380	GUITAR JAZZ 5
258	DULCIMER 3	299	FAST REED ORGAN	340	SLOW TANGO ACCORDN		

## Instrukcja obsługi / User Manual

381	DARK GUITAR JAZZ
382	BRIGHT GUITAR JAZZ
383	SOFT GUITAR JAZZ
384	HARD GUITAR JAZZ
385	GUITAR JAZZ VELOCITY
386	GUITAR JAZZ RELEASE
387	GUITAR JAZZ HARMONIC
388	SOFT GUITAR JAZZ
389	GUITAR JAZZ /W 1
390	GUITAR JAZZ /W 2
391	GUITAR CLEAN 2
392	GUITAR CLEAN 3
393	GUITAR CLEAN 4
394	GUITAR CLEAN 5
395	VELOCITY CLEAN GUITAR
396	DUTED CLEAN GUITAR
397	BRIGHT CLEAN GUITAR
398	CLEAN GUITAR HARMONIC
399	CLEAN GUITAR /W 1
400	CLEAN GUITAR /W 2
401	SOFT CLEAN GUITAR
402	FAST CLEAN GUITAR
403	SLOW CLEAN GUITAR
404	CLEAN GUITAR RELEASE
405	GUITAR MUTED 2
406	GUITAR MUTED 3
407	GUITAR MUTED 4
408	GUITAR MUTED 5
409	BRIGHT GUITAR MUTED
410	DARK GUITAR MUTED
411	GUITAR MUTED HARMONIC
412	GUITAR MUTED RELEASE
413	GUITAR MUTED CHORUS
414	GUITAR MUTED HARD
415	GUITAR MUTED SOFT
416	GUITAR MUTED /W 1
417	GUITAR MUTED /W 2
418	GUITAR OVRDRV 2
419	GUITAR OVRDRV 3
420	GUITAR OVRDRV 4
421	FUNK GUITAR

422	GUITAR OVRDRV HARMONIC
423	BRIGHT GUITAR OVRDRV
424	DARK GUITAR OVRDRV
425	GUITAR OVRDRV RELEASE
426	HARD GUITAR OVRDRV
427	SOFT GUITAR OVRDRV
428	GUITAR OVRDRV /W 1
429	GUITAR OVRDRV /W 2
430	GUITAR DISTRT 2
431	GUITAR DISTRT 3
432	GUITAR DISTRT 4
433	GUITAR DISTRT 5
434	GUITAR DISTRT 6
435	GUITAR DISTRT HARMONIC
436	GUITAR DISTRT RELEASE
437	BRIGHT GUITAR DISTRT
438	DARK GUITAR DISTRT
439	SOFT GUITAR DISTRT
440	HARMONIC GUITAR DISTRT
441	HARD GUITAR DISTRT
442	GUITAR DISTRT /W 1
443	GUITAR DISTRT /W 2
444	SOFT GUITAR HRMNX
445	HARD GUITAR HRMNX
446	BRIGHT GUITAR HRMNX
447	DARK GUITAR HRMNX
448	FAST GUITAR HRMNX
449	SLOW GUITAR HRMNX
450	GUITAR HRMNX RELEASE
451	GUITAR HRMNX /W 1
452	GUITAR HRMNX /W 2
453	ACOUSTIC BASS 2
454	ACOUSTIC BASS 3
455	ACOUSTIC BASS 4
456	ACOUSTIC BASS 5
457	DETUNED BASS
458	BASS AND FILTER
459	SOFT BASS
460	BASS & RELEASE
461	FAST BASS
462	SLOW BASS

463	BRIGHT BASS
464	DARK BASS
465	BASS /W 1
466	BASS /W 2
467	FINGER BASS 2
468	FINGER BASS HARMONIC
469	SOFT FINGER BASS
470	FINGER BASS RELEASE
471	ELECT BASS 2
472	ELECT BASS 3
473	ELECT BASS 4
474	ELECT BASS 5
475	ELECT BASS 6
476	ELECT BASS RELEASE
477	ELECT BASS HARMONIC
478	SOFT ELECT BASS
479	FAST ELECT BASS
480	PICK BASS
481	BRIGHT ELECT BASS 1
482	BRIGHT ELECT BASS 2
483	DARK ELECT BASS 1
484	DARK ELECT BASS 2
485	SOFT FRETLES BASS
486	FAST FRETLES BASS
487	FRETLES BASS RELEASE
488	FRETLES BASS HARMONIC
489	FRETLESS BASS
490	FAST FRETLESS BASS
491	SLAP BASS 3
492	SLAP BASS 4
493	SLAP BASS 5
494	SLAP BASS 6
495	BRIGHT SLAP BASS 1
496	BRIGHT SLAP BASS 2
497	DARK SLAP BASS 1
498	DARK SLAP BASS 2
499	SOFT SLAP BASS 1
500	SOFT SLAP BASS 2
501	FAST SLAP BASS 1
502	FAST SLAP BASS 2
503	SLOW SLAP BASS 1

504	SLOW SLAP BASS 2
505	SLAP BASS HARMONIC 1
506	SLAP BASS HARMONIC 2
507	SLAP BASS RELEASE 1
508	SLAP BASS RELEASE 2
509	SYN BASS 3
510	SYN BASS 4
511	SYN BASS 5
512	SYN BASS 6
513	SYN BASS HARMONIC 1
514	SYN BASS HARMONIC 2
515	FAST SYN BASS 1
516	FAST SYN BASS 2
517	SOFT SYN BASS 1
518	SOFT SYN BASS 2
519	SLOW SYN BASS 1
520	SLOW SYN BASS 2
521	FAST SYN BASS 1
522	FAST SYN BASS 2
523	BRIGHT SYN BASS 1
524	BRIGHT SYN BASS 2
525	DARK SYN BASS 1
526	DARK SYN BASS 2
527	SYN BASS RELEASE 1
528	SYN BASS RELEASE 2
529	VIOLIN 2
530	VIOLIN 3
531	VIOLIN 4
532	VIOLIN 5
533	VIOLIN ENSEMBLE 1
534	VIOLIN ENSEMBLE 2
535	SLOW VIOLIN
536	FAST VOLIN
537	VOLIN /W
538	BRIGHT VOLIN
539	DARK VOLIN
540	SOFT VOLIN
541	VIOLA 2
542	VIOLA 3
543	VIOLA 4
544	DARK VIOLA

545	HARD VIOLA
546	VIOLA ENSEMBLE
547	SLOW VIOLA
548	VIOLA VIBRATO
549	VIOLA /W
550	BRIGHT VIOLA
551	FAST VIOLA
552	SOFT VIOLA
553	CELLO 2
554	CELLO 3
555	CELLO 4
556	DARK CELLO
557	HARD CELLO
558	CELLO ENSEMBLE 1
559	CELLO ENSEMBLE 2
560	SLOW CELLO
561	FAST CELLO
562	CELLO /W
563	BRIGHT CELLO
564	SOFT CELLO
565	CONTRABASS 2
566	CONTRABASS 3
567	CONTRABASS 4
568	CONTRA BASS ENSEMBLE 1
569	CONTRA BASS ENSEMBLE 2
570	CONTRA BASS ENSEMBLE 3
571	CONTRA BASS ENSEMBLE 4
572	DARK CONTRA BASS
573	CONTRA BASS VIBRATO
574	STR. TREM 2
575	STR. TREM 3
576	STR. TREM 4
577	STR. TREM SLOW
578	STR. TREM FAST
579	STR. TREM /W
580	BRIGHT STR. TREM
581	DARK STR. TREM
582	SOFT STR. TREM
583	BRIGHT STR. PIZZ
584	DARK STR. PIZZ
585	STR. PIZZ HARMONIC

586	STR. PIZZ /W
587	FAST STR. PIZZ
588	SLOW STR. PIZZ
589	SOFT STR. PIZZ
590	METAL STR. PIZZ
591	HARP 2
592	HARP 3
593	HARP 4
594	HARP /W 1
595	HARP /W 2
596	BRIGHT HARP 1
597	BRIGHT HARP 2
598	DARK HARP 1
599	DARK HARP 2
600	HARP HARMONIC
601	SOFT HARMONIC
602	TIMPANI 2
603	TIMPANI 3
604	TIMPANI 4
605	TIMPANI /W 1
606	TIMPANI /W 2
607	BRIGHT TIMPANI
608	DARK TIMPANI
609	STRINGS 3
610	STRINGS 4
611	STRINGS 5
612	STRINGS 6
613	SLOW STRINGS 1
614	SLOW STRINGS 2
615	FAST STRINGS 1
616	FAST STRINGS 2
617	DARK STINGS 1
618	DARK STINGS 2
619	BRIGHT STINGS 1
620	BRIGHT STINGS 2
621	RESONANT STRINGS
622	SFORZATO STRINGS
623	STR. SYN 3
624	STR. SYN 4
625	STR. SYN 5
626	STR. SYN 6

627	1960 STRINGS
628	1970 STRINGS
629	SLOW STRINGS 1
630	SLOW STRINGS 2
631	FAST STRINGS 1
632	FAST STRINGS 2
633	LEGATO STRINGS 1
634	LEGATO STRINGS 2
635	BRIGHT LEGATO STRINGS
636	DARK LEGATO STRINGS
637	CHOIR AAHS 2
638	CHOIR AAHS 3
639	CHOIR AAHS 4
640	CHOIR AAHS 5
641	WARM CHOIR AAHS
642	CHOIR AAHS /W 1
643	CHOIR AAHS /W 2
644	CHOIR AAHS HARMONIC
645	BRIGHT CHOIR AAHS
646	DARK CHOIR AAHS
647	FAST CHOIR AAHS
648	SLOW CHOIR AAHS
649	VOICE OOHs 2
650	WARM VOICE OOHs 1
651	WARM VOICE OOHs 2
652	VOICE OOHs /W
653	BRIGHT VOICE OOHs
654	DARK VOICE OOHs
655	FAST VOICE OOHs
656	SLOW VOICE OOHs
657	VOICE SYN HARMONIC
658	SLOW VOICE SYN
659	FAST VOICE SYN
660	BRIGHT VOICE SYN
661	ELE. VOICE SYN
662	ORCH. HIT 2
663	ORCH. HIT /W
664	BRIGHT ORCH. HIT
665	ORCH. HIT HARMONIC
666	SLOW ORCH. HIT
667	FAST ORCH. HIT

668	DARK ORCH. HIT
669	SOFT ORCH. HIT
670	TRUMPT 2
671	TRUMPT 3
672	TRUMPT 4
673	TRUMPT 5
674	TRUMPT 6
675	TRUMPT 7
676	DARK TRUMPT
677	BRIGHT TRUMPT
678	SWEET TRUMPT
679	MUTE TRUMPT
680	TRUMPT /W 1
681	TRUMPT /W 2
682	TROMBONE 2
683	TROMBONE 3
684	TROMBONE 4
685	TROMBONE 5
686	TROMBONE 6
687	TROMBONE 7
688	DARK TROMBONE
689	BRIGHT TROMBONE
690	SLOW BRIGHT TROMBONE
691	MUTE TROMBONE
692	TROMBONE /W
693	TUBA 2
694	TUBA 3
695	TUBA 4
696	TUBA 5
697	TUBA 6
698	SOFT TUBA
699	SLOW TUBA
700	TUBA SOLO
701	TUBA /W
702	BRIGHT TUBA
703	DARK TUBA
704	MUTE TUBA
705	MUTE TPT 2
706	DARK MUTE TPT
707	BRIGHT MUTE TPT
708	MUTE TPT /W

## Instrukcja obsługi / User Manual

709	SWEET MUTE TPT	750	SAX ALTO 6	791	ANALOG ENG HORN	832	PAN FLUTE FAST
710	FR HORN 2	751	SAX ALTO BRIGHT	792	WOODWINDS	833	PAN FLUTE HARMONIC
711	FR HORN 3	752	SAX ALTO MUTE	793	BASSON 2	834	PAN FLUTE DUTE
712	FR HORN 4	753	SAX ALTO /W	794	BASSON 3	835	PAN FLUTE/W
713	FR HORN 5	754	SOFT SAX ALTO	795	BASSON 4	836	BRIGHT PAN FLUTE
714	FR HORN 6	755	SLOW SAX ALTO	796	BASSON 5	837	BOTTLE BLOWN DARK
715	SWEET FR HORN	756	SWEET SAX ALTO	797	BRIGHT BASSON	838	BOTTLE BLOWN BRIGHTNESS
716	SLOW FR HORN	757	SAX TENOR 2	798	DARK BASSON	839	BOTTLE BLOWN WARM
717	FAST FR HORN	758	SAX TENOR 3	799	BASSON WELL	840	SOFT BOTTLE BLOWN
718	BRIGHT FR HORN	759	SAX TENOR 4	800	BRIGHT BASSON	841	SHAKHACHI HARMONIC
719	DARK FR HORN	760	SAX TENOR 5	801	MUTE BASSON	842	SHAKHACHI BRIGHT
720	BRASS SECT 2	761	SAX TENOR 6	802	SOFT BASSON	843	SHAKHACHI DARK
721	BRASS SECT 3	762	SWEET SAX TENOR	803	CLARINET 2	844	SLOW SHAKHACHI
722	BRASS SECT 4	763	DARK SAX TENOR	804	CLARINET 3	845	FAST SHAKHACHI
723	BRASS SECT 5	764	SUPER SAX TENOR	805	CLARINET 4	846	WHISTLE 2
724	BRASS SECT 6	765	SAX TENOR /W 1	806	CLARINET 5	847	WHISTLE 3
725	DARK BRASS SECT	766	SAX TENOR /W 2	807	CLARINET HARMONIC	848	WHISTLE 4
726	BRASS SECT WELL	767	SAX TENOR HARMONIC	808	DARK CLARINET	849	WHISTLE 5
727	BRIGHT BRASS SECT	768	SAX TENOR BRIGHT	809	BRIGHT CLARINET	850	SQUARE
728	FAST BRASS SECT	769	SAX BTONE 2	810	CLARINET WELL	851	SINE LEAD
729	SLOW BRASS SECT	770	SAX BTONE 3	811	CLARINET MUTE	852	SINE SLOW
730	BRASS SECT /W	771	SAX BTONE 4	812	CLARINET SOFT	853	SINE FAST
731	BRASS SYN 3	772	SAX BTONE 5	813	PICCOLO 2	854	SAW SLOW
732	BRASS SYN 4	773	SAX BTONE WELL	814	PICCOLO 3	855	SAW FAST
733	BRASS SYN 5	774	MUTE SAX BTONE	815	PICCOLO 4	856	SAW HARMONIC
734	BRASS SYN 6	775	SWEET SAX BTONE	816	PICCOLO DARK	857	VOICE LEAD
735	BRASS SYN 7	776	DARK SAX BTONE	817	PICCOLO HARMONIC	858	VOICE SLOW
736	SOFT BRASS SYN	777	OBOE 2	818	BRIGHT PICCOLO	859	VOICE FAST
737	SFORZATO BRASS SYN	778	OBOE 3	819	SOFT PICCOLO	860	SOFT STH LEAD
738	DARK BRASS SYN	779	OBOE 4	820	FLUTE 2	861	STH LEAD
739	BRIGHT BRASS SYN	780	OBOE 5	821	FLUTE 3	862	MASSINESS
740	WELL BRASS SYN	781	SWEET OBOE	822	FLUTE 4	863	BASS & LEAD
741	MUTE BRASS SYN	782	OBOE WELL	823	FLUTE HARMONIC	864	NEW AGE SLOW
742	SWEET BRASS SYN	783	BRIGHT OBOE	824	DARK FLUTE	865	NEW AGE FAST
743	HOMONIC BRASS SYN	784	DARK OBOE	825	BRIGHT FLUTE	866	NEW AGE HARMONIC
744	SLOW BRASS SYN	785	MUTE OBOE	826	FLUTE MUTE	867	WARM PAD FAST
745	FAST BRASS SYN	786	ENG HORN 2	827	SOFT FLUTE	868	WARM PAD SLOW
746	SAX ALTO 2	787	ENG HORN 3	828	RECORDER 2	869	WARM PAD HARMONIC
747	SAX ALTO 3	788	ENG HORN 4	829	RECORDER 3	870	PWM PAD
748	SAX ALTO 4	789	ENG HORN 5	830	RECORDER 4	871	POLY SYNTH SLOW
749	SAX ALTO 5	790	ENG HORN 6	831	PAN FLUTE SLOW	872	POLY SYNTH FAST

873	CLICK PAD
874	ANALOG PAD
875	POLY PAD
876	CHOIR PAD 2
877	CHOID PAD HARMONIC
878	BOW GLASS 2
879	BOW GLASS HARMONIC
880	METAL PAD 2
881	PAN PAD 1
882	PAN PAD 2
883	HALO PAD 2
884	HALO PAD 3
885	DISPERSE
886	RISING
887	CONGREGATE
888	PROGENITOR
889	PRELUDE
890	WARM AIR
891	SMOG
892	PAN ECHO
893	LARGE PAN
894	ECHO SLOW
895	FANTASYLAND
896	SITAR 2
897	SITAR 3
898	SITAR 4
899	DISTRIT SITAR
900	BRIGHT SITAR

## Rhythm Table

	Number	Instrument
<b>8 BEAT</b>	001	8 Beat 1A
	002	8 Beat 2A
	003	8 Beat 3A
	004	8 Beat 4A
	005	8 Beat BeatA
	006	8 Beat Pop 1A
	007	8 Beat Pop 2A
<b>BALLAD</b>	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
	011	Organ BalladA
	012	Bluse BalladA
	013	Epic BalladA
	014	Rock BalladA
	015	Slow BalladA
	016	Pop Ballad
	017	Electro Pop Ballad
	018	Polk BalladA
	<b>16 BEAT</b>	019
020		16 Beat 2A
021		16 Beat 3A
022		16 Beat 4A
023		16 Beat FunkA
024		16 Beat Pop A
025		16 Beat BalladA
<b>LATIN</b>	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
	030	Cha ChaA
	031	RumbaA
	032	TEX TEXA
<b>COUNTRY</b>	033	CountryA
	034	Country RockA
	035	Country ShuffleA
	036	Country SwingA
	037	Country BalladA
	038	Country WaltzA
	039	50's RockA
<b>ROCK R&amp;B</b>	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
	044	Slow RockA

	045	Hard RockA		092	TarantellaA	
	046	Rock & Roll 1A		093	Slow WaltzA	
	047	Rock & Roll 2A		094	Ober WaltzA	
<b>RHYTHM&amp;BLUES</b>	048	Chicago BluesA		095		
	049	Fast GospelA		096		
	050	Groove SoulA		097		
	051	RapA		098		
	052	GospelSIA		099		
	053	BluesA		100		
	054	Slow BluesA		<b>8 BEAT</b>	101	8 Beat 1B
	055	FoxtrotA			102	8 Beat 2B
	<b>Disco</b>	056		Disco TropicA		103
057		Disco BandaA	104	8 Beat 4B		
	058	Two StepA		105	8 Beat BeatB	
	059	Polk PopA		106	8 Beat Pop 1B	
	060	Waltz 1A		107	8 Beat Pop 2B	
	061	Waltz Pop 1A		<b>BALLAD</b>	108	Ballad 1B
	062	Waltz Pop 2A			109	Ballad 2B
<b>WORLD MUSIC</b>	063	BaiA		110	Guitar BalladB	
	064	Twist 1A		111	Organ BalladB	
	065	Twist 2A		112	Bluse BalladB	
	066	Miami PopA		113	Epic BalladB	
	067	NotownA		114	Rock BalladB	
	068	ReggaeA		115	Slow BalladB	
	069	Swing ReggaeA		116	Pop BalladB	
	070	MarboA		117	Electro Pop BalladB	
	071	BeguineA		118	Polk BalladB	
	072	MusetteA		<b>16 BEAT</b>	119	16 Beat 1B
	073	HouseA			120	16 Beat 2B
	<b>DANCE</b>	074		Slow FoxA		121
075		Vienna WaltzA	122	16 Beat 4B		
	076	SalsaA		123	16 Beat FunkB	
	077	DiscoA		124	16 Beat Pop B	
	078	Hip Hop PopA		125	16 Beat BalladB	
	079	Analog PopA		<b>LATIN</b>	126	Bossa Nova 1B
	080	Club DanceA			127	Guitar BossaB
<b>JAZZ&amp;SWING</b>	081	BoogieA		128	Pop BossaB	
	082	Funky PopA		129	TangoB	
	083	Jazz RockA		130	Cha ChaB	
	084	Swing 1A		131	RumbaB	
	085	DixielandA		132	TEX TEXB	
	086	Jazz SambaA		<b>COUNTRY</b>	133	CountryB
	087	MarchA			134	Country RockB
<b>TRADITIONAL</b>	088	BS. MarchA		135	Country ShuffleB	
	089	Sarbo A		136	Country SwingB	
	090	PolkaA		137	Country BalladB	
	091	Polka OberA		138	Country WaltzB	

<b>ROCK R&amp;B</b>	139	50's RockE	186	Jazz Sambal
	140	Heavy MetalE	187	MarchE
	141	Rock 1E	188	U.S. MarchE
	142	Rock 2E	189	Sambal
	143	Soft RockE	190	PolkaE
	144	Slow RockE	191	Polka OberE
	145	Hard RockE	192	TarantellaE
	146	Rock & Roll 1E	193	Slow WaltzE
	147	Rock & Roll 2E	194	Over WaltzE
<b>RHYTHM&amp;BLUES</b>	148	Chicago BluesE	195	
	149	Fast GospelE	196	
	150	Groove SoulE	197	
	151	RapE	198	
	152	GospelSIE	199	
	153	BluesE	200	
	154	Slow BluesE	201	8 Beat 1E
	155	FoxtrotE	202	8 Beat 2E
<b>Disco</b>	156	Disco TropicE	203	8 Beat 3E
	157	Disco HandsE	204	8 Beat 4E
	158	Two StepE	205	8 Beat HeatE
	159	Polk PopE	206	8 Beat Pop 1E
	160	Waltz 1E	207	8 Beat Pop 2E
	161	Waltz Pop 1E	208	Ballad 1E
	162	Waltz Pop 2E	209	Ballad 2E
<b>WORLD MUSIC</b>	163	RailE	210	Guitar BalladE
	164	Twist 1E	211	Organ BalladE
	165	Twist 2E	212	Bluse BalladE
	166	Miami PopE	213	Epic BalladE
	167	MotownE	214	Rock BalladE
	168	ReggaeE	215	Slow BalladE
	169	Swing ReggaeE	216	Pop BalladE
	170	ManoE	217	Electro Pop BalladE
	171	ReggaeE	218	Polk BalladE
	172	MusetteE	219	16 Beat 1E
<b>DANCE</b>	173	BoogieE	220	16 Beat 2E
	174	Slow FoxE	221	16 Beat 3E
	175	Vienna WaltzE	222	16 Beat 4E
	176	SalsaE	223	16 Beat FunkE
	177	DiscoE	224	16 Beat Pop 1E
	178	Hip Hop PopE	225	16 Beat BalladE
	179	Walking PopE	226	Bossa Nova 1E
	180	Club DanceE	227	Guitar BossaE
<b>JAZZ&amp;SWING</b>	181	BoogieE	228	Pop BossaE
	182	FunkE	229	TangoE
	183	Jazz RockE	230	Cha ChaE
	184	Swing 1E	231	
	185	DixielandE	232	
<b>TRADITIONAL</b>				
<b>8 BEAT</b>				
<b>BALLAD</b>				
<b>16 BEAT</b>				
<b>LATIN</b>				

<b>COUNTRY</b>	233	CountryE	280	Club DanceE
	234	Country RockE	281	BoogieE
	235	Country ShuffleE	282	FunkE
	236	Country SwingE	283	Jazz RockE
	237	Country BalladE	284	Swing 1E
	238	Country WaltzE	285	DixielandE
	239		286	Jazz Sambal
	240		287	MarchE
	241		288	U.S. MarchE
	242		289	Sambal
	243		290	PolkaE
	244		291	Polka OberE
	245		292	TarantellaE
	246		293	Slow WaltzE
	247		294	Over WaltzE
	248		295	Piano BalladE
	249		296	Waltz 2E
	250		297	Guitar WaltzE
	251		298	2/4 Piano 1E
	252		299	3/4 Piano 1E
	253		300	4/4 Piano 1E
	254		301	8 Beat 1E
	255	FoxtrotE	302	8 Beat 2E
<b>Disco</b>	256	Disco TropicE	303	8 Beat 3E
	257	Disco HandsE	304	8 Beat 4E
	258	Two StepE	305	8 Beat BeatE
	259	Polk PopE	306	8 Beat Pop 1E
	260	Waltz 1E	307	8 Beat Pop 2E
	261	Waltz Pop 1E	308	Ballad 1E
	262	Waltz Pop 2E	309	Ballad 2E
<b>WORLD MUSIC</b>	263	RailE	310	Guitar BalladE
	264	Twist 1E	311	Organ BalladE
	265	Twist 2E	312	Bluse BalladE
	266	Miami PopE	313	Epic BalladE
	267	MotownE	314	Rock BalladE
	268	ReggaeE	315	Slow BalladE
	269	Swing ReggaeE	316	Pop BalladE
	270	ManoE	317	Electro Pop BalladE
	271	ReggaeE	318	Polk BalladE
<b>DANCE</b>	272	MusetteE	319	16 Beat 1E
	273	BoogieE	320	16 Beat 2E
	274	Slow FoxE	321	16 Beat 3E
	275	Vienna WaltzE	322	16 Beat 4E
	276	SalsaE	323	16 Beat FunkE
	277	DiscoE	324	16 Beat Pop 1E
	278	Hip Hop PopE	325	16 Beat BalladE
	279	Walking PopE	326	Bossa Nova 1E
<b>JAZZ&amp;SWING</b>				
<b>TRADITIONAL</b>				
<b>PINIST</b>				
<b>8 BEAT</b>				
<b>BALLAD</b>				
<b>16 BEAT</b>				
<b>LATIN</b>				

<b>LATIN</b>	327	Guitar BossaE
	328	Pop BossaE
	329	TangoE
	330	Cha ChaE
	331	RhumbaE
	332	TEX TEXE
<b>COUNTRY</b>	333	CountryE
	334	Country RockE
	335	Country ShuffleE
	336	Country SwingE
	337	Country BalladE
	338	Country WaltzE
<b>ROCK R&amp;B</b>	339	50's RockE
	340	Heavy MetalE
	341	Rock 1E
	342	Rock 2E
	343	Soft RockE
	344	Slow RockE
	345	Hard RockE
	346	Rock & Roll 1E
	347	Rock & Roll 2E
<b>RHYTHM&amp;BLUES</b>	348	Chicago BluesE
	349	Fast GospelE
	350	Groove SoulE
	351	RapE
	352	GospelSIE
	353	BluesE
	354	Slow BluesE
	355	FoxtrotE
<b>Disco</b>	356	Disco TropicE
	357	Disco HandsE
	358	Two StepE
	359	Polk PopE
	360	Waltz 1E
	361	Waltz Pop 1E
	362	Waltz Pop 2E
<b>WORLD MUSIC</b>	363	RailE
	364	Twist 1E
	365	Twist 2E
	366	Miami PopE
	367	MotownE
	368	ReggaeE
	369	Swing ReggaeE
	370	ManoE
	371	ReggaeE
	372	MusetteE
	373	HouseE

<b>DANCE MUSIC</b>	374	Slow FoxE
	375	Vienna WaltzE
	376	SalsaE
	377	DiscoE
	378	Hip Hop PopE
	379	Analog PopE
	380	Club DanceE
<b>JAZZ&amp;SWING</b>	381	BoogieE
	382	FunkE
	383	Jazz RockE
	384	Swing 1E
	385	DixielandE
	386	Jazz SambalE
<b>TRADITIONAL</b>	387	MarchE
	388	U.S. MarchE
	389	SambalE
	390	PolkaE
	391	Polka OberE
	392	TarantellaE
	393	Slow WaltzE
	394	Over WaltzE
<b>PINIST</b>	395	Piano BalladE
	396	Waltz 2E
	397	Guitar WaltzE
	398	2/4 Piano 1E
	399	3/4 Piano 1E
	400	4/4 Piano 1E
<b>8 BEAT</b>	401	8 Beat 1AF
	402	8 Beat 2AF
	403	8 Beat 3AF
	404	8 Beat 4AF
	405	8 Beat HeatAF
	406	8 Beat Pop 1AF
	407	8 Beat Pop 2AF
<b>BALLAD</b>	408	Ballad 1AF
	409	Ballad 2AF
	410	Guitar BalladAF
	411	Organ BalladAF
	412	Bluse BalladAF
	413	Epic BalladAF
	414	Rock BalladAF
	415	Slow BalladAF
	416	Pop BalladAF
	417	Electro Pop BalladAF
	418	Polk BalladAF
<b>16 BEAT</b>	419	16 Beat 1AF
	420	16 Beat 2AF

	421	16 Beat 3AF
	422	16 Beat 4AF
	423	16 Beat FunkAF
	424	16 Beat Pop 1AF
	425	16 Beat BalladAF
<b>LATIN</b>	426	Bossa Nova 1AF
	427	Guitar BossaAF
	428	Pop BossaAF
	429	TangoAF
	430	Cha ChaAF
	431	RhumbaAF
	432	TEX TEXAF
<b>COUNTRY</b>	433	CountryAF
	434	Country RockAF
	435	Country ShuffleAF
	436	Country SwingAF
	437	Country BalladAF
	438	Country WaltzAF
<b>ROCK R&amp;B</b>	439	50's RockAF
	440	Heavy MetalAF
	441	Rock 1AF
	442	Rock 2AF
	443	Soft RockAF
	444	Slow RockAF
	445	Hard RockAF
	446	Rock & Roll 1AF
	447	Rock & Roll 2AF
<b>RHYTHM&amp;BLUES</b>	448	Chicago BluesAF
	449	Fast GospelAF
	450	Groove SoulAF
	451	RapAF
	452	GospelSIAF
	453	BluesAF
	454	Slow BluesAF
	455	FoxtrotAF
<b>Disco</b>	456	Disco TropicAF
	457	Disco HandsAF
	458	Two StepAF
	459	Polk PopAF
	460	Waltz 1AF
	461	Waltz Pop 1AF
	462	Waltz Pop 2AF
<b>WORLD MUSIC</b>	463	RailAF
	464	Twist 1AF
	465	Twist 2AF
	466	Miami PopAF
	467	MotownAF

	468	ReggaeAF
	469	Swing ReggaeAF
	470	ManoAF
	471	ReggaeAF
	472	MusetteAF
<b>DANCE</b>	473	HouseAF
	474	Slow FoxAF
	475	Vienna WaltzAF
	476	SalsaAF
	477	DiscoAF
	478	Hip Hop PopAF
	479	Analog PopAF
	480	Club DanceAF
<b>JAZZ&amp;SWING</b>	481	BoogieAF
	482	FunkE
	483	Jazz RockAF
	484	Swing 1AF
	485	DixielandAF
	486	Jazz SambalAF
<b>TRADITIONAL</b>	487	MarchAF
	488	U.S. MarchAF
	489	SambalAF
	490	PolkaE
	491	Polka OberAF
	492	TarantellaAF
	493	Slow WaltzAF
	494	Over WaltzAF
<b>PINIST</b>	495	Piano BalladAF
	496	Waltz 2AF
	497	Guitar WaltzAF
	498	2/4 Piano 1AF
	499	3/4 Piano 1AF
	500	4/4 Piano 1AF
<b>8 BEAT</b>	501	8 Beat 1BF
	502	8 Beat 2BF
	503	8 Beat 3BF
	504	8 Beat 4BF
	505	8 Beat HeatBF
	506	8 Beat Pop 1BF
	507	8 Beat Pop 2BF
<b>BALLAD</b>	508	Ballad 1BF
	509	Ballad 2BF
	510	Guitar BalladBF
	511	Organ BalladBF
	512	Bluse BalladBF
	513	Epic BalladBF
	514	Rock BalladBF

	513	Slow Ballad		562	Waltz Pop 2P		609	Ballad 2C		656	Disco Tango
	514	Pop Ballad		563	Ballad		610	Guitar Ballad		657	Disco Tango
	515	Country Pop Ballad	<b>WORLD MUSIC</b>	564	Disco 1P		611	Disco Ballad		658	Disco Tango
	516	Folk Ballad		565	Disco 2P		612	Blues Ballad		659	Folk Pop
<b>16 BEAT</b>	519	16 Beat 1P		566	Blues Pop		613	Easy Ballad	<b>DANCE</b>	660	Ballad 1C
	520	16 Beat 2P		567	Blues		614	Rock Ballad		661	Ballad Pop 1C
	521	16 Beat 3P		568	Blues		615	Slow Ballad		662	Ballad Pop 2C
	522	16 Beat 4P		569	Rock Reggae		616	Pop Ballad		663	Ballad
	523	16 Beat Funk		570	Rock		617	Electro Pop Ballad		664	Ballad 1C
	524	16 Beat Pop R		571	Reggae		618	Pop Ballad		665	Ballad 2C
	525	16 Beat Ballad		572	Musette		619	16 Beat 1P		666	Blues Pop
<b>LATIN</b>	526	Bossa Nova 1P	<b>DANCE</b>	573	Bossa		620	16 Beat 2C		667	Blues
	527	Guitar Bossa		574	Slow Pop		621	16 Beat 3C		668	Blues
	528	Pop Bossa		575	Vienna Waltz		622	16 Beat 4C		669	Rock Reggae
	529	Tango		576	Polka		623	16 Beat Pop		670	Rock
	530	Cha Cha		577	Disco		624	16 Beat Pop 2		671	Reggae
	531	Shuffle		578	Pop Hip Pop		625	16 Beat Ballad		672	Musette
	532	Disco 1P		579	Swing Pop		626	Bossa Nova 1C		673	Bossa
<b>COUNTRY</b>	533	Country		580	Club Dance		627	Guitar Bossa		674	Slow Pop
	534	Country Rock	<b>JAZZING</b>	581	Swing		628	Pop Bossa		675	Vienna Waltz
	535	Country Shuffle		582	Funky Pop		629	Tango		676	Ballad
	536	Country Swing		583	Disco Rock		630	Cha Cha		677	Disco
	537	Country Ballad		584	Rock 1P		631	Shuffle		678	Pop Pop
	538	Country Waltz		585	Disco		632	Disco		679	Swing Pop
<b>ROCK 3/4</b>	539	Rock 3/4		586	Disco Swing		633	Country		680	Club Dance
	540	Rock 2P	<b>TRADITIONAL</b>	587	Rock		634	Country Rock		681	Rock
	541	Rock 1P		588	Disco		635	Country Shuffle		682	Funky Pop
	542	Rock 2P		589	Swing		636	Country Swing		683	Disco Rock
	543	Soft Rock		590	Polka		637	Country Ballad		684	Swing 1C
	544	Slow Rock		591	Polka Over		638	Country Waltz		685	Disco
	545	Hard Rock		592	Tarentella		639	Pop Rock		686	Disco
	546	Rock & Roll 1P		593	Slow Waltz		640	Heavy Metal		687	Rock
	547	Rock & Roll 2P		594			641	Rock 1C		688	Disco
<b>RHYTHM/BS</b>	548	Chicago Blues		595			642	Rock 2C		689	Rock
	549	Fast Gospel		596			643	Soft Rock		690	Polka
	550	Gospel		597			644	Slow Rock		691	Polka Over
	551	Pop		598			645	Hard Rock		692	Tarentella
	552	Gospel 1P		599			646	Rock & Roll 1C		693	Slow Ballad
	553	Blues		600			647	Rock & Roll 2C	<b>JAZZING</b>	694	Over Ballad
	554	Slow Blues		601	8 Beat 1C		648	Chicago Blues		695	Disco Ballad
	555	Country		602	8 Beat 2C		649	Fast Gospel		696	Ballad 2C
<b>Blues</b>	556	Disco Tango		603	8 Beat 3C		650	Gospel		697	Guitar Ballad
	557	Disco Tango		604	8 Beat 4C		651	Pop		698	3/4 Piano 1C
	558	Disco		605	8 Beat 5C		652	Country		699	3/4 Piano 2C
	559	Pop Pop		606	8 Beat Pop 1C		653	Blues		700	3/4 Piano 1C
	560	Ballad 1P		607	8 Beat Pop 2C		654	Slow Blues			
	561	Ballad Pop 1P		608	Ballad 1C		655	Country			

Demo Track Table

NO	SongName	029	HapyBirh	058	SingKite	087	Beyer 90
001	MinutWlz	030	PraiseSng	059	TongChil	088	Beyer 98
002	DJ Dance	031	Dolly	060	DoReMi	089	Beyer 99
003	Fountain	032	Market	061	We Happy	090	Beyer 26
004	SpanGirl	033	Family	062	LittlBee	091	Beyer 27
005	SonataPn	034	A cradle	063	Russia	092	Beyer 28
006	SuperSng	035	At Home	064	Plaster	093	Beyer 29
007	LittlBee	036	Seasons	065	Foison	094	Beyer 31
008	HorseRac	037	YearsAgo	066	JingleBe	095	Beyer 106
009	Nocturne	038	Pigeons	067	PaperBoy	096	Beyer 48
010	TheSpain	039	InnerVic	068	Swallow	097	Beyer 52
011	BusyTran	040	Violin	069	New Year	098	Beyer 107
012	Mexico	041	Swan	070	Edelweis	099	Beyer 18
013	MozartPn	042	Musettes	071	MoonRivr	100	Beyer 21
014	Minuet	043	GypsyRnd	072	Beyer 10	101	Beyer 23
015	Nifuma	044	Serenade	073	Beyer 20	102	Beyer 25
016	Disco	045	Polka	074	Beyer 30	103	Beyer 36
017	FolkSong	046	SoilPull	075	Beyer 40	104	Beyer 84
018	Girl Sea	047	Trout	076	Beyer 50	105	Beyer 88
019	LittStar	048	Send-off	077	Beyer 60	106	Beyer 32
020	KindeGtn	049	March	078	Beyer 70	107	Beyer 35
021	Wahaha	050	ForElise	079	Beyer 71	108	Beyer 11
022	Duck&Cik	051	SwaniRiv	080	Beyer 72	109	Beyer 16
023	Humorous	052	France	081	Beyer 75	110	Beyer 18
024	Joy Song	053	Danube	082	Beyer 76		
025	GoingHom	054	Hungary	083	Beyer 77		
026	Dove	055	Spaceman	084	Beyer 78		
027	Auldlang	056	Patriot	085	Beyer 79		
028	Moonligh	057	Cuckoo	086	Beyer 80		

Single-Finger Chord List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Multi-Finger Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim	Caug	Csus4	C7sus4	Cm add9	CmM7	C7-5	Cadd9
C#(D#)	C#(D#)m	C#(D#)7	C#(D#)m7	C#(D#)dim7	C#(D#)M7	C#(D#)m7-5	C#(D#)dim	C#(D#)caug	C#(D#)sus4	C#(D#)7sus4	C#(D#)m add9	C#(D#)mM7	C#(D#)7-5	C#(D#)add9
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim	Daug	Dsus4	D7sus4	Dm add9	DmM7	D7-5	Dadd9
D#(E#)	D#(E#)m	D#(E#)7	D#(E#)m7	D#(E#)dim7	D#(E#)M7	D#(E#)m7-5	D#(E#)dim	D#(E#)caug	D#(E#)sus4	D#(E#)7sus4	D#(E#)m add9	D#(E#)mM7	D#(E#)7-5	D#(E#)add9
E	Em	E7	Em7	Edim7	EM7	Em7-5	Edim	Esus4	E7sus4	Em add9	EmM7	E7-5	Eadd9	
F	Fm	F7	Fm7	Fdim7	FM7	Fm7-5	Fdim	Fsus4	F7sus4	Fm add9	FmM7	F7-5	Fadd9	
F#(G#)	F#(G#)m	F#(G#)7	F#(G#)m7	F#(G#)dim7	F#(G#)M7	F#(G#)m7-5	F#(G#)dim	F#(G#)sus4	F#(G#)7sus4	F#(G#)m add9	F#(G#)mM7	F#(G#)7-5	F#(G#)add9	
G	Gm	G7	Gm7	Gdim7	GM7	Gm7-5	Gdim	Gsus4	G7sus4	Gm add9	GmM7	G7-5	Gadd9	
G#(A#)	G#(A#)m	G#(A#)7	G#(A#)m7	G#(A#)dim7	G#(A#)M7	G#(A#)m7-5	G#(A#)dim	G#(A#)sus4	G#(A#)7sus4	G#(A#)m add9	G#(A#)mM7	G#(A#)7-5	G#(A#)add9	
A	Am	A7	Am7	Adim7	AM7	Am7-5	Adim	Asus4	A7sus4	Am add9	AmM7	A7-5	Aadd9	
A#(B#)	A#(B#)m	A#(B#)7	A#(B#)m7	A#(B#)dim7	A#(B#)M7	A#(B#)m7-5	A#(B#)dim	A#(B#)sus4	A#(B#)7sus4	A#(B#)m add9	A#(B#)mM7	A#(B#)7-5	A#(B#)add9	
B	Bm	B7	Bm7	Bdim7	BM7	Bm7-5	Bdim	Bsus4	B7sus4	Bm add9	BmM7	B7-5	Badd9	

## **Information about Waste Electrical and Electronic Equipment**

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment - intended for households - is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.