

SUPRIMO

SDP88

Instrukcja obsługi / User Manual

Spis treści

Bezpieczeństwo użytkowania	2
Konserwacja urządzenia.....	2
Budowa i obsługa	3
Informacja o zużytym sprzęcie elektrycznym i elektronicznym	22
Montaż.....	23

Bezpieczeństwo użytkowania

 
	Przed użyciem prosimy o szczegółowe zapoznanie się z instrukcją obsługi. Prosimy również o zachowanie jej na przyszłość. Instrukcja zawiera zasady bezpiecznego korzystania z urządzenia.
	Po otrzymaniu produktu należy go rozpakować i sprawdzić, czy produkt jest kompletny i czy podczas transportu nie powstały żadne uszkodzenia. W przypadku uszkodzeń powstałych podczas transportu, prosimy nie używać produktu i niezwłocznie skontaktować się ze sprzedawcą lub producentem.
	UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH. To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobiegnięcia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi. Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.
	Produkt opisany w tej instrukcji jest zgodny z dyrektywami europejskimi, dlatego jest oznaczony znakiem CE.
	Urządzenie należy trzymać z dala od dzieci i niewykwalifikowanych osób. Producent nie ponosi odpowiedzialności za szkody spowodowane nieprawidłowym użytkowaniem.
	Przed użyciem upewnij się, że obudowa nie jest uszkodzona.
	Korzystać wyłącznie z dołączonego do produktu zasilacza dedykowanego AC/DC! Odłączenie produktu od zasilania odbywa się poprzez pociągnięcie za wtyczkę przewodu zasilającego - nie ciągnąć bezpośrednio za przewód zasilający! Odłącz urządzenie z zasilania przed zdjęciem obudowy lub konserwacją. W razie stwierdzenia uszkodzenia przewodu zasilającego - nie używaj go!
	Urządzenie do użytku wewnętrznego w dobrze wentylowanym pomieszczeniu, trzymać z dala od wilgoci. Nie należy narażać produktu na bezpośrednie działanie słońca. Nie wolno przechowywać i korzystać z urządzenia w pobliżu źródeł ognia!
	Nie wolno narażać urządzenia na pracę w wysokich temperaturach!
	W razie wystąpienia zakłóceń w pracy urządzenia, natychmiast odłącz je od źródła zasilania!

Konserwacja urządzenia

 
1. Urządzenie może użytkować tylko wykwalifikowany personel, szkody spowodowane użytkowaniem niezgodnym z przeznaczeniem lub próbą samodzielnej naprawy nie podlegają gwarancji. Wewnątrz opakowania nie ma żadnych części serwisowych, naprawy mogą być wykonywane wyłącznie przez autoryzowany punkt serwisowy.
2. Nie pozwól, aby produkt wszedł w kontakt z olejem, tłuszczem lub jakimkolwiek podobnym płynem.
3. Regularne czyszczenie umożliwia długotrwałe użytkowanie oraz pozwala na zachowanie odpowiedniego funkcjonowania urządzenia. Do czyszczenia używaj miękkiej, suchej szmatki.

Budowa i obsługa

 
Panel sterowania

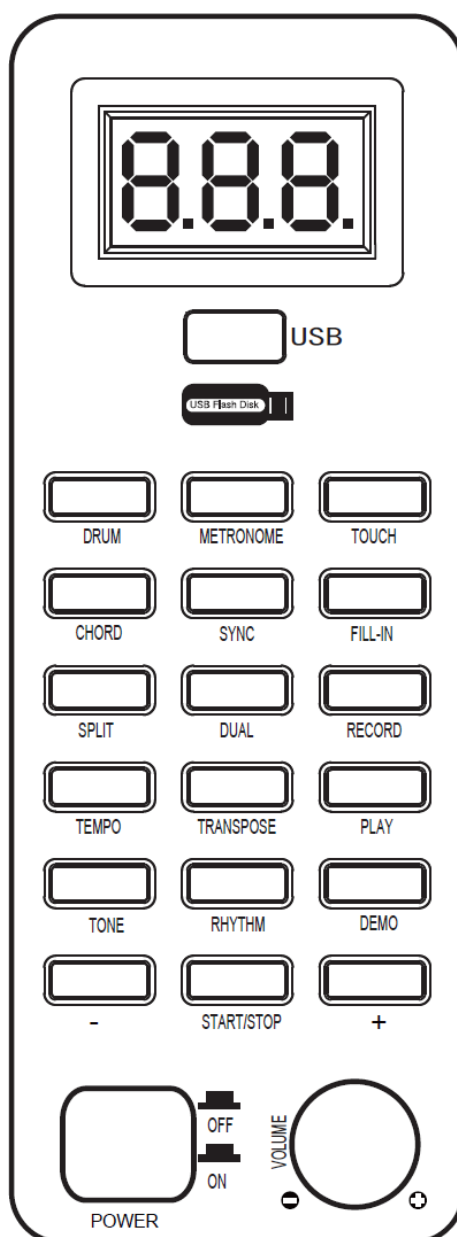

1. Wyświetlacz LED.
2. Port USB-A - USB.
3. Przycisk DRUM.
4. Przycisk METRONOME.
5. Przycisk TOUCH.
6. Przycisk CHORD.
7. Przycisk SYNC.
8. Przycisk FILL-IN.
9. Przycisk SPLIT.
10. Przycisk DUAL.
11. Przycisk RECORD.
12. Przycisk TEMPO.
13. Przycisk TRANSPOSE.
14. Przycisk PLAY.
15. Przycisk TONE.
16. Przycisk RHYTHM.
17. Przycisk DEMO.
18. Przycisk „-”.
19. Przycisk START/STOP.
20. Przycisk „+”.
21. Przycisk zasilania POWER.
22. Potencjometr VOLUME.

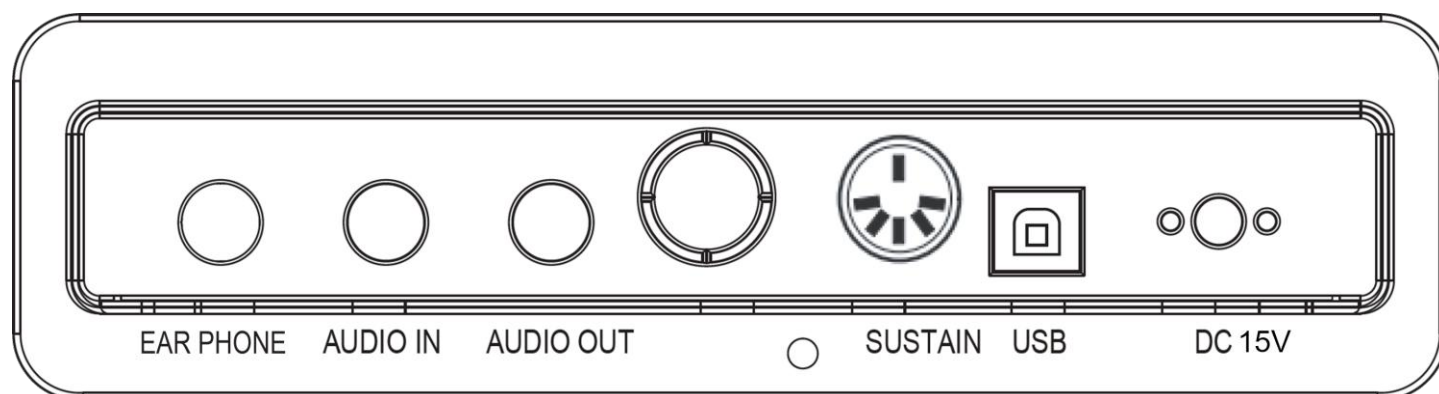Tyłny panel z gniazdami

1. Wyjście słuchawkowe jack 6,35 mm - EAR PHONE.
2. Wejście audio jack 6,35 mm - AUDIO IN.
3. Wyjście audio jack 6,35 mm - AUDIO OUT.
4. Wejście MIDI (5-pinowe DIN) - SUSTAIN.
5. Port USB-B - USB.
6. Wejście zasilania DC 15V - DC 15V.

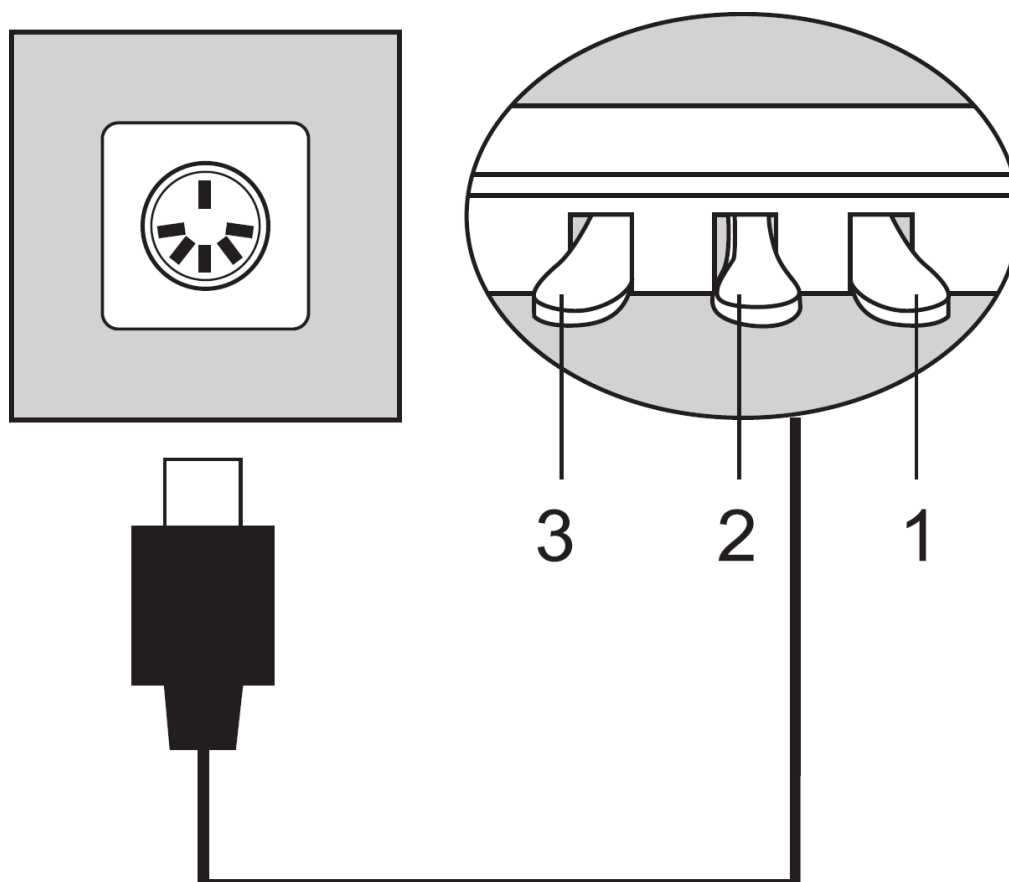

1. Pedal sustain.
2. Pedal sostenuto.
3. Pedal una corda.

Przygotowanie urządzenia

- Zasilacz AC/DC

Proszę używać dedykowanego zasilacza AC/DC dostarczonego z tym urządzeniem. W przypadku użycia niewłaściwego zasilacza instrument może ulec uszkodzeniu. Nie należy umieszczać zasilacza i/lub przewodu zasilającego w pobliżu źródła ciepła. Nie zginać zbyt mocno przewodu i/lub nie umieszczać na nim ciężkich przedmiotów, aby uniknąć uszkodzenia. Nie należy wkładać wtyczki zasilacza do elektrycznego gniazdka wielofunkcyjnego. Jeśli nie używasz instrumentu przez dłuższy czas, wyłącz urządzenie i wyjmij wtyczkę zasilacza z gniazdka. Należy wyciągnąć wtyczkę - nie ciągnąć za przewód zasilający! Zasilacz może się nagrzewać przy dłuższym użytkowaniu urządzenia - jest to normalne zjawisko. Dym, dziwny zapach i/lub przegrzanie urządzenia są oznakami potencjalnego zagrożenia - w takim przypadku: wyłączyć zasilanie, odłączyć zasilacz, skontaktować się z dystrybutorem.

- Korzystanie z wejścia audio

Włóż wtyczkę przewodu audio (brak w zestawie) do wejścia AUDIO IN (jack 6,35 mm), a drugi koniec przewodu do zewnętrznego urządzenia audio, np. laptopa, telefonu komórkowego, odtwarzacza MP3. Dźwięk z zewnętrznego urządzenia źródłowego będzie odtwarzany przez wbudowane głośniki instrumentu.

- Korzystanie z wyjścia audio

Włóż wtyczkę przewodu audio (brak w zestawie) do wyjścia AUDIO OUT (jack 6,35 mm), a drugi koniec przewodu do zewnętrznego urządzenia audio, np. głośnika, kolumny aktywnej. Dźwięk instrumentu będzie odtwarzany przez zewnętrzne urządzenie audio.

- Korzystanie z słuchawek

Włóż wtyczkę przewodu słuchawek (brak w zestawie) do wyjścia słuchawkowego EAR PHONE (jack 6,35 mm) znajdującego się na tylnym panelu instrumentu. Używanie słuchawek w czasie korzystania z urządzenia pozwala nie przeszkadzać innym, jak i umożliwia ćwiczenie gry w nocy.

- Korzystanie z portu USB-B

Włóż wtyczkę USB-B przewodu USB (brak w zestawie) do portu USB (USB-B) znajdującego się na tylnym panelu instrumentu, a drugi koniec przewodu USB do, np. laptopa, komputera stacjonarnego.

Podstawowa obsługa

- Wł./wył. zasilania

Po podłączeniu zasilacza AC/DC naciśnij przycisk zasilania POWER - wyświetlacz LED podświetli się, a urządzenie przejdzie w tryb gotowości do pracy. Możesz zacząć korzystać z instrumentu. Aby wyłączyć urządzenie, ponownie naciśnij przycisk zasilania.



- Głośność

Użyj potencjometru VOLUME, aby zwiększyć (obróć w prawo) lub zmniejszyć (obróć w lewo) głośność główną.

- Wybór tonu

Naciśnij przycisk TONE, aby wejść w tryb wyboru tonu. Użyj przycisków „+” i „-”, aby wybrać ton (patrz: Lista tonów). Możesz wybrać pomiędzy tonami 1-880. Na wyświetlaczu LED pojawi się wybrany numer tonu.

- Wybór rytmu

Naciśnij przycisk RHYTHM, aby wejść w tryb wyboru rytmu. Użyj przycisków „+” i „-”, aby wybrać rytm (patrz: Lista rytmów). Możesz wybrać pomiędzy rytмами 1-600. Na wyświetlaczu LED pojawi się wybrany numer rytmu. Naciśnij przycisk START/STOP, aby rozpocząć odtwarzanie wybranego rytmu. W trakcie odtwarzania rytmu naciśnij przycisk FILL-IN, aby dodać przejście do rytmu. Naciśnij ponownie przycisk START/STOP, aby zatrzymać odtwarzanie wybranego rytmu.

- Tempo

Naciśnij przycisk TEMPO, aby wejść w tryb regulacji tempa. Użyj przycisków „+” i „-”, aby wybrać wartość tempa. Zakres wartości tempa to 30-300.

- Akompaniament akordowy

Naciśnij przycisk START/STOP, aby rozpocząć odtwarzanie wybranego rytmu. W trakcie odtwarzania rytmu naciśnij przycisk CHORD, aby wejść w tryb akompaniamentu akordowego. Zagraj wybrane akordy (patrz: Tabela akordów) na klawiszach 1-22 od lewej strony (strefa akordu), a usłyszysz odpowiadający im akompaniament. Ponownie naciśnij przycisk CHORD, aby wyjść z trybu akompaniamentu akordowego.

- Synchronizacja odtwarzania rytmu i akompaniamentu

W trakcie odtwarzania rytmu naciśnij przycisk CHORD, aby wejść w tryb akompaniamentu akordowego. Wybierz akompaniament poprzez zagranie wybranych akordów (patrz: Tabela akordów) na klawiszach 1-22 od lewej strony (strefa akordu). W trybie akompaniamentu akordowego naciśnij przycisk SYNC, aby wejść w tryb synchronizacji odtwarzania rytmu i akompaniamentu. Zagraj wybrane akordy (patrz: Tabela akordów) na klawiszach 1-22 od lewej strony (strefa akordu), a akompaniament automatycznie rozpocznie odtwarzanie. Naciśnij przycisk START/STOP, aby wyłączyć synchronizację odtwarzania rytmu i akompaniamentu.

- Wybór ścieżki demo

Naciśnij przycisk DEMO, aby wejść w tryb wyboru ścieżki demo. Użyj przycisków „+” i „-”, aby wybrać ścieżkę demo (patrz: Lista ścieżek demo). Możesz wybrać pomiędzy ścieżkami demo 1-80. Na wyświetlaczu LED pojawi się wybrany numer ścieżki demo. Naciśnij ponownie przycisk DEMO lub przycisk START/STOP, aby zatrzymać odtwarzanie wybranej ścieżki demo i wyjść z trybu wyboru ścieżki demo.

- Dynamika klawiatury

Naciśnij przycisk TOUCH, aby uruchomić funkcję dynamiki klawiatury. Naciśnij ponownie przycisk TOUCH, aby wyłączyć funkcję dynamiki klawiatury.

- Klawiatura perkusyjna

Naciśnij przycisk DRUM, aby zmienić klawiaturę skali na klawiaturę perkusyjną (patrz: Tabela dźwięków klawiatury perkusyjnej). Naciśnij ponownie przycisk DRUM, aby wyłączyć tę funkcję.

- Podwójny ton

Naciśnij przycisk TONE, aby wejść w tryb wyboru tonu. Użyj przycisków „+” i „-”, aby wybrać ton główny (patrz: Lista tonów). Naciśnij przycisk DUAL, aby wejść w tryb wyboru drugiego tonu. Użyj przycisków „+” i „-”, aby wybrać drugi ton (patrz: Lista tonów).

- Podział tonu klawiatury

Naciśnij przycisk TONE, aby wejść w tryb wyboru tonu. Użyj przycisków „+” i „-”, aby wybrać ton główny (patrz: Lista tonów). Naciśnij przycisk SPLIT, aby wejść w tryb podziału tonu klawiatury. Użyj przycisków „+” i „-”, aby wybrać drugi ton (patrz: Lista tonów). Naciśnij ponownie przycisk SPLIT, aby wyłączyć podział tonu klawiatury.

W trybie gotowości do pracy naciśnij przycisk SPLIT, aby wejść w tryb wyboru punktu podziału klawiatury. Użyj przycisków „+” i „-”, aby wybrać punkt podziału klawiatury.

- Metronom

Naciśnij przycisk METRONOME, aby uruchomić metronom. Użyj przycisków „+” i „-”, aby dokonać regulacji tempa metronomu. Naciśnij ponownie przycisk METRONOME, aby wyłączyć metronom.

- Tryb nagrywania

Naciśnij przycisk RECORD, aby wejść w tryb nagrywania. Zagraj na klawiszach - maksymalna liczba nagrań to 250. Naciśnij przycisk PLAY, aby w dowolnym momencie odtworzyć nagranie. Jeszcze raz naciśnij przycisk RECORD, aby wyczyścić pamięć nagrań i ponownie wejść w tryb nagrywania.

- Transpozycja

Naciśnij przycisk TRANSPOSE, aby wejść w tryb zmiany wysokości dźwięku. Użyj przycisków „+” i „-”, aby zwiększyć lub zmniejszyć wysokość dźwięku. Zakres wartości wysokości dźwięku to -6 - +6.

- Odtwarzacz MP3

Umieść pamięć przenośną USB z plikami audio w formacie MP3 w porcie USB-A przy panelu sterowania. Urządzenie automatycznie wejdzie w tryb odtwarzacza MP3. Użyj przycisków „+” i „-”, aby wybrać plik audio. Naciśnij przycisk START/STOP, aby odtworzyć lub zatrzymać odtwarzanie wybranego pliku audio.

Lista tonów

T001 Acoustic Grand Piano	T053 Choir Aahs	T105 Sitar
T002 Bright Acoustic Piano	T054 Voice Oohs	T106 Banjo
T003 Electric Grand Piano	T055 Synth Voice	T107 Shamisen
T004 Honky-tonk Piano	T056 Orchestra Hit	T108 Koto
T005 Rhodes Piano	T057 Trumpet	T109 Kalimba
T006 Chorused Piano	T058 Trombone	T110 Bagpipe
T007 Harpsichord	T059 Tuba	T111 Fiddle
T008 Clavichord	T060 Muted Trumpet	T112 Shanai
T009 Celesta	T061 French Horn	T113 Tinkle Bell
T010 Glockenspiel	T062 Brass Section	T114 Agogo
T011 Music box	T063 Synth Brass 1	T115 Steel Drums
T012 Vibraphone	T064 Synth Brass 2	T116 Woodblock
T013 Marimba	T065 Soprano Sax	T117 Taiko Drum
T014 Xylophone	T066 Alto Sax	T118 Melodic Tom
T015 Tubular Bell	T067 Tenor Sax	T119 Synth Drum
T016 Dulcimer	T068 Baritone Sax	T120 Reverse Cymbal
T017 Drawbar Organ	T069 Oboe	T121 Guitar Fret Noise
T018 Percussive Organ	T070 English Horn	T122 Breath Noise
T019 Rock Organ	T071 Bassoon	T123 Seashore
T020 Church Organ	T072 Clarinet	T124 Bird Tweet
T021 Reed Organ	T073 Piccolo	T125 Telephone Ring
T022 Accordion	T074 Flute	T126 Helicopter
T023 Harmonica	T075 Recorder	T127 Applause
T024 Tango Accordion	T076 Pan Flute	T128 Gunshot
T025 Acoustic Guitar (nylon)	T077 Bottle Blow	T129 Yong Gin
T026 Acoustic Guitar (steel)	T078 Shakuhachi	T130 Zheng
T027 Electric Guitar (jazz)	T079 Whistle	T131 Zhong Ruan
T028 Electric Guitar (clean)	T080 Ocarina	T132 Pi Pa
T029 Electric Guitar (muted)	T081 Lead 1 (square)	T133 Big Souna
T030 Overdriven Guitar	T082 Lead 2 (sawtooth)	T134 Souna
T031 Distortion Guitar	T083 Lead 3 (calliope lead)	T135 Er Hu
T032 Guitar Harmonics	T084 Lead 4 (chiff lead)	T136 Yue Hu
T033 Acoustic Bass	T085 Lead 5 (charang)	T137 Di Zi
T034 Electric Bass(finger)	T086 Lead 6 (voice)	T138 Bong Di
T035 Electric Bass (pick)	T087 Lead 7 (fifths)	T139 Koto
T036 Fretless Bass	T088 Lead 8 (bass+lead)	T140 Qu Di
T037 Slap Bass 1	T089 Pad 1 (new age)	T141 Jungle Bass
T038 Slap Bass 2	T090 Pad 2 (warm)	T142 Koto 2
T039 Synth Bass 1	T091 Pad 3 (polysynth)	T143 Marimba 3
T040 Synth Bass 2	T092 Pad 4 (choir)	T144 Tsugaru
T041 Violin	T093 Pad 5 (bowed)	T145 Kawala 1
T042 Viola	T094 Pad 6 (metallic)	T146 Attack Clav. 1
T043 Cello	T095 Pad 7 (halo)	T147 Crystal
T044 Contrabass	T096 Pad 8 (sweep)	T148 Bright String
T045 Tremolo Strings	T097 FX 1 (rain)	T149 Clavi 2
T046 Pizzicato Strings	T098 FX 2 (soundtrack)	T150 Chorus Guitar.
T047 Orchestral Harp	T099 FX 3 (crystal)	T151 Barafon
T048 Timpani	T100 FX 4 (atmosphere)	T152 Jazz Organ
T049 String Ensemble 1	T101 FX 5 (brightness)	T153 Indian Flute
T050 String Ensemble 2	T102 FX 6 (goblins)	T154 Mute Barafon 1
T051 Synth Strings 1	T103 FX 7 (echoes)	T155 Dual Horns 1
T052 Synth Strings 2	T104 FX 8 (sci-fi)	T156 Electoric Giutar (Clean) 2

T157 Clavi 3	T209 Mute Barafon 3	T261 Soft Guitar 5
T158 Soft Sax 1	T210 Dual Horns 2	T262 Nay 3
T159 Electric Vraphone	T211 Xylophone 2	T263 Synth Harpsi. 3
T160 Didgeridoo 1	T212 Didgeridoo 3	T264 Wind Organ 3
T161 Barafon 2	T213 Wind Organ 2	T265 Shanai 2
T162 Tubular Bells 2	T214 Church Bells	T266 Woodblock 6
T163 Soft Accord	T215 Tsugaru 3	T267 Electric Vraphone 4
T164 Barafon 3	T216 Nay	T268 Kawala 5
T165 Clavi 4	T217 Guitar Pinch 2	T269 Grow Guitar 2
T166 Nay	T218 Grow Guitar	T270 Grow Guitar 3
T167 Oct Harp	T219 Indian Flute 3	T271 Steel Bell 6
T168 Attack Barafon	T220 Synth Harpsi. 2	T272 Wind Organ 4
T169 Clavi 5	T221 Soft Sax 2	T273 Soft Accord 2
T170 Kalimba 2	T222 Xylophone 3	T274 Kalimba 3
T171 Tsugaru 2	T223 English Horn 2	T275 Twin Bones 3
T172 Shamisen 2	T224 Soft Guitar 3	T276 Church Bells 2
T173 Woodblock 2	T225 Castanets 2	T277 Koto 5
T174 Crystal 2	T226 Soft Guitar 4	T278 Attack Barafon 2
T175 Shamisen 3	T227 Hard Vibe 2	T279 Mute Barafon 5
T176 Synth Harpsi. 1	T228 Reed Horn	T280 Nay 4
T177 Jazz Organ 1	T229 Nay 2	T281 Jungle Bass 2
T178 Viola Attack	T230 Bari & Tenor	T282 Soft Accord 3
T179 Viola Attack 2	T231 Kawala 3	T283 Hard Vibe 3
T180 Hard Barsoon 1	T232 Indian Flute 4	T284 Soft Clav.
T181 Mute Barafon 2	T233 Didgeridoo 4	T285 Bag Pipe 2
T182 Bodhran	T234 Attack Clav. 2	T286 Oct Harp 2
T183 Kawala 2	T235 Marimba 4	T287 Woodblock 7
T184 Didgeridoo 2	T236 Bari & Tenor 2	T288 Mute Barafon 6
T185 Soft Guitar 1	T237 Slow Violin	T289 Guitar Pinch 4
T186 Suona	T238 Organ Flute	T290 Dulcimer 3
T187 Twin Bones	T239 Jazz Organ 4	T291 Soft Sax 4
T188 Jazz Organ 2	T240 Electric Vraphone 3	T292 Electric Vraphone 5
T189 Woodblock 3	T241 Dual Horns 3	T293 Tsugaru 6
T190 Soft Santur	T242 Indian Flute 5	T294 Reed Horn 2
T191 Koto 3	T243 English Horn 3	T295 Castanets 3
T192 Castanets 1	T244 Dulcimer 2	T296 Tron Flute 2
T193 Viola Attack 3	T245 Koto 4	T297 Attack Clav. 3
T194 Woodblock 4	T246 Tubular Bells 3	T298 Bari & Tenor 3
T195 Bright String 2	T247 Tsugaru 4	T299 Indian Flute 6
T196 Twin Bones 2	T248 Tsugaru 5	T300 Soft Guitar 6
T197 Tenor Sax 2	T249 Mute Barafon 4	T301 Nay 5
T198 Wind Organ	T250 Dual Horns 4	T302 Didgeridoo 5
T199 Tron Flute	T251 Soft Sax 3	T303 Marimba 5
T200 Bodhran 2	T252 Bodhran 3	T304 Attack Clav. 4
T201 Tron Flute	T253 Guitar Pinch 3	T305 Jungle Bass 3
T202 Jazz Organ 3	T254 Crystal 3	T306 Hard Barsoon 2
T203 Soft Santur 2	T255 Grow Guitar	T307 Suona 2
T204 Woodblock 5	T256 Jazz Organ 5	T308 Hard Vibe 4
T205 Shamisen 4	T257 Attack Barafon	T309 Bag Pipe 3
T206 Indian Flute 2	T258 Xylophone 4	T310 Soft Accord 4
T207 Electric Vraphone 2	T259 Soft Santur 3	T311 Attack Barafon 3
T208 Soft Guitar 2	T260 Kawala 4	T312 Hard Barsoon 3

T313 Dulcimer 4	T365 Wind Organ 6	T417 Hard Barsoon 5
T314 Twin Bones 4	T366 Tron Flute 3	T418 Dulcimer 7
T315 Soft Sax 5	T367 Soft Sax 6	T419 Soft Accord 6
T316 Shamisen 5	T368 Suona 4	T420 Church Bells 4
T317 Suona 3	T369 Soft Guitar 7	T421 Shamisen 7
T318 Bodhran 4	T370 Hard Vibe 6	T422 Synth Harpsi. 4
T319 Shamisen 6	T371 Jazz Organ 7	T423 Crystal 5
T320 Electric Vraphone 6	T372 Grow Guitar 5	T424 Kawala 9
T321 Tsugaru 7	T373 Xylophone 5	T425 Dual Horns 8
T322 Oct Harp 3	T374 Bag Pipe 5	T426 Clavi 8
T323 Kalimba 4	T375 Bag Pipe 6	T427 Electric Vraphone 7
T324 Soft Clav. 2	T376 Clavi 7	T428 Castanets 5
T325 English Horn 3	T377 Hard Vibe 7	T429 Tenor Sax 5
T326 Didgeridoo 6	T378 Kawala 7	T430 Tenor Sax 6
T327 Barafon 4	T379 Shanai 3	T431 Didgeridoo 10
T328 Indian Flute 7	T380 Suona 5	T432 Kalimba 7
T329 Organ Flute 2	T381 Jungle Bass 4	T433 English Horn 8
T330 Soft Santur 4	T382 Grow Guitar 6	T434 Guitar Pinch 6
T331 Mute Barafon 7	T383 Bag Pipe 7	T435 Hard Vibe 8
T332 Nay 6	T384 Crystal 4	T436 Mute Barafon 13
T333 Hard Vibe 5	T385 Guitar Pinch 5	T437 Tenor Sax 7
T334 Bari & Tenor 4	T386 Woodblock 8	T438 Bag Pipe 8
T335 Bag Pipe 4	T387 Soft Sax 7	T439 Shanai 5
T336 Tenor Sax 3	T388 Attack Barafon 4	T440 English Horn 9
T337 Organ Flute 3	T389 Barafon 6	T441 Didgeridoo 11
T338 Dulcimer 5	T390 Organ Flute 4	T442 Organ Flute 5
T339 Twin Bones 5	T391 Mute Barafon 9	T443 Attack Barafon 5
T340 Grow Guitar 4	T392 Shanai 4	T444 Jungle Bass 5
T341 Kalimba 5	T393 Soft Clav. 3	T445 Barafon 7
T342 Oct Harp 4	T394 Oct Harp 5	T446 Soft Santur 6
T343 Nay 7	T395 Tron Flute 4	T447 Slow Violin 3
T344 Dual Horns 5	T396 Bright String 3	T448 Hard Barsoon 6
T345 Didgeridoo 7	T397 Jazz Organ 8	T449 Didgeridoo 12
T346 English Horn 4	T398 Mute Barafon 10	T450 Kalimba 8
T347 Kawala 6	T399 Slow Violin 2	T451 Electoric Giutar (Clean) 3
T348 Marimba 6	T400 Soft Sax 8	T452 Dulcimer 8
T349 Barafon 5	T401 English Horn 5	T453 Reed Horn 5
T350 Soft Accord 5	T402 Reed Horn 4	T454 Bodhran 5
T351 Mute Barafon 8	T403 Indian Flute 8	T455 Soft Sax 9
T352 Dual Horns 6	T404 Castanets 4	T456 Mute Barafon 14
T353 Church Bells 3	T405 English Horn 6	T457 Guitar Pinch 7
T354 Wind Organ 5	T406 Tron Flute 5	T458 Wind Organ 7
T355 Attack Clav. 5	T407 English Horn 7	T459 Guitar Pinch 8
T356 Jazz Organ 6	T408 Hard Barsoon 4	T460 Indian Flute 9
T357 Reed Horn 3	T409 Dulcimer 6	T461 Bag Pipe 9
T358 Tenor Sax 4	T410 Xylophone 6	T462 Crystal 6
T359 Chorus Guitar. 2	T411 Mute Barafon 11	T463 Twin Bones 6
T360 Didgeridoo 8	T412 Nay 8	T464 Crystal 7
T361 Soft Santur 5	T413 Mute Barafon 12	T465 Soft Guitar 8
T362 Clavi 6	T414 Dual Horns 7	T466 Guitar Pinch 9
T363 Kalimba 6	T415 Kawala 8	T467 Attack Clav. 6
T364 Didgeridoo 9	T416 Soft Clav. 4	T468 Bodhran 6

T469 Suona 6	T521 Clavi 10	T573 Clavi 11
T470 Chorus Guitar. 3	T522 Wind Organ 8	T574 Viola Attack 6
T471 Slow Violin 4	T523 Synth Harpsi. 6	T575 Synth Harpsi. 7
T472 Clavi 9	T524 Bari & Tenor 5	T576 Jungle Bass 7
T473 Castanets 6	T525 Steel Bell 9	T577 Koto 8
T474 Slow Violin 5	T526 Soft Sax 14	T578 Church Bells 6
T475 Jazz Organ 9	T527 Castanets 8	T579 Soft Accord 9
T476 Jazz Organ 10	T528 Didgeridoo 15	T580 Tubular Bells 5
T477 Electric Vraphone 8	T529 Soft Sax 15	T581 Bag Pipe 12
T478 Bodhran 7	T530 Mute Barafon 16	T582 Grow Guitar 7
T479 Steel Bell 7	T531 Soft Guitar 10	T583 Mute Barafon 18
T480 Synth Harpsi. 5	T532 Soft Accord 8	T584 Soft Accord 10
T481 Marimba 7	T533 Wind Organ 9	T585 Electoric Giutar (Clean)6
T482 Marimba 8	T534 Didgeridoo 16	T586 Viola Attack 7
T483 Attack Barafon 6	T535 Electoric Giutar (Clean)5	T587 Kawala 11
T484 Castanets 7	T536 English Horn 10	T588 Soft Santur 7
T485 Hard Vibe 9	T537 Soft Sax 16	T589 Bright String 5
T486 Tron Flute 6	T538 Soft Guitar 11	T590 Electoric Giutar (Clean)7
T487 Soft Accord 7	T539 Hard Barsoon 8	T591 Attack Barafon 8
T488 Shanai 6	T540 Kalimba 9	T592 Electric Vraphone 9
T489 Woodblock 9	T541 Koto 7	T593 Steel Bell 10
T490 Soft Sax 10	T542 Soft Clav. 6	T594 Mute Barafon 19
T491 Slow Violin 6	T543 Xylophone 7	T595 Chorus Guitar. 7
T492 Soft Sax 11	T544 Soft Clav. 7	T596 Soft Clav. 10
T493 Chorus Guitar. 4	T545 Church Bells 5	T597 Viola Attack 8
T494 Attack Clav. 7	T546 Kawala 10	T598 Church Bells 7
T495 Reed Organ 2	T547 Didgeridoo 17	T599 Soft Santur 8
T496 Viola Attack 4	T548 Kalimba 10	T600 Wind Organ 10
T497 Koto 6	T549 Castanets 9	T601 Indian Flute 11
T498 Tsugaru 8	T550 Didgeridoo 18	T602 Tsugaru 10
T499 Bag Pipe 10	T551 Bodhran 8	T603 Dulcimer 10
T500 Attack Clav. 8	T552 English Horn 11	T604 Grow Guitar 8
T501 Tron Flute 7	T553 Hard Vibe 10	T605 Tubular Bells 6
T502 Marimba 9	T554 Bodhran 9	T606 Jungle Bass 8
T503 Bag Pipe 11	T555 Indian Flute 10	T607 Dulcimer 11
T504 Hard Barsoon 7	T556 Dulcimer 9	T608 Organ Flute 6
T505 Mute Barafon 15	T557 Soft Clav. 8	T609 Nay 10
T506 Soft Sax 12	T558 Viola Attack 5	T610 Attack Barafon 9
T507 Attack Clav. 9	T559 Attack Harp 1	T611 English Horn 12
T508 Jazz Organ 11	T560 Mute Barafon 17	T612 Suona 7
T509 Soft Guitar 9	T561 Tenor Sax 8	T613 Reed Organ 5
T510 Didgeridoo 13	T562 Twin Bones 7	T614 Shamisen 8
T511 Bright String 4	T563 Chorus Guitar. 6	T615 Koto 9
T512 Electoric Giutar (Clean)4	T564 Shanai 7	T616 Shamisen 9
T513 Tsugaru 9	T565 Kalimba 11	T617 Church Bells 8
T514 Nay 9	T566 Jungle Bass 6	T618 Nay 11
T515 Reed Horn 6	T567 Attack Barafon 7	T619 Hard Barsoon 9
T516 Didgeridoo 14	T568 Soft Clav. 9	T620 Slow Violin 7
T517 Soft Clav. 5	T569 Tubular Bells 4	T621 Soft Sax 17
T518 Soft Sax 13	T570 Reed Organ 4	T622 Grow Guitar 9
T519 Reed Organ 3	T571 Guitar Pinch 10	T623 Attack Harp 2
T520 Steel Bell 8	T572 Bodhran 10	T624 Suona 8

T625 Nay 12	T677 Tron Flute 8	T729 Kawala 16
T626 Synth Harpsi. 8	T678 Attack Clav. 11	T730 Kawala 17
T627 Didgeridoo 19	T679 Dual Horns 9	T731 Bag Pipe 13
T628 Nay 13	T680 Wind Organ 12	T732 Electoric Giutar (Clean) 10
T629 Synth Harpsi. 9	T681 Twin Bones 8	T733 Tron Flute 9
T630 Soft Sax 18	T682 Reed Organ 6	T734 Kawala 18
T631 Koto 10	T683 Organ Flute 9	T735 Tron Flute 10
T632 Kalimba 12	T684 Slow Violin 9	T736 Tubular Bells 8
T633 Suona 9	T685 Dulcimer 12	T737 Synth Harpsi. 13
T634 Oct Harp 6	T686 Tsugaru 11	T738 Soft Santur 13
T635 Koto 11	T687 Wind Organ 13	T739 Tubular Bells 9
T636 Shanai 8	T688 Soft Santur 10	T740 Attack Barafon 10
T637 Electoric Giutar (Clean)8	T689 Suona 12	T741 Attack Barafon 11
T638 Clavi 12	T690 Soft Guitar 13	T742 Electric Viphraphone 10
T639 Attack Harp 3	T691 Xylophone 8	T743 Dual Horns 11
T640 Attack Clav. 10	T692 Dulcimer 13	T744 Shanai 10
T641 Bright String 6	T693 Marimba 10	T745 Bright String 13
T642 Organ Flute 7	T694 Soft Guitar 14	T746 Crystal 9
T643 Electoric Giutar (Clean)9	T695 Viola Attack 9	T747 Clavi 13
T644 Kawala 12	T696 Hard Vibe 13	T748 Soft Sax 20
T645 Bodhran 11	T697 Koto 12	T749 Tron Flute 11
T646 Shanai 9	T698 Tenor Sax 9	T750 Dulcimer 14
T647 Suona 10	T699 Kawala 15	T751 Slow Violin 11
T648 Synth Harpsi. 10	T700 Steel Bell 11	T752 Tenor Sax 11
T649 Bari & Tenor 6	T701 Soft Accord 11	T753 Nay 14
T650 Kawala 13	T702 Organ Flute 10	T754 Soft Guitar 15
T651 Bari & Tenor 7	T703 Organ Flute 11	T755 Shanai 11
T652 Reed Horn 7	T704 Bright String 9	T756 Hard Barsoon 12
T653 Shamisen 10	T705 Soft Santur 11	T757 Synth Harpsi. 14
T654 Soft Clav. 11	T706 Hard Barsoon 10	T758 Soft Sax 21
T655 Bari & Tenor 8	T707 Wind Organ 14	T759 Suona 13
T656 Soft Santur 9	T708 Synth Harpsi. 11	T760 Kalimba 13
T657 Attack Harp 4	T709 Soft Sax 19	T761 Suona 14
T658 Bright String 7	T710 Bright String 10	T762 Slow Violin 12
T659 Guitar Pinch 11	T711 Bright String 11	T763 Reed Organ 7
T660 Wind Organ 11	T712 Jungle Bass 9	T764 Kawala 19
T661 Soft Guitar 12	T713 Soft Accord 12	T765 Reed Horn 9
T662 English Horn 13	T714 Reed Horn 8	T766 Attack Harp 7
T663 Kawala 14	T715 Slow Violin 10	T767 Oct Harp 7
T664 Grow Guitar 10	T716 Synth Harpsi. 12	T768 Kalimba 14
T665 Attack Harp 5	T717 Attack Harp 6	T769 Twin Bones 9
T666 Bari & Tenor 9	T718 Soft Santur 12	T770 Attack Clav. 12
T667 Organ Flute 8	T719 Hard Barsoon 11	T771 Bari & Tenor 11
T668 Woodblock 10	T720 English Horn 14	T772 Attack Harp 8
T669 Hard Vibe 11	T721 Crystal 8	T773 English Horn 15
T670 Mute Barafon 20	T722 Bari & Tenor 10	T774 Twin Bones 10
T671 Tubular Bells 7	T723 Koto 13	T775 Soft Clav. 12
T672 Suona 11	T724 Didgeridoo 20	T776 Tubular Bells 10
T673 Bright String 8	T725 Tenor Sax 10	T777 Slow Violin 13
T674 Hard Vibe 12	T726 Bright String 12	T778 Synth Harpsi. 15
T675 Slow Violin 8	T727 Hard Vibe 14	T779 Guitar Pinch 12
T676 Shamisen 11	T728 Dual Horns 10	T780 Church Bells 9

T781 Castanets 10	T833 Dual Horns 12
T782 Twin Bones 11	T834 Soft Clav. 13
T783 Indian Flute 12	T835 Church Bells 11
T784 Woodblock 11	T836 Oct Harp 9
T785 Attack Harp 9	T837 Oct Harp 10
T786 Crystal 10	T838 Indian Flute 13
T787 Mute Barafon 21	T839 Viola Attack 11
T788 Synth Harpsi. 16	T840 Clavi 14
T789 Reed Organ 8	T841 Koto 14
T790 Steel Bell 12	T842 Soft Guitar 19
T791 Chorus Guitar. 8	T843 Castanets 12
T792 Reed Organ 9	T844 Jazz Organ 13
T793 Marimba 11	T845 Bag Pipe 14
T794 Electric Vraphone 11	T846 Steel Bell 13
T795 Soft Guitar 16	T847 Church Bells 12
T796 Viola Attack 10	T848 Guitar Pinch 13
T797 Reed Organ 10	T849 Soft Clav. 14
T798 Bari & Tenor 12	T850 Tubular Bells 12
T799 Soft Sax 22	T851 Grow Guitar 11
T800 Jazz Organ 12	T852 Steel Bell 14
T801 Soft Guitar 17	T853 Chorus Guitar. 10
T802 Xylophone 9	T854 Crystal 13
T803 Xylophone 10	T855 Reed Horn 11
T804 Church Bells 10	T856 Steel Bell 15
T805 Suona 15	T857 Kawala 21
T806 Crystal 11	T858 Attack Harp 10
T807 Chorus Guitar. 9	T859 Oct Harp 11
T808 Crystal 12	T860 Kalimba 15
T809 Hard Barsoon 13	T861 Tubular Bells 13
T810 Castanets 11	T862 Electoric Giutar (Clean)11
T811 Kawala 20	T863 Jazz Organ 14
T812 Nay 15	T864 Attack Barafon 14
T813 Tubular Bells 11	T865 Soft Guitar 20
T814 Hard Barsoon 14	T866 Soft Accord 13
T815 Barafon 8	T867 Synth Harpsi. 17
T816 Marimba 12	T868 Bodhran 12
T817 Soft Sax 23	T869 Woodblock 12
T818 Attack Barafon 12	T870 Attack Harp 11
T819 Electric Vraphone 12	T871 Organ Flute 12
T820 Wind Organ 15	T872 Jazz Organ 15
T821 Attack Barafon 13	T873 Didgeridoo 21
T822 Electric Vraphone 13	T874 Church Bells 13
T823 Soft Guitar 18	T875 Synth Harpsi. 18
T824 Xylophone 11	T876 Chorus Guitar. 11
T825 Tenor Sax 12	T877 Organ Flute 13
T826 Oct Harp 8	T878 Shamisen 13
T827 Shamisen 12	T879 Jungle Bass 10
T828 Reed Horn 10	T880 Shamisen 14
T829 Marimba 13	
T830 Reed Organ 11	
T831 Attack Clav. 13	
T832 Hard Barsoon 15	

Lista rytmów

R001 50's Pop	R053 8 Beat Modern	R105 Pop Waltz1
R002 Cool Pop	R054 Country Ballad	R106 USA March1
R003 Groovy Pop	R055 Love Song	R107 Hully Gully1
R004 60's Vintage Pop	R056 Modern Country Pop	R108 Tarantella1
R005 80's Pop	R057 Electro Pop	R109 Limbo Rock1
R006 Rap Pop	R058 Acoustic Ballad	R110 Swing Waltz1
R007 Pop Rock	R059 Piano Ballad	R111 Pub Piano1
R008 60° s Soul	R060 R&B Ballad	R112 Jazz Waltz 1
R009 70° s Soul	R061 Rock Ballad	R113 Jazz Waltz 2
R010 Funk	R062 Slow & Easy	R114 Show Tune1
R011 16 Beat Shuffle	R063 Analog Ballad	R115 Polka1
R012 Twist	R064 E_Ballad	R116 Waltz1
R013 British Pop	R065 70's Disco1	R117 Cha Cha1
R014 Hard Rock	R066 70's Disco2	R118 Rumba1
R015 Fusion	R067 Funky Disco	R119 Jive1
R016 FunkShuffl	R068 Saturday Night	R120 Pasodoble1
R017 FusionShuffl	R069 Club Latin	R121 Samba 1
R018 60's Rock	R070 Disco Chocolate	R122 Samba 2
R019 Standard Rock	R071 Disco Fox	R123 Schlager Rock 1
R020 Brit Rock Pop	R072 Disco Funk	R124 Schlager Rock 2
R021 60's Vintage Rock	R073 Disco Hands	R125 FoxTrot1
R022 Chart Rock Shfl	R074 Disco Party	R126 Viennese Waltz1
R023 60's Pop Rock	R075 Disco Samba	R127 Tango1
R024 RockBilly	R076 UK Pop	R128 Tango2
R025 RockBoogie	R077 Club Dance	R129 70's Disco Funk
R026 RockChaCha1	R078 Modern R&B	R130 Disco Philly1
R027 RockClassical	R079 Hip Shuffle	R131 Disco House1
R028 RockShuffle	R080 Charleston	R132 80's Disco
R029 RockPop	R081 DiscoPop	R133 Swing Fox2
R030 Pop Mambo	R082 DiscoSoul	R134 Slow Fox2
R031 Latin Party Pop	R083 DiscoTrot	R135 Organ Cha Cha2
R032 Cumbia	R084 EuroBeat	R136 Organ Quick Step2
R033 Parranda	R085 Rap	R137 Cat Groove2
R034 Carnival	R086 Rave	R138 Dixie Jazz2
R035 Bossanova	R087 Swing Fox1	R139 Medium Jazz2
R036 Mambo 1	R088 Slow Fox1	R140 Jazz Big Band2
R037 Mambo 2	R089 Organ Cha Cha1	R141 Jazz Club2
R038 Bolero	R090 Organ Quick Step1	R142 Ragtime2
R039 Cumbia	R091 Fast Band 1	R143 Big Band Shuffle 1
R040 Latin Rock	R092 Cat Groove1	R144 Big Band Shuffle 2
R041 Disco Latin	R093 Dixie Jazz1	R145 Big Band Shuffle 3
R042 Tijuana	R094 Medium Jazz1	R146 Fast Band 2
R043 Reggae	R095 Jazz Big Band1	R147 Fast Band 3
R044 70's Chart Ballad	R096 Jazz Club1	R148 Frankly Soul
R045 Romantic Ballad	R097 Ragtime1	R149 Jazz Funk
R046 90's Cool Ballad	R098 Country Ballad1	R150 Classic Big Band
R047 Alp Ballad1	R099 Country Two Step1	R151 French Jazz1
R048 Alp Ballad2	R100 Schlager Polka1	R152 Jump Jive
R049 Slow Rock	R101 Polka Pop1	R153 Country Ballad2
R050 Unplugged	R102 Blue Grass 1	R154 Country Two Step2
R051 Pop Ballad	R103 Blue Grass 2	R155 Country 1
R052 Pop New Age	R104 Blue Grass 3	R156 Country 2

R157 Finger Pickin1	R209 Brit Pop	R261 West Coast Pop
R158 Country Brothers1	R210 Brazilian Samba	R262 Classic 16 Beat
R159 New Country	R211 Brit Pop Swing	R263 Jazz Pop
R160 Easy Country1	R212 60's 8 Beat	R264 Kool Shuffle
R161 70's Chart Cntry1	R213 Fast Bossa	R265 8 Beat Ballad2
R162 Hoedown	R214 60's Guitar Pop	R266 Chillout
R163 Country Shuffle	R215 70's 8 Beat	R267 16 Beat Ballad1
R164 Schlager Polka2	R216 90's Guitar Pop	R268 Epic Ballad
R165 Polka Pop2	R217 Soft Rock	R269 Easy Ballad
R166 Blue Grass 4	R218 Chart Guita rPop	R270 Cuban Son
R167 Blue Grass 5	R219 Gujira	R271 Bachata
R168 Blue Grass 6	R220 Modern Pop Bld	R272 Forro
R169 Pop Waltz2	R221 Soul R&B	R273 J-Pop Hit
R170 USA March2	R222 R&B Soul Ballad	R274 16 Beat Ballad2
R171 Hully Gully2	R223 Euro Hip Hop	R275 70's Pop Ballad
R172 Tarantella2	R224 Trip Hop	R276 EP Ballad
R173 Limbo Rock2	R225 Ibiza 2004	R277 Power Ballad
R174 Swing Waltz2	R226 Mod Big Band Shfl	R278 Guitar Ballad
R175 Pub Piano2	R227 Modern Big Band	R279 New R&B Ballad
R176 Jazz Waltz 1	R228 Pop Gtr Ballad	R280 Guitar Serenade
R177 Jazz Waltz 2	R229 Ibiza 2002	R281 Organ Ballad
R178 Show Tune2	R230 Euro Trance	R282 Joropo
R179 Polka2	R231 6-8 Trance	R283 Reggaeton
R180 Ober Polka1	R232 Latin DJ's	R284 French Waltz
R181 Party Polka	R233 Bomba	R285 Merengue
R182 Waltz2	R234 Chillout Cafe	R286 12-8 Ballad
R183 Cha Cha2	R235 70's Glam Piano	R287 Norteno
R184 Rumba2	R236 French House	R288 Jig
R185 Jive2	R237 English Waltz	R289 Hawaiian
R186 Pasodoble2	R238 8 Beat Ballad1	R290 Electronica
R187 Samba3	R239 Club House	R291 Funky House
R188 Samba4	R240 House	R292 Club Beat
R189 Schlager Rock 3	R241 Jazz Gtr Club	R293 Retro Club
R190 Schlager Rock 4	R242 Modern Jazz	R294 Mod Chart Pop
R191 Fox Trot2	R243 Acoustic Jazz	R295 MOR Swing
R192 Viennese Waltz2	R244 Cool Jazz Ballad	R296 Retro Pop
R193 Tango3	R245 Modern Jazz Bld	R297 Rumba Flamenco
R194 Tango4	R246 Easy Listening	R298 Trance Pop
R195 German Waltz	R247 Bebop	R299 Orch Big Band2
R196 Carnival	R248 Orch Big Band1	R300 Big Band Fast2
R197 Organ Samba1	R249 Big Band Fast1	R301 Midnight Swing
R198 Reel1	R250 Orchestra Swing1	R302 70's Chart Cntry
R199 Gay Gordons1	R251 Orchestra Swing2	R303 Jazz Waltz Med
R200 Scand Waltz	R252 Rock Cha Cha2	R304 Mariachi Waltz
R201 Pop Classics	R253 Organ Swing	R305 US March
R202 Live 8 Beat	R254 Secret Service	R306 Guitar Rumba
R203 Power Rock	R255 Animation Bld	R307 Slow Blues
R204 Acoustic Rock	R256 Christmas Waltz	R308 Jazz Waltz Fast
R205 Cool 8 Beat	R257 Movie Swing	R309 70's Country Pop
R206 Uptempo 8Beat	R258 Movie Ballad	R310 Dixieland
R207 90's Rock Ballad	R259 Bubblegum Pop	R311 40's Big Band
R208 Chart Rock Shfl	R260 Rock Shuffle	R312 Easy Country2

R313 Country Hits	R365 Sheriff fReggae	R417 8 Beat Rock3
R314 Country 8 Beat	R366 Beguine	R418 Rock Cha Cha3
R315 Sci-fi March	R367 Latin Disco	R419 Gujira2
R316 Tap Dance Swing	R368 Tango5	R420 Rock Ballad2
R317 Orchestral Bolero	R369 Tango6	R421 Alp Ballad3
R318 Gospel Sisters	R370 Rock &Roll	R422 8 Beat Modern2
R319 Italian Waltz	R371 Rock & Roll Shfl	R423 Euro Hip Hop2
R320 6-8 March	R372 Oldies R & R	R424 Disco Pop2
R321 Bluegrass	R373 Detroit Pop1	R425 Disco Philly2
R322 Mod Cntry Bld1	R374 Detroit Pop2	R426 Mod Big BandShfl2
R323 Scand Country1	R375 Worship Med	R427 Modern Big Band2
R324 Scand Country2	R376 Worship Fast	R428 8 Beat Adria2
R325 Scand Shuffle	R377 Piano Boogie	R429 Disco Chocolate2
R326 Worship Slow	R378 Lovely Shuffle	R430 Euro Trance2
R327 Disco Teens	R379 60's Rock & Roll	R431 Euro Beat2
R328 Scand Bugg	R380 Kool Funk	R432 Techno3
R329 Schlager Samba1	R381 Blueberry Blues	R433 Reggae2
R330 Schlager Samba2	R382 Shuffle Blues	R434 Chillout Cafe2
R331 Scand Slow Rock	R383 Mambo 3	R435 Love Song2
R332 Schlager 6-8	R384 Mambo 4	R436 French House2
R333 Schlager Fox	R385 Soul	R437 Jazz Waltz3
R334 Highland Waltz	R386 Skiffle	R438 Classic Piano2
R335 Italian Polka	R387 6-8Soul	R439 Disco Party2
R336 Grupera	R388 Soul Brothers	R440 Club Dance2
R337 Danzon	R389 Happy Reggae	R441 Jazz Gtr Club2
R338 Schlager Alp	R390 Pop Latin	R442 Modern Jazz2
R339 Saeidy	R391 6-8Slow Rock	R443 Polka Pop3
R340 Bhajan	R392 6-8 Modern	R444 USA March3
R341 Hip Hop Groove	R393 6-8 Orchestral	R445 Ober Polka2
R342 Chart Pop1	R394 Schlager Shuffle	R446 Easy Listening2
R343 Organ Groove	R395 Schlager Pop	R447 Fast Band4
R344 Chart Pop2	R396 Schlager Rumba	R448 Fast Band5
R345 New R&B	R397 Euro Pop Organ	R449 Big Band Fast3
R346 Pop R&B	R398 70's French Hit	R450 Orchestra Swing3
R347 Chart R&B	R399 Italian Mazurka	R451 Orchestra Swing4
R348 Modern Shuffle	R400 Bohemian Waltz	R452 Rock Cha Cha4
R349 Blues Rock	R401 Club Pop3	R453 Schlager Rock5
R350 Dream Dance	R402 Schlager Italia2	R454 Organ Samba2
R351 US Chart Hit	R403 Power Rock2	R455 Gay Gordons2
R352 German Rock	R404 Rock'n Roll 3	R456 Swing Waltz3
R353 Schlager Beat	R405 Cool8 Beat2	R457 Reel2
R354 Mellow Hip Hop	R406 British Pop3	R458 Movie Ballad2
R355 Classic Hip Hop	R407 British Pop4	R459 Cool Pop2
R356 New Hip Hop	R408 8 Beat Soul3	R460 Rock Shuffle2
R357 Duranguense	R409 Brit Pop2	R461 Hard Rock3
R358 Laff	R410 Disco Latin2	R462 Hard Rock4
R359 Ober Walzer	R411 Brit Pop Swing2	R463 Club Pop4
R360 Bhangra	R412 Fast Gospel2	R464 8 Beat Pop3
R361 Zouk	R413 Fast Bossa2	R465 8 Beat Pop4
R362 German March	R414 60's Guitar Pop2	R466 60's RockN2
R363 Enka	R415 90's Soul	R467 16 Beat Ballad3
R364 Bolero Lento	R416 Funk Shuffl 3	R468 Straight Rock2

R469 Easy Ballad2	R521 Bluegrass2	R573 80's Pop2
R470 Pop Mambo2	R522 Country Brothers2	R574 60's Soul2
R471 Bossanova2	R523 Scand Country3	R575 Fusion Shuffl3
R472 Forro2	R524 Scand Country4	R576 Fusion Shuffl4
R473 Standard Rock2	R525 Scand Shuffle2	R577 16 Beat Pop3
R474 16 Beat Ballad3	R526 70's Chart Cntry2	R578 16 Beat Pop4
R475 Contemp Rock2	R527 Pub Piano3	R579 60's Rock & Roll2
R476 EP Ballad2	R528 Polka3	R580 Brit Rock Pop2
R477 Fusion3	R529 Samba5	R581 Blueberry Blues2
R478 Fusion4	R530 Samba6	R582 Skiffle2
R479 Funk2	R531 Jive3	R583 Mambo5
R480 Guitar Serenade2	R532 Fox Trot3	R584 Mambo6
R481 Organ Ballad2	R533 Pasodoble3	R585 Soul2
R482 Joropo2	R534 Highland Waltz2	R586 Classic 8Beat2
R483 Reggaeton2	R535 Schlager Polka3	R587 Bolero2
R484 French Waltz2	R536 Grupera2	R588 Soul Brothers2
R485 Merengue2	R537 Danzon2	R589 Happy Reggae2
R486 Pop Ballad2	R538 Schlager Alp2	R590 Pop Latin2
R487 Norteno2	R539 Saeidy2	R591 6-8Slow Rock2
R488 Jig2	R540 Bhajan2	R592 6-8 Modern2
R489 Hawaiian2	R541 Hip Hop Groove2	R593 6-8 Orchestral2
R490 70's Disco3	R542 Hip Shuffle2	R594 Slow Soul2
R491 70's Disco4	R543 Organ Groove2	R595 Piano Ballad2
R492 Club Beat2	R544 Chart Pop3	R596 Disco Trot2
R493 Rap2	R545 Country Ballad2	R597 Disco Hands2
R494 Disco House2	R546 Romantic Ballad2	R598 UK Pop2
R495 MOR Swing2	R547 Analog Ballad2	R599 Italian Mazurka2
R496 Retro Pop2	R548 Electro Pop2	R600 Bohemian Waltz2
R497 Calypso2	R549 Blues Rock2	
R498 Trance Pop2	R550 Rave2	
R499 Big Band Shuffle4	R551 US Chart Hit2	
R500 Big Band Shuffle5	R552 German Rock2	
R501 Big Band Shuffle6	R553 Schlager Beat2	
R502 Finger Pickin2	R554 Disco Funk2	
R503 Hully Gully3	R555 Disco Samba2	
R504 Viennese Waltz3	R556 New Hip Hop2	
R505 Show Tune3	R557 Cat Groove3	
R506 Rumba3	R558 Laff2	
R507 Schlager Rock4	R559 Pop Waltz3	
R508 Jazz Waltz Fast2	R560 Bhangra2	
R509 Country Ballad3	R561 Twist2	
R510 Dixieland2	R562 German March2	
R511 French Jazz2	R563 Enka2	
R512 Easy Country3	R564 Bolero Lento2	
R513 Country Hits2	R565 Midnight Swing2	
R514 Country 8 Beat2	R566 French Jazz3	
R515 Blue Grass7	R567 Latin Party Pop2	
R516 Blue Grass8	R568 Tango7	
R517 Blue Grass9	R569 Tango8	
R518 Gospel Sisters2	R570 Parranda2	
R519 Italian Waltz2	R571 Latin Rock2	
R520 Limbo Rock3	R572 Acoustic Rock2	

Lista ścieżek demo

D01 Jockey Club	D53 When The Saints Go Marchin In
D02 Yang On A Horse To Transport Grain	D54 Oh Susanna
D03 Steping Higher And Higher	D55 Moon River
D04 US Taihu Lake	D56 ABC Word
D05 Osmanthus everywhere open in August	D57 We Wish You A Merry Christmas
D06 Central government	D58 Six Little Ducks
D07 Tathagata	D59 Mary Had A Little Lamb
D08 Aobaoshan	D60 Moonlight Bay
D09 Yangming Chunxiao	D61 American Beauty Rag
D10 Jasmine	D62 Crazy Arms
D11 Jaunty	D63 Before the Next TearDrop Falls
D12 Good Day	D64 Waltz Op64 No.1 By Chopin
D13 Childhood	D65 Piano Sonata
D14 Zi ZhuTiao	D66 The Beautiful Blue Danube
D15 Auspicious TREBLE	D67 The Crave
D16 Trials of a long journey always intelligence	D68 Tea for Two
D17 In that faraway place	D69 Sleigh Ride
D18 Prairie Song	D70 Rudolph The Red Nosed Reindeer
D19 Look at home	D71 Santa Claus Is Coming To Town
D20 On affordable	D72 Traumerei
D21 You set off to the chapeau	D73 Clock
D22 The Qinghai-Tibet Plateau	D74 Humoresque
D23 Same Song	D75 Frohlicher Landmann
D24 Hill Road Bending 18	D76 Canon
D25 Farewell	D77 Waltz
D26 Happy home	D78 Greensleeves
D27 Place peach bloom	D79 Polka
D28 New Century	D80 Arabesque
D29 Gave me a Red Rose	
D30 Kangding Love Song	
D31 Dansolde	
D32 Beijing Tune	
D33 Yi Jian Mei	
D34 Rumanxilou	
D35 Goodbye Dabieshan	
D36 Happy Chinese New Year	
D37 Dreams Of Riverboat	
D38 The Penghu bending Grandmother	
D39 Heart-Throb	
D40 Shepherd Front	
D41 Hotel Pacific	
D42 1900's Madness	
D43 Family Restaurant	
D44 To Flush Waves Johnny	
D45 Zimbada? hand?	
D46 Paradise	
D47 Birthday	
D48 Carmen	
D49 Cavatina	
D50 Jingle Bells	
D51 Silent Night	
D52 O Christmas Santa Claus	

Tabela akordów

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Chord Type Root	M	m	7	m7	dim7	M7	m7 ⁻⁵	dim
C								
C [♯] /(D [♭])								
D								
(D [♯])/E [♭]								
E								
F								
F [♯] /(G [♭])								
G								
(G [♯])/A [♭]								
A								
(A [♯])/B [♭]								
B								

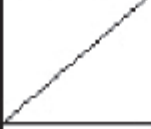 
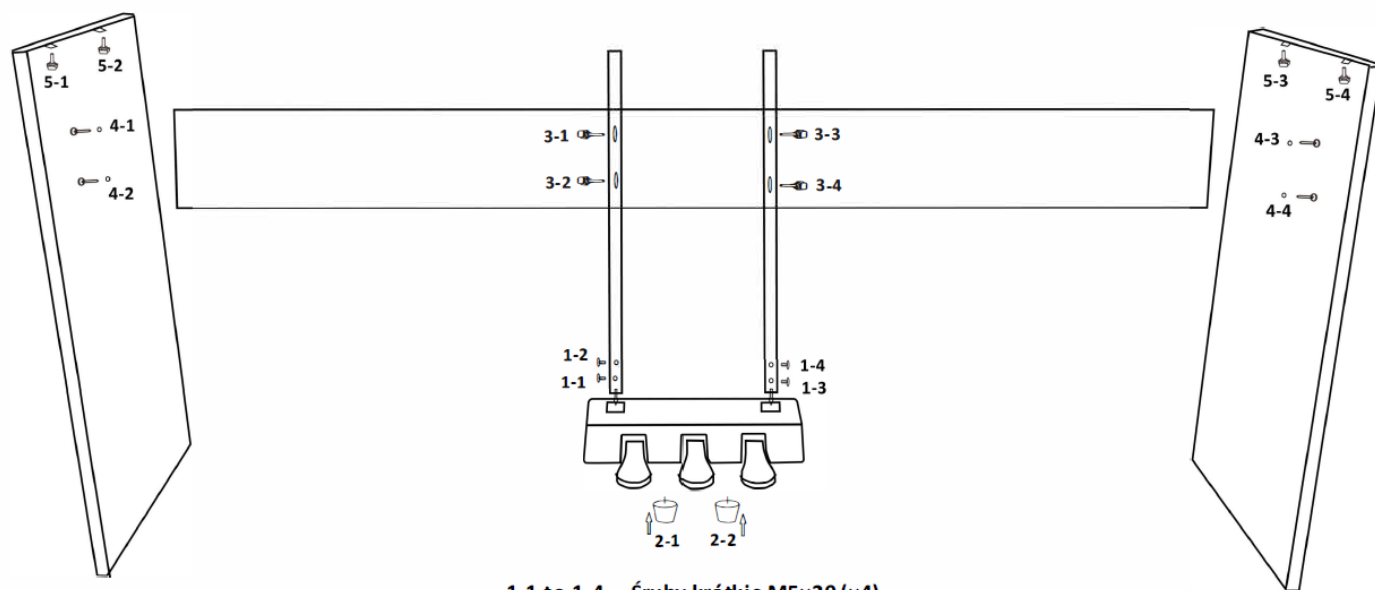 
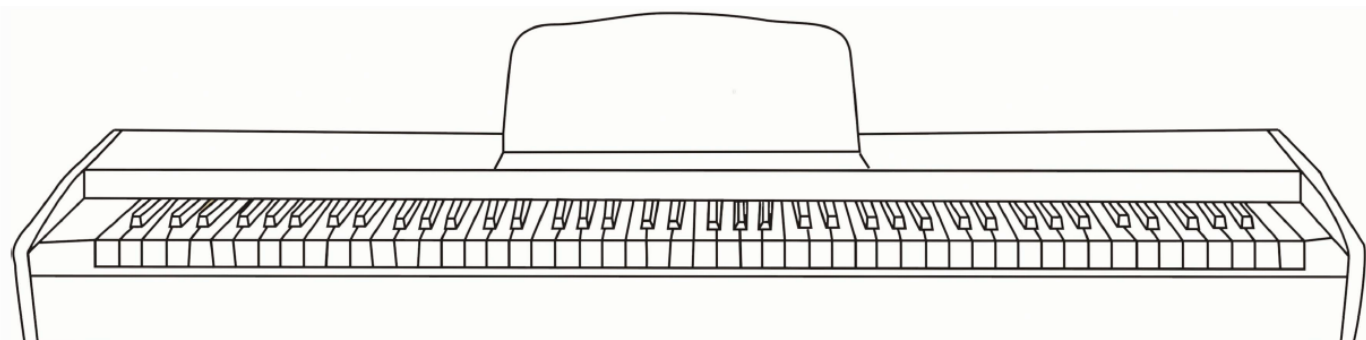 
Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C [♯] /(D [♭])							
D							
(D [♯])/E [♭]							
E							
F							
F [♯] /(G [♭])							
G							
(G [♯])/A [♭]							
A							
(A [♯])/B [♭]							
B							

Tabela dźwięków klawiatury perkusyjnej

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

Informacja o zużytych sprzęcie elektrycznym i elektronicznym

Głównym celem regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstałych ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczonego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.

Montaż

- 1-1 to 1-4 : Śruby krótkie M5×20 (×4)
 2-1 to 2-2 : Cylindryczne wsporniki (×2)
 3-1 to 3-4 : Pokręta montażowe M6×40 (×4)
 4-1 to 4-4 : Śruby długie M5×45 (×4)
 5-1 to 5-4 : Pokręta montażowe M6×20 (×4)

ENGLISH**Table of Contents**

Safety rules.....	25
Maintenance	25
Structure and operation	26
Information about used electrical and electronic equipment	45
Assembly	46

Safety rules

 
	Please read the user manual in detail before use. Please also keep it for future reference. The manual contains rules for the safe use of the device.
	After receiving the product, please unpack and check whether it is complete and whether there is any damage caused by transportation. If there is damage caused by transportation, please do not use this product and contact the dealer or manufacturer as soon as possible.
	WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.
	The product described in this manual comply with European directives and it is therefore CE marked.
	Keep the device away from children and unqualified persons. The manufacturer is not liable for damage caused by improper use.
	Before use, make sure the housing is not damaged.
	Use only the dedicated AC/DC power adapter included with the product! Disconnect the product from the power supply by pulling on the power plug - do not pull directly on the power cord! Disconnect the device from the power supply before removing the housing or performing maintenance. If you find the power cord is damaged - do not use it!
	Indoor device, use in a well-ventilated room, keep away from moisture. Do not expose the product to direct sunlight. Do not store or use the device near a fire source!
	Do not expose the device to high temperatures!
	In the event of a malfunction, disconnect the device from the power supply immediately!

Maintenance

 
1. The device may only be used by qualified personnel, damage caused by improper use or attempted repair is not covered by the warranty. There are no service parts inside the packaging, repairs may only be carried out by authorized service center.
2. Do not allow the product to come into contact with oil, grease or any similar liquid!
3. Regular cleaning allows of long term use and maintains proper operations. Use soft, dry cloth to clean the product.

Structure and operation

 
Control panel

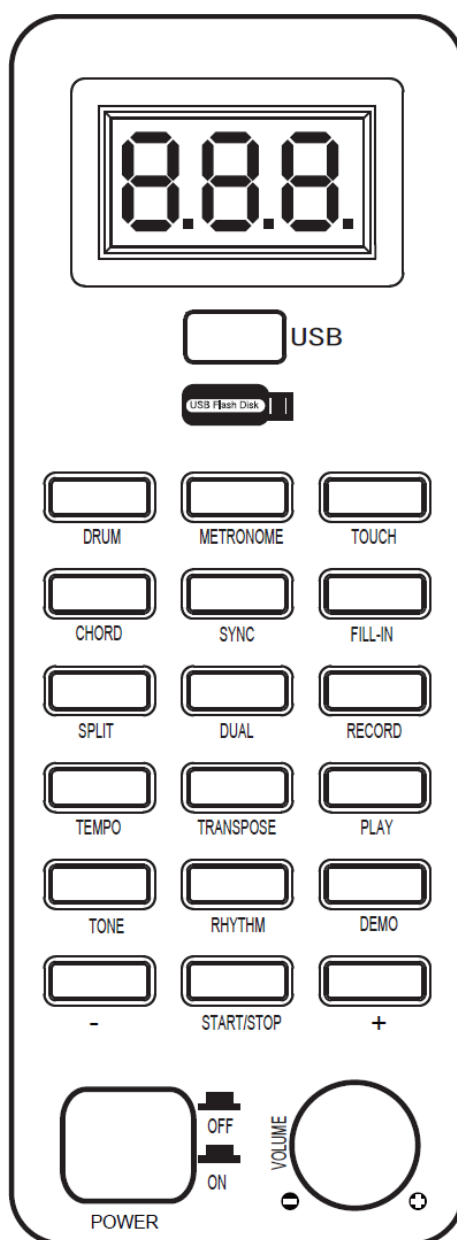

- | | |
|----------------------|---------------------------|
| 1. LED display. | 12. TEMPO button. |
| 2. USB-A port - USB. | 13. TRANSPOSE button. |
| 3. DRUM button. | 14. PLAY button. |
| 4. METRONOME button. | 15. TONE button. |
| 5. TOUCH button. | 16. RHYTHM button. |
| 6. CHORD button. | 17. DEMO button. |
| 7. SYNC button. | 18. "-" button. |
| 8. FILL-IN button. | 19. START/STOP button. |
| 9. SPLIT button. | 20. "+" button. |
| 10. DUAL button. | 21. POWER button. |
| 11. RECORD button. | 22. VOLUME potentiometer. |

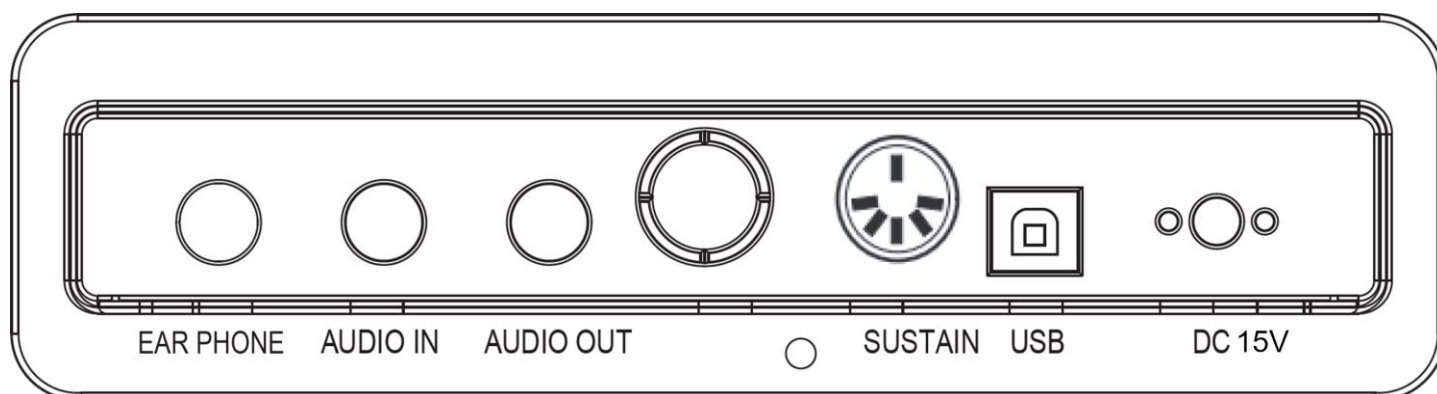Back panel with ports

1. 6.35 mm headphone jack output - EAR PHONE.
2. 6.35 mm audio jack input - AUDIO IN.
3. 6.35 mm audio jack output - AUDIO OUT.
4. MIDI input (5-pin DIN) - SUSTAIN.
5. USB-B port - USB.
6. DC 15V power input - DC 15V.

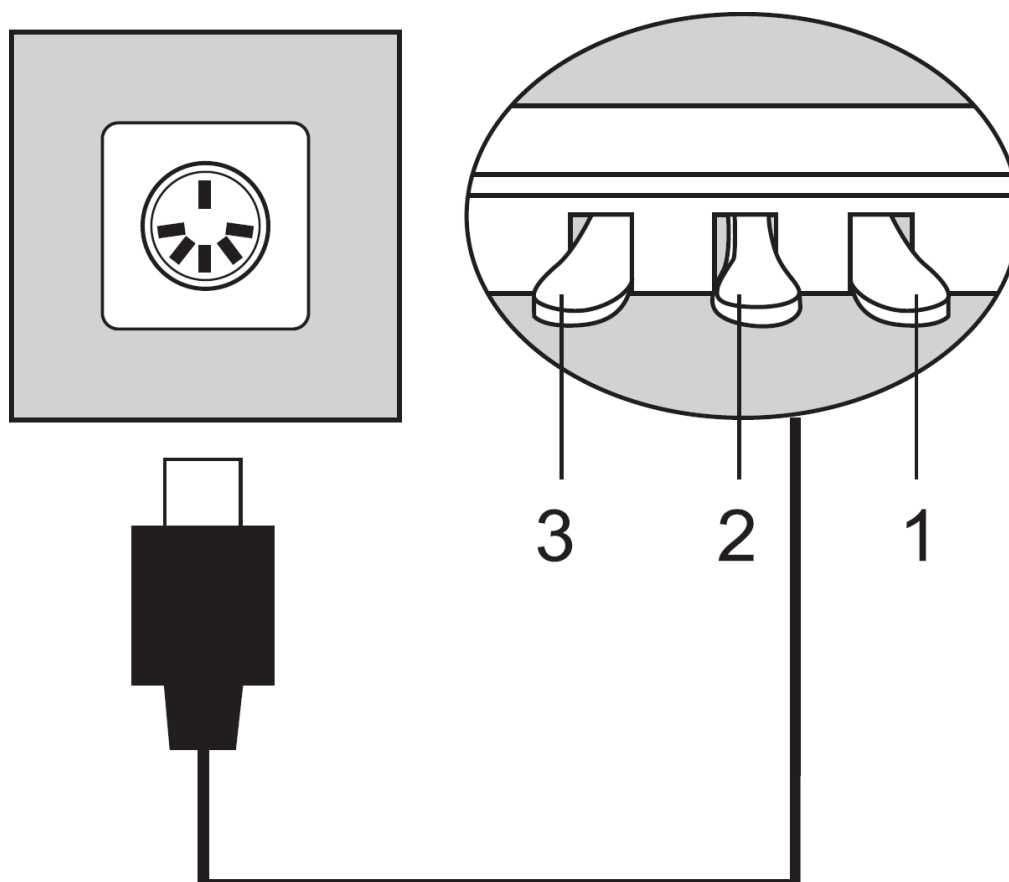

1. Sustain pedal.
2. Sostenuto pedal.
3. Una corda pedal.

Device preparation

- AC/DC power adapter

Please use the dedicated AC/DC power adapter supplied with this device. Using an incorrect power adapter may damage the instrument. Do not place the power adapter and/or power cable near a heat source. Do not bend the cable excessively or place heavy objects on it to avoid damage. Do not insert the power adapter plug into a multi-purpose electrical outlet. If you do not use the instrument for a long time, turn off the device and remove the power adapter plug from the outlet. Pull the plug - do not pull on the power cable! The power adapter may become warm during prolonged use of the device - it is normal. Smoke, strange odors and/or overheating of the device are signs of a potential hazard - if it occurs: turn off the power, disconnect the power adapter and contact your distributor.

- Audio input usage

Insert the audio cable plug (not included) into the AUDIO IN port (6.35 mm jack) and connect the other end of the cable to an external audio device, such as a laptop, mobile phone or MP3 player. The sound from the external source device will be played through the instrument's built-in speakers.

- Audio output usage

Insert the audio cable plug (not included) into the AUDIO OUT port (6.35 mm jack) and the other end of the cable into an external audio device, such as a speaker or active loudspeaker. The sound of the instrument will be played through the external audio device.

- Headphone usage

Insert the headphone cable plug (not included) into the EAR PHONE output (6.35 mm jack) located on the back panel of the instrument. Using headphones while using the device allows you to avoid disturbing others and allows you to practice playing at night.

- USB-B port usage

Insert the USB-B plug of the USB cable (not included) into the USB port (USB-B) on the back panel of the instrument and connect the other end of the USB cable to a laptop, desktop computer or other device.

Basic operation

- Power on/off

After connecting the AC/DC power adapter, press the POWER button - the LED display will light up and the device will enter standby mode. You can start using the instrument. To turn off the device, press the POWER button again.



- Volume

Use the VOLUME potentiometer to increase (turn clockwise) or decrease (turn counterclockwise) the master volume.

- Tone selection

Press the TONE button to enter tone selection mode. Use the "+" and "-" buttons to select a tone (see: Tone list). You can choose from tones 1-880. The selected tone number will appear on the LED display.

- Rhythm selection

Press the RHYTHM button to enter rhythm selection mode. Use the "+" and "-" buttons to select a rhythm (see: Rhythm list). You can choose from rhythms 1-600. The selected rhythm number will appear on the LED display. Press the START/STOP button to start playing the selected rhythm. While the rhythm is playing, press the FILL-IN button to add a transition to the rhythm. Press the START/STOP button again to stop playing the selected rhythm.

- Tempo

Press the TEMPO button to enter tempo adjustment mode. Use the "+" and "-" buttons to select the tempo value. The tempo range is 30-300.

- Chord accompaniment

Press the START/STOP button to start playing the selected rhythm. While the rhythm is playing, press the CHORD button to enter chord accompaniment mode. Play the selected chords (see: Chord table) on keys 1-22 from the left (chord zone) and you will hear the corresponding accompaniment. Press the CHORD button again to exit chord accompaniment mode.

- Synchronization of rhythm and accompaniment playback

While playing a rhythm, press the CHORD button to enter chord accompaniment mode. Select the accompaniment by playing the selected chords (see: Chord table) on keys 1-22 from the left (chord zone). In chord accompaniment mode, press the SYNC button to enter the rhythm and accompaniment synchronization mode. Play the selected chords (see: Chord table) on keys 1-22 from the left (chord zone), and the accompaniment will start playing automatically. Press the START/STOP button to turn off the synchronization of the rhythm and accompaniment.

- Demo track selection

Press the DEMO button to enter demo track selection mode. Use the "+" and "-" buttons to select a demo track (see: Demo track list). You can choose from demo tracks 1-80. The selected demo track number will appear on the LED display. Press the DEMO button or the START/STOP button again to stop playback of the selected demo track and exit demo track selection mode.

- Keystroke dynamics

Press the TOUCH button to turn on the keystroke dynamics feature. Press the TOUCH button again to turn off the keystroke dynamics feature.

- Percussion keyboard

Press the DRUM button to change the scale keyboard to a percussion keyboard (see: Percussion keyboard sound table). Press the DRUM button again to turn the feature off.

- Dual tone

Press the TONE button to enter tone selection mode. Use the "+" and "-" buttons to select the main tone (see: Tone list). Press the DUAL button to enter the second tone selection mode. Use the "+" and "-" buttons to select the second tone (see: Tone list).

- Keyboard tone split

Press the TONE button to enter tone selection mode. Use the "+" and "-" buttons to select the main tone (see: Tone list). Press the SPLIT button to enter keyboard tone split mode. Use the "+" and "-" buttons to select the second tone (see: Tone list). Press the SPLIT button again to turn off keyboard tone split mode.

In standby mode, press the SPLIT button to enter the keyboard split point selection mode. Use the "+" and "-" buttons to select the keyboard split point.

- Metronome

Press the METRONOME button to turn on the metronome. Use the "+" and "-" buttons to adjust the tempo of the metronome. Press the METRONOME button again to turn off the metronome.

- Recording mode

Press the RECORD button to enter recording mode. Play the keys - the maximum number of recordings is 250. Press the PLAY button to play back the recording at any time. Press the RECORD button again to clear the recording memory and re-enter recording mode.

- Transposition

Press the TRANSPOSE button to enter pitch shift mode. Use the "+" and "-" buttons to increase or decrease the pitch. The pitch range is from -6 to +6.

- MP3 player

Insert a USB flash drive with MP3 audio files into the USB-A port on the control panel. The device will automatically enter MP3 player mode. Use the "+" and "-" buttons to select an audio file. Press the START/STOP button to play or stop playback of the selected audio file.

Tone list

T001 Acoustic Grand Piano	T053 Choir Aahs	T105 Sitar
T002 Bright Acoustic Piano	T054 Voice Oohs	T106 Banjo
T003 Electric Grand Piano	T055 Synth Voice	T107 Shamisen
T004 Honky-tonk Piano	T056 Orchestra Hit	T108 Koto
T005 Rhodes Piano	T057 Trumpet	T109 Kalimba
T006 Chorused Piano	T058 Trombone	T110 Bagpipe
T007 Harpsichord	T059 Tuba	T111 Fiddle
T008 Clavichord	T060 Muted Trumpet	T112 Shanai
T009 Celesta	T061 French Horn	T113 Tinkle Bell
T010 Glockenspiel	T062 Brass Section	T114 Agogo
T011 Music box	T063 Synth Brass 1	T115 Steel Drums
T012 Vibraphone	T064 Synth Brass 2	T116 Woodblock
T013 Marimba	T065 Soprano Sax	T117 Taiko Drum
T014 Xylophone	T066 Alto Sax	T118 Melodic Tom
T015 Tubular Bell	T067 Tenor Sax	T119 Synth Drum
T016 Dulcimer	T068 Baritone Sax	T120 Reverse Cymbal
T017 Drawbar Organ	T069 Oboe	T121 Guitar Fret Noise
T018 Percussive Organ	T070 English Horn	T122 Breath Noise
T019 Rock Organ	T071 Bassoon	T123 Seashore
T020 Church Organ	T072 Clarinet	T124 Bird Tweet
T021 Reed Organ	T073 Piccolo	T125 Telephone Ring
T022 Accordion	T074 Flute	T126 Helicopter
T023 Harmonica	T075 Recorder	T127 Applause
T024 Tango Accordion	T076 Pan Flute	T128 Gunshot
T025 Acoustic Guitar (nylon)	T077 Bottle Blow	T129 Yong Gin
T026 Acoustic Guitar (steel)	T078 Shakuhachi	T130 Zheng
T027 Electric Guitar (jazz)	T079 Whistle	T131 Zhong Ruan
T028 Electric Guitar (clean)	T080 Ocarina	T132 Pi Pa
T029 Electric Guitar (muted)	T081 Lead 1 (square)	T133 Big Souna
T030 Overdriven Guitar	T082 Lead 2 (sawtooth)	T134 Souna
T031 Distortion Guitar	T083 Lead 3 (calliope lead)	T135 Er Hu
T032 Guitar Harmonics	T084 Lead 4 (chiff lead)	T136 Yue Hu
T033 Acoustic Bass	T085 Lead 5 (charang)	T137 Di Zi
T034 Electric Bass(finger)	T086 Lead 6 (voice)	T138 Bong Di
T035 Electric Bass (pick)	T087 Lead 7 (fifths)	T139 Koto
T036 Fretless Bass	T088 Lead 8 (bass+lead)	T140 Qu Di
T037 Slap Bass 1	T089 Pad 1 (new age)	T141 Jungle Bass
T038 Slap Bass 2	T090 Pad 2 (warm)	T142 Koto 2
T039 Synth Bass 1	T091 Pad 3 (polysynth)	T143 Marimba 3
T040 Synth Bass 2	T092 Pad 4 (choir)	T144 Tsugaru
T041 Violin	T093 Pad 5 (bowed)	T145 Kawala 1
T042 Viola	T094 Pad 6 (metallic)	T146 Attack Clav. 1
T043 Cello	T095 Pad 7 (halo)	T147 Crystal
T044 Contrabass	T096 Pad 8 (sweep)	T148 Bright String
T045 Tremolo Strings	T097 FX 1 (rain)	T149 Clavi 2
T046 Pizzicato Strings	T098 FX 2 (soundtrack)	T150 Chorus Guitar.
T047 Orchestral Harp	T099 FX 3 (crystal)	T151 Barafon
T048 Timpani	T100 FX 4 (atmosphere)	T152 Jazz Organ
T049 String Ensemble 1	T101 FX 5 (brightness)	T153 Indian Flute
T050 String Ensemble 2	T102 FX 6 (goblins)	T154 Mute Barafon 1
T051 Synth Strings 1	T103 FX 7 (echoes)	T155 Dual Horns 1
T052 Synth Strings 2	T104 FX 8 (sci-fi)	T156 Electoric Giutar (Clean) 2

T157 Clavi 3	T209 Mute Barafon 3	T261 Soft Guitar 5
T158 Soft Sax 1	T210 Dual Horns 2	T262 Nay 3
T159 Electric Vraphone	T211 Xylophone 2	T263 Synth Harpsi. 3
T160 Didgeridoo 1	T212 Didgeridoo 3	T264 Wind Organ 3
T161 Barafon 2	T213 Wind Organ 2	T265 Shanai 2
T162 Tubular Bells 2	T214 Church Bells	T266 Woodblock 6
T163 Soft Accord	T215 Tsugaru 3	T267 Electric Vraphone 4
T164 Barafon 3	T216 Nay	T268 Kawala 5
T165 Clavi 4	T217 Guitar Pinch 2	T269 Grow Guitar 2
T166 Nay	T218 Grow Guitar	T270 Grow Guitar 3
T167 Oct Harp	T219 Indian Flute 3	T271 Steel Bell 6
T168 Attack Barafon	T220 Synth Harpsi. 2	T272 Wind Organ 4
T169 Clavi 5	T221 Soft Sax 2	T273 Soft Accord 2
T170 Kalimba 2	T222 Xylophone 3	T274 Kalimba 3
T171 Tsugaru 2	T223 English Horn 2	T275 Twin Bones 3
T172 Shamisen 2	T224 Soft Guitar 3	T276 Church Bells 2
T173 Woodblock 2	T225 Castanets 2	T277 Koto 5
T174 Crystal 2	T226 Soft Guitar 4	T278 Attack Barafon 2
T175 Shamisen 3	T227 Hard Vibe 2	T279 Mute Barafon 5
T176 Synth Harpsi. 1	T228 Reed Horn	T280 Nay 4
T177 Jazz Organ 1	T229 Nay 2	T281 Jungle Bass 2
T178 Viola Attack	T230 Bari & Tenor	T282 Soft Accord 3
T179 Viola Attack 2	T231 Kawala 3	T283 Hard Vibe 3
T180 Hard Barsoon 1	T232 Indian Flute 4	T284 Soft Clav.
T181 Mute Barafon 2	T233 Didgeridoo 4	T285 Bag Pipe 2
T182 Bodhran	T234 Attack Clav. 2	T286 Oct Harp 2
T183 Kawala 2	T235 Marimba 4	T287 Woodblock 7
T184 Didgeridoo 2	T236 Bari & Tenor 2	T288 Mute Barafon 6
T185 Soft Guitar 1	T237 Slow Violin	T289 Guitar Pinch 4
T186 Suona	T238 Organ Flute	T290 Dulcimer 3
T187 Twin Bones	T239 Jazz Organ 4	T291 Soft Sax 4
T188 Jazz Organ 2	T240 Electric Vraphone 3	T292 Electric Vraphone 5
T189 Woodblock 3	T241 Dual Horns 3	T293 Tsugaru 6
T190 Soft Santur	T242 Indian Flute 5	T294 Reed Horn 2
T191 Koto 3	T243 English Horn 3	T295 Castanets 3
T192 Castanets 1	T244 Dulcimer 2	T296 Tron Flute 2
T193 Viola Attack 3	T245 Koto 4	T297 Attack Clav. 3
T194 Woodblock 4	T246 Tubular Bells 3	T298 Bari & Tenor 3
T195 Bright String 2	T247 Tsugaru 4	T299 Indian Flute 6
T196 Twin Bones 2	T248 Tsugaru 5	T300 Soft Guitar 6
T197 Tenor Sax 2	T249 Mute Barafon 4	T301 Nay 5
T198 Wind Organ	T250 Dual Horns 4	T302 Didgeridoo 5
T199 Tron Flute	T251 Soft Sax 3	T303 Marimba 5
T200 Bodhran 2	T252 Bodhran 3	T304 Attack Clav. 4
T201 Tron Flute	T253 Guitar Pinch 3	T305 Jungle Bass 3
T202 Jazz Organ 3	T254 Crystal 3	T306 Hard Barsoon 2
T203 Soft Santur 2	T255 Grow Guitar	T307 Suona 2
T204 Woodblock 5	T256 Jazz Organ 5	T308 Hard Vibe 4
T205 Shamisen 4	T257 Attack Barafon	T309 Bag Pipe 3
T206 Indian Flute 2	T258 Xylophone 4	T310 Soft Accord 4
T207 Electric Vraphone 2	T259 Soft Santur 3	T311 Attack Barafon 3
T208 Soft Guitar 2	T260 Kawala 4	T312 Hard Barsoon 3

T313 Dulcimer 4	T365 Wind Organ 6	T417 Hard Barsoon 5
T314 Twin Bones 4	T366 Tron Flute 3	T418 Dulcimer 7
T315 Soft Sax 5	T367 Soft Sax 6	T419 Soft Accord 6
T316 Shamisen 5	T368 Suona 4	T420 Church Bells 4
T317 Suona 3	T369 Soft Guitar 7	T421 Shamisen 7
T318 Bodhran 4	T370 Hard Vibe 6	T422 Synth Harpsi. 4
T319 Shamisen 6	T371 Jazz Organ 7	T423 Crystal 5
T320 Electric Vraphone 6	T372 Grow Guitar 5	T424 Kawala 9
T321 Tsugaru 7	T373 Xylophone 5	T425 Dual Horns 8
T322 Oct Harp 3	T374 Bag Pipe 5	T426 Clavi 8
T323 Kalimba 4	T375 Bag Pipe 6	T427 Electric Vraphone 7
T324 Soft Clav. 2	T376 Clavi 7	T428 Castanets 5
T325 English Horn 3	T377 Hard Vibe 7	T429 Tenor Sax 5
T326 Didgeridoo 6	T378 Kawala 7	T430 Tenor Sax 6
T327 Barafon 4	T379 Shanai 3	T431 Didgeridoo 10
T328 Indian Flute 7	T380 Suona 5	T432 Kalimba 7
T329 Organ Flute 2	T381 Jungle Bass 4	T433 English Horn 8
T330 Soft Santur 4	T382 Grow Guitar 6	T434 Guitar Pinch 6
T331 Mute Barafon 7	T383 Bag Pipe 7	T435 Hard Vibe 8
T332 Nay 6	T384 Crystal 4	T436 Mute Barafon 13
T333 Hard Vibe 5	T385 Guitar Pinch 5	T437 Tenor Sax 7
T334 Bari & Tenor 4	T386 Woodblock 8	T438 Bag Pipe 8
T335 Bag Pipe 4	T387 Soft Sax 7	T439 Shanai 5
T336 Tenor Sax 3	T388 Attack Barafon 4	T440 English Horn 9
T337 Organ Flute 3	T389 Barafon 6	T441 Didgeridoo 11
T338 Dulcimer 5	T390 Organ Flute 4	T442 Organ Flute 5
T339 Twin Bones 5	T391 Mute Barafon 9	T443 Attack Barafon 5
T340 Grow Guitar 4	T392 Shanai 4	T444 Jungle Bass 5
T341 Kalimba 5	T393 Soft Clav. 3	T445 Barafon 7
T342 Oct Harp 4	T394 Oct Harp 5	T446 Soft Santur 6
T343 Nay 7	T395 Tron Flute 4	T447 Slow Violin 3
T344 Dual Horns 5	T396 Bright String 3	T448 Hard Barsoon 6
T345 Didgeridoo 7	T397 Jazz Organ 8	T449 Didgeridoo 12
T346 English Horn 4	T398 Mute Barafon 10	T450 Kalimba 8
T347 Kawala 6	T399 Slow Violin 2	T451 Electoric Giutar (Clean) 3
T348 Marimba 6	T400 Soft Sax 8	T452 Dulcimer 8
T349 Barafon 5	T401 English Horn 5	T453 Reed Horn 5
T350 Soft Accord 5	T402 Reed Horn 4	T454 Bodhran 5
T351 Mute Barafon 8	T403 Indian Flute 8	T455 Soft Sax 9
T352 Dual Horns 6	T404 Castanets 4	T456 Mute Barafon 14
T353 Church Bells 3	T405 English Horn 6	T457 Guitar Pinch 7
T354 Wind Organ 5	T406 Tron Flute 5	T458 Wind Organ 7
T355 Attack Clav. 5	T407 English Horn 7	T459 Guitar Pinch 8
T356 Jazz Organ 6	T408 Hard Barsoon 4	T460 Indian Flute 9
T357 Reed Horn 3	T409 Dulcimer 6	T461 Bag Pipe 9
T358 Tenor Sax 4	T410 Xylophone 6	T462 Crystal 6
T359 Chorus Guitar. 2	T411 Mute Barafon 11	T463 Twin Bones 6
T360 Didgeridoo 8	T412 Nay 8	T464 Crystal 7
T361 Soft Santur 5	T413 Mute Barafon 12	T465 Soft Guitar 8
T362 Clavi 6	T414 Dual Horns 7	T466 Guitar Pinch 9
T363 Kalimba 6	T415 Kawala 8	T467 Attack Clav. 6
T364 Didgeridoo 9	T416 Soft Clav. 4	T468 Bodhran 6

T469 Suona 6	T521 Clavi 10	T573 Clavi 11
T470 Chorus Guitar. 3	T522 Wind Organ 8	T574 Viola Attack 6
T471 Slow Violin 4	T523 Synth Harpsi. 6	T575 Synth Harpsi. 7
T472 Clavi 9	T524 Bari & Tenor 5	T576 Jungle Bass 7
T473 Castanets 6	T525 Steel Bell 9	T577 Koto 8
T474 Slow Violin 5	T526 Soft Sax 14	T578 Church Bells 6
T475 Jazz Organ 9	T527 Castanets 8	T579 Soft Accord 9
T476 Jazz Organ 10	T528 Didgeridoo 15	T580 Tubular Bells 5
T477 Electric Vraphone 8	T529 Soft Sax 15	T581 Bag Pipe 12
T478 Bodhran 7	T530 Mute Barafon 16	T582 Grow Guitar 7
T479 Steel Bell 7	T531 Soft Guitar 10	T583 Mute Barafon 18
T480 Synth Harpsi. 5	T532 Soft Accord 8	T584 Soft Accord 10
T481 Marimba 7	T533 Wind Organ 9	T585 Electoric Giutar (Clean)6
T482 Marimba 8	T534 Didgeridoo 16	T586 Viola Attack 7
T483 Attack Barafon 6	T535 Electoric Giutar (Clean)5	T587 Kawala 11
T484 Castanets 7	T536 English Horn 10	T588 Soft Santur 7
T485 Hard Vibe 9	T537 Soft Sax 16	T589 Bright String 5
T486 Tron Flute 6	T538 Soft Guitar 11	T590 Electoric Giutar (Clean)7
T487 Soft Accord 7	T539 Hard Barsoon 8	T591 Attack Barafon 8
T488 Shanai 6	T540 Kalimba 9	T592 Electric Vraphone 9
T489 Woodblock 9	T541 Koto 7	T593 Steel Bell 10
T490 Soft Sax 10	T542 Soft Clav. 6	T594 Mute Barafon 19
T491 Slow Violin 6	T543 Xylophone 7	T595 Chorus Guitar. 7
T492 Soft Sax 11	T544 Soft Clav. 7	T596 Soft Clav. 10
T493 Chorus Guitar. 4	T545 Church Bells 5	T597 Viola Attack 8
T494 Attack Clav. 7	T546 Kawala 10	T598 Church Bells 7
T495 Reed Organ 2	T547 Didgeridoo 17	T599 Soft Santur 8
T496 Viola Attack 4	T548 Kalimba 10	T600 Wind Organ 10
T497 Koto 6	T549 Castanets 9	T601 Indian Flute 11
T498 Tsugaru 8	T550 Didgeridoo 18	T602 Tsugaru 10
T499 Bag Pipe 10	T551 Bodhran 8	T603 Dulcimer 10
T500 Attack Clav. 8	T552 English Horn 11	T604 Grow Guitar 8
T501 Tron Flute 7	T553 Hard Vibe 10	T605 Tubular Bells 6
T502 Marimba 9	T554 Bodhran 9	T606 Jungle Bass 8
T503 Bag Pipe 11	T555 Indian Flute 10	T607 Dulcimer 11
T504 Hard Barsoon 7	T556 Dulcimer 9	T608 Organ Flute 6
T505 Mute Barafon 15	T557 Soft Clav. 8	T609 Nay 10
T506 Soft Sax 12	T558 Viola Attack 5	T610 Attack Barafon 9
T507 Attack Clav. 9	T559 Attack Harp 1	T611 English Horn 12
T508 Jazz Organ 11	T560 Mute Barafon 17	T612 Suona 7
T509 Soft Guitar 9	T561 Tenor Sax 8	T613 Reed Organ 5
T510 Didgeridoo 13	T562 Twin Bones 7	T614 Shamisen 8
T511 Bright String 4	T563 Chorus Guitar. 6	T615 Koto 9
T512 Electoric Giutar (Clean)4	T564 Shanai 7	T616 Shamisen 9
T513 Tsugaru 9	T565 Kalimba 11	T617 Church Bells 8
T514 Nay 9	T566 Jungle Bass 6	T618 Nay 11
T515 Reed Horn 6	T567 Attack Barafon 7	T619 Hard Barsoon 9
T516 Didgeridoo 14	T568 Soft Clav. 9	T620 Slow Violin 7
T517 Soft Clav. 5	T569 Tubular Bells 4	T621 Soft Sax 17
T518 Soft Sax 13	T570 Reed Organ 4	T622 Grow Guitar 9
T519 Reed Organ 3	T571 Guitar Pinch 10	T623 Attack Harp 2
T520 Steel Bell 8	T572 Bodhran 10	T624 Suona 8

T625 Nay 12	T677 Tron Flute 8	T729 Kawala 16
T626 Synth Harpsi. 8	T678 Attack Clav. 11	T730 Kawala 17
T627 Didgeridoo 19	T679 Dual Horns 9	T731 Bag Pipe 13
T628 Nay 13	T680 Wind Organ 12	T732 Electoric Giutar (Clean) 10
T629 Synth Harpsi. 9	T681 Twin Bones 8	T733 Tron Flute 9
T630 Soft Sax 18	T682 Reed Organ 6	T734 Kawala 18
T631 Koto 10	T683 Organ Flute 9	T735 Tron Flute 10
T632 Kalimba 12	T684 Slow Violin 9	T736 Tubular Bells 8
T633 Suona 9	T685 Dulcimer 12	T737 Synth Harpsi. 13
T634 Oct Harp 6	T686 Tsugaru 11	T738 Soft Santur 13
T635 Koto 11	T687 Wind Organ 13	T739 Tubular Bells 9
T636 Shanai 8	T688 Soft Santur 10	T740 Attack Barafon 10
T637 Electoric Giutar (Clean)8	T689 Suona 12	T741 Attack Barafon 11
T638 Clavi 12	T690 Soft Guitar 13	T742 Electric Viphraphone 10
T639 Attack Harp 3	T691 Xylophone 8	T743 Dual Horns 11
T640 Attack Clav. 10	T692 Dulcimer 13	T744 Shanai 10
T641 Bright String 6	T693 Marimba 10	T745 Bright String 13
T642 Organ Flute 7	T694 Soft Guitar 14	T746 Crystal 9
T643 Electoric Giutar (Clean)9	T695 Viola Attack 9	T747 Clavi 13
T644 Kawala 12	T696 Hard Vibe 13	T748 Soft Sax 20
T645 Bodhran 11	T697 Koto 12	T749 Tron Flute 11
T646 Shanai 9	T698 Tenor Sax 9	T750 Dulcimer 14
T647 Suona 10	T699 Kawala 15	T751 Slow Violin 11
T648 Synth Harpsi. 10	T700 Steel Bell 11	T752 Tenor Sax 11
T649 Bari & Tenor 6	T701 Soft Accord 11	T753 Nay 14
T650 Kawala 13	T702 Organ Flute 10	T754 Soft Guitar 15
T651 Bari & Tenor 7	T703 Organ Flute 11	T755 Shanai 11
T652 Reed Horn 7	T704 Bright String 9	T756 Hard Barsoon 12
T653 Shamisen 10	T705 Soft Santur 11	T757 Synth Harpsi. 14
T654 Soft Clav. 11	T706 Hard Barsoon 10	T758 Soft Sax 21
T655 Bari & Tenor 8	T707 Wind Organ 14	T759 Suona 13
T656 Soft Santur 9	T708 Synth Harpsi. 11	T760 Kalimba 13
T657 Attack Harp 4	T709 Soft Sax 19	T761 Suona 14
T658 Bright String 7	T710 Bright String 10	T762 Slow Violin 12
T659 Guitar Pinch 11	T711 Bright String 11	T763 Reed Organ 7
T660 Wind Organ 11	T712 Jungle Bass 9	T764 Kawala 19
T661 Soft Guitar 12	T713 Soft Accord 12	T765 Reed Horn 9
T662 English Horn 13	T714 Reed Horn 8	T766 Attack Harp 7
T663 Kawala 14	T715 Slow Violin 10	T767 Oct Harp 7
T664 Grow Guitar 10	T716 Synth Harpsi. 12	T768 Kalimba 14
T665 Attack Harp 5	T717 Attack Harp 6	T769 Twin Bones 9
T666 Bari & Tenor 9	T718 Soft Santur 12	T770 Attack Clav. 12
T667 Organ Flute 8	T719 Hard Barsoon 11	T771 Bari & Tenor 11
T668 Woodblock 10	T720 English Horn 14	T772 Attack Harp 8
T669 Hard Vibe 11	T721 Crystal 8	T773 English Horn 15
T670 Mute Barafon 20	T722 Bari & Tenor 10	T774 Twin Bones 10
T671 Tubular Bells 7	T723 Koto 13	T775 Soft Clav. 12
T672 Suona 11	T724 Didgeridoo 20	T776 Tubular Bells 10
T673 Bright String 8	T725 Tenor Sax 10	T777 Slow Violin 13
T674 Hard Vibe 12	T726 Bright String 12	T778 Synth Harpsi. 15
T675 Slow Violin 8	T727 Hard Vibe 14	T779 Guitar Pinch 12
T676 Shamisen 11	T728 Dual Horns 10	T780 Church Bells 9

T781 Castanets 10	T833 Dual Horns 12
T782 Twin Bones 11	T834 Soft Clav. 13
T783 Indian Flute 12	T835 Church Bells 11
T784 Woodblock 11	T836 Oct Harp 9
T785 Attack Harp 9	T837 Oct Harp 10
T786 Crystal 10	T838 Indian Flute 13
T787 Mute Barafon 21	T839 Viola Attack 11
T788 Synth Harpsi. 16	T840 Clavi 14
T789 Reed Organ 8	T841 Koto 14
T790 Steel Bell 12	T842 Soft Guitar 19
T791 Chorus Guitar. 8	T843 Castanets 12
T792 Reed Organ 9	T844 Jazz Organ 13
T793 Marimba 11	T845 Bag Pipe 14
T794 Electric Vraphone 11	T846 Steel Bell 13
T795 Soft Guitar 16	T847 Church Bells 12
T796 Viola Attack 10	T848 Guitar Pinch 13
T797 Reed Organ 10	T849 Soft Clav. 14
T798 Bari & Tenor 12	T850 Tubular Bells 12
T799 Soft Sax 22	T851 Grow Guitar 11
T800 Jazz Organ 12	T852 Steel Bell 14
T801 Soft Guitar 17	T853 Chorus Guitar. 10
T802 Xylophone 9	T854 Crystal 13
T803 Xylophone 10	T855 Reed Horn 11
T804 Church Bells 10	T856 Steel Bell 15
T805 Suona 15	T857 Kawala 21
T806 Crystal 11	T858 Attack Harp 10
T807 Chorus Guitar. 9	T859 Oct Harp 11
T808 Crystal 12	T860 Kalimba 15
T809 Hard Barsoon 13	T861 Tubular Bells 13
T810 Castanets 11	T862 Electoric Giutar (Clean)11
T811 Kawala 20	T863 Jazz Organ 14
T812 Nay 15	T864 Attack Barafon 14
T813 Tubular Bells 11	T865 Soft Guitar 20
T814 Hard Barsoon 14	T866 Soft Accord 13
T815 Barafon 8	T867 Synth Harpsi. 17
T816 Marimba 12	T868 Bodhran 12
T817 Soft Sax 23	T869 Woodblock 12
T818 Attack Barafon 12	T870 Attack Harp 11
T819 Electric Vraphone 12	T871 Organ Flute 12
T820 Wind Organ 15	T872 Jazz Organ 15
T821 Attack Barafon 13	T873 Didgeridoo 21
T822 Electric Vraphone 13	T874 Church Bells 13
T823 Soft Guitar 18	T875 Synth Harpsi. 18
T824 Xylophone 11	T876 Chorus Guitar. 11
T825 Tenor Sax 12	T877 Organ Flute 13
T826 Oct Harp 8	T878 Shamisen 13
T827 Shamisen 12	T879 Jungle Bass 10
T828 Reed Horn 10	T880 Shamisen 14
T829 Marimba 13	
T830 Reed Organ 11	
T831 Attack Clav. 13	
T832 Hard Barsoon 15	

Rhythm list

R001 50's Pop	R053 8 Beat Modern	R105 Pop Waltz1
R002 Cool Pop	R054 Country Ballad	R106 USA March1
R003 Groovy Pop	R055 Love Song	R107 Hully Gully1
R004 60's Vintage Pop	R056 Modern Country Pop	R108 Tarantella1
R005 80's Pop	R057 Electro Pop	R109 Limbo Rock1
R006 Rap Pop	R058 Acoustic Ballad	R110 Swing Waltz1
R007 Pop Rock	R059 Piano Ballad	R111 Pub Piano1
R008 60° s Soul	R060 R&B Ballad	R112 Jazz Waltz 1
R009 70° s Soul	R061 Rock Ballad	R113 Jazz Waltz 2
R010 Funk	R062 Slow & Easy	R114 Show Tune1
R011 16 Beat Shuffle	R063 Analog Ballad	R115 Polka1
R012 Twist	R064 E_Ballad	R116 Waltz1
R013 British Pop	R065 70's Disco1	R117 Cha Cha1
R014 Hard Rock	R066 70's Disco2	R118 Rumba1
R015 Fusion	R067 Funky Disco	R119 Jive1
R016 FunkShuffl	R068 Saturday Night	R120 Pasodoble1
R017 FusionShuffl	R069 Club Latin	R121 Samba 1
R018 60's Rock	R070 Disco Chocolate	R122 Samba 2
R019 Standard Rock	R071 Disco Fox	R123 Schlager Rock 1
R020 Brit Rock Pop	R072 Disco Funk	R124 Schlager Rock 2
R021 60's Vintage Rock	R073 Disco Hands	R125 FoxTrot1
R022 Chart Rock Shfl	R074 Disco Party	R126 Viennese Waltz1
R023 60's Pop Rock	R075 Disco Samba	R127 Tango1
R024 RockBilly	R076 UK Pop	R128 Tango2
R025 RockBoogie	R077 Club Dance	R129 70's Disco Funk
R026 RockChaCha1	R078 Modern R&B	R130 Disco Philly1
R027 RockClassical	R079 Hip Shuffle	R131 Disco House1
R028 RockShuffle	R080 Charleston	R132 80's Disco
R029 RockPop	R081 DiscoPop	R133 Swing Fox2
R030 Pop Mambo	R082 DiscoSoul	R134 Slow Fox2
R031 Latin Party Pop	R083 DiscoTrot	R135 Organ Cha Cha2
R032 Cumbia	R084 EuroBeat	R136 Organ Quick Step2
R033 Parranda	R085 Rap	R137 Cat Groove2
R034 Carnival	R086 Rave	R138 Dixie Jazz2
R035 Bossanova	R087 Swing Fox1	R139 Medium Jazz2
R036 Mambo 1	R088 Slow Fox1	R140 Jazz Big Band2
R037 Mambo 2	R089 Organ Cha Cha1	R141 Jazz Club2
R038 Bolero	R090 Organ Quick Step1	R142 Ragtime2
R039 Cumbia	R091 Fast Band 1	R143 Big Band Shuffle 1
R040 Latin Rock	R092 Cat Groove1	R144 Big Band Shuffle 2
R041 Disco Latin	R093 Dixie Jazz1	R145 Big Band Shuffle 3
R042 Tijuana	R094 Medium Jazz1	R146 Fast Band 2
R043 Reggae	R095 Jazz Big Band1	R147 Fast Band 3
R044 70's Chart Ballad	R096 Jazz Club1	R148 Frankly Soul
R045 Romantic Ballad	R097 Ragtime1	R149 Jazz Funk
R046 90's Cool Ballad	R098 Country Ballad1	R150 Classic Big Band
R047 Alp Ballad1	R099 Country Two Step1	R151 French Jazz1
R048 Alp Ballad2	R100 Schlager Polka1	R152 Jump Jive
R049 Slow Rock	R101 Polka Pop1	R153 Country Ballad2
R050 Unplugged	R102 Blue Grass 1	R154 Country Two Step2
R051 Pop Ballad	R103 Blue Grass 2	R155 Country 1
R052 Pop New Age	R104 Blue Grass 3	R156 Country 2

R157 Finger Pickin1	R209 Brit Pop	R261 West Coast Pop
R158 Country Brothers1	R210 Brazilian Samba	R262 Classic 16 Beat
R159 New Country	R211 Brit Pop Swing	R263 Jazz Pop
R160 Easy Country1	R212 60's 8 Beat	R264 Kool Shuffle
R161 70's Chart Cntry1	R213 Fast Bossa	R265 8 Beat Ballad2
R162 Hoedown	R214 60's Guitar Pop	R266 Chillout
R163 Country Shuffle	R215 70's 8 Beat	R267 16 Beat Ballad1
R164 Schlager Polka2	R216 90's Guitar Pop	R268 Epic Ballad
R165 Polka Pop2	R217 Soft Rock	R269 Easy Ballad
R166 Blue Grass 4	R218 Chart Guita rPop	R270 Cuban Son
R167 Blue Grass 5	R219 Gujira	R271 Bachata
R168 Blue Grass 6	R220 Modern Pop Bld	R272 Forro
R169 Pop Waltz2	R221 Soul R&B	R273 J-Pop Hit
R170 USA March2	R222 R&B Soul Ballad	R274 16 Beat Ballad2
R171 Hully Gully2	R223 Euro Hip Hop	R275 70's Pop Ballad
R172 Tarantella2	R224 Trip Hop	R276 EP Ballad
R173 Limbo Rock2	R225 Ibiza 2004	R277 Power Ballad
R174 Swing Waltz2	R226 Mod Big Band Shfl	R278 Guitar Ballad
R175 Pub Piano2	R227 Modern Big Band	R279 New R&B Ballad
R176 Jazz Waltz 1	R228 Pop Gtr Ballad	R280 Guitar Serenade
R177 Jazz Waltz 2	R229 Ibiza 2002	R281 Organ Ballad
R178 Show Tune2	R230 Euro Trance	R282 Joropo
R179 Polka2	R231 6-8 Trance	R283 Reggaeton
R180 Ober Polka1	R232 Latin DJ's	R284 French Waltz
R181 Party Polka	R233 Bomba	R285 Merengue
R182 Waltz2	R234 Chillout Cafe	R286 12-8 Ballad
R183 Cha Cha2	R235 70's Glam Piano	R287 Norteno
R184 Rumba2	R236 French House	R288 Jig
R185 Jive2	R237 English Waltz	R289 Hawaiian
R186 Pasodoble2	R238 8 Beat Ballad1	R290 Electronica
R187 Samba3	R239 Club House	R291 Funky House
R188 Samba4	R240 House	R292 Club Beat
R189 Schlager Rock 3	R241 Jazz Gtr Club	R293 Retro Club
R190 Schlager Rock 4	R242 Modern Jazz	R294 Mod Chart Pop
R191 Fox Trot2	R243 Acoustic Jazz	R295 MOR Swing
R192 Viennese Waltz2	R244 Cool Jazz Ballad	R296 Retro Pop
R193 Tango3	R245 Modern Jazz Bld	R297 Rumba Flamenco
R194 Tango4	R246 Easy Listening	R298 Trance Pop
R195 German Waltz	R247 Bebop	R299 Orch Big Band2
R196 Carnival	R248 Orch Big Band1	R300 Big Band Fast2
R197 Organ Samba1	R249 Big Band Fast1	R301 Midnight Swing
R198 Reel1	R250 Orchestra Swing1	R302 70's Chart Cntry
R199 Gay Gordons1	R251 Orchestra Swing2	R303 Jazz Waltz Med
R200 Scand Waltz	R252 Rock Cha Cha2	R304 Mariachi Waltz
R201 Pop Classics	R253 Organ Swing	R305 US March
R202 Live 8 Beat	R254 Secret Service	R306 Guitar Rumba
R203 Power Rock	R255 Animation Bld	R307 Slow Blues
R204 Acoustic Rock	R256 Christmas Waltz	R308 Jazz Waltz Fast
R205 Cool 8 Beat	R257 Movie Swing	R309 70's Country Pop
R206 Uptempo 8Beat	R258 Movie Ballad	R310 Dixieland
R207 90's Rock Ballad	R259 Bubblegum Pop	R311 40's Big Band
R208 Chart Rock Shfl	R260 Rock Shuffle	R312 Easy Country2

R313 Country Hits	R365 Sheriff fReggae	R417 8 Beat Rock3
R314 Country 8 Beat	R366 Beguine	R418 Rock Cha Cha3
R315 Sci-fi March	R367 Latin Disco	R419 Gujira2
R316 Tap Dance Swing	R368 Tango5	R420 Rock Ballad2
R317 Orchestral Bolero	R369 Tango6	R421 Alp Ballad3
R318 Gospel Sisters	R370 Rock &Roll	R422 8 Beat Modern2
R319 Italian Waltz	R371 Rock & Roll Shfl	R423 Euro Hip Hop2
R320 6-8 March	R372 Oldies R & R	R424 Disco Pop2
R321 Bluegrass	R373 Detroit Pop1	R425 Disco Philly2
R322 Mod Cntry Bld1	R374 Detroit Pop2	R426 Mod Big BandShfl2
R323 Scand Country1	R375 Worship Med	R427 Modern Big Band2
R324 Scand Country2	R376 Worship Fast	R428 8 Beat Adria2
R325 Scand Shuffle	R377 Piano Boogie	R429 Disco Chocolate2
R326 Worship Slow	R378 Lovely Shuffle	R430 Euro Trance2
R327 Disco Teens	R379 60's Rock & Roll	R431 Euro Beat2
R328 Scand Bugg	R380 Kool Funk	R432 Techno3
R329 Schlager Samba1	R381 Blueberry Blues	R433 Reggae2
R330 Schlager Samba2	R382 Shuffle Blues	R434 Chillout Cafe2
R331 Scand Slow Rock	R383 Mambo 3	R435 Love Song2
R332 Schlager 6-8	R384 Mambo 4	R436 French House2
R333 Schlager Fox	R385 Soul	R437 Jazz Waltz3
R334 Highland Waltz	R386 Skiffle	R438 Classic Piano2
R335 Italian Polka	R387 6-8Soul	R439 Disco Party2
R336 Grupera	R388 Soul Brothers	R440 Club Dance2
R337 Danzon	R389 Happy Reggae	R441 Jazz Gtr Club2
R338 Schlager Alp	R390 Pop Latin	R442 Modern Jazz2
R339 Saeidy	R391 6-8Slow Rock	R443 Polka Pop3
R340 Bhajan	R392 6-8 Modern	R444 USA March3
R341 Hip Hop Groove	R393 6-8 Orchestral	R445 Ober Polka2
R342 Chart Pop1	R394 Schlager Shuffle	R446 Easy Listening2
R343 Organ Groove	R395 Schlager Pop	R447 Fast Band4
R344 Chart Pop2	R396 Schlager Rumba	R448 Fast Band5
R345 New R&B	R397 Euro Pop Organ	R449 Big Band Fast3
R346 Pop R&B	R398 70's French Hit	R450 Orchestra Swing3
R347 Chart R&B	R399 Italian Mazurka	R451 Orchestra Swing4
R348 Modern Shuffle	R400 Bohemian Waltz	R452 Rock Cha Cha4
R349 Blues Rock	R401 Club Pop3	R453 Schlager Rock5
R350 Dream Dance	R402 Schlager Italia2	R454 Organ Samba2
R351 US Chart Hit	R403 Power Rock2	R455 Gay Gordons2
R352 German Rock	R404 Rock'n Roll 3	R456 Swing Waltz3
R353 Schlager Beat	R405 Cool8 Beat2	R457 Reel2
R354 Mellow Hip Hop	R406 British Pop3	R458 Movie Ballad2
R355 Classic Hip Hop	R407 British Pop4	R459 Cool Pop2
R356 New Hip Hop	R408 8 Beat Soul3	R460 Rock Shuffle2
R357 Duranguense	R409 Brit Pop2	R461 Hard Rock3
R358 Laff	R410 Disco Latin2	R462 Hard Rock4
R359 Ober Walzer	R411 Brit Pop Swing2	R463 Club Pop4
R360 Bhangra	R412 Fast Gospel2	R464 8 Beat Pop3
R361 Zouk	R413 Fast Bossa2	R465 8 Beat Pop4
R362 German March	R414 60's Guitar Pop2	R466 60's RockN2
R363 Enka	R415 90's Soul	R467 16 Beat Ballad3
R364 Bolero Lento	R416 Funk Shuffl 3	R468 Straight Rock2

R469 Easy Ballad2	R521 Bluegrass2	R573 80's Pop2
R470 Pop Mambo2	R522 Country Brothers2	R574 60's Soul2
R471 Bossanova2	R523 Scand Country3	R575 Fusion Shuffl3
R472 Forro2	R524 Scand Country4	R576 Fusion Shuffl4
R473 Standard Rock2	R525 Scand Shuffle2	R577 16 Beat Pop3
R474 16 Beat Ballad3	R526 70's Chart Cntry2	R578 16 Beat Pop4
R475 Contemp Rock2	R527 Pub Piano3	R579 60's Rock & Roll2
R476 EP Ballad2	R528 Polka3	R580 Brit Rock Pop2
R477 Fusion3	R529 Samba5	R581 Blueberry Blues2
R478 Fusion4	R530 Samba6	R582 Skiffle2
R479 Funk2	R531 Jive3	R583 Mambo5
R480 Guitar Serenade2	R532 Fox Trot3	R584 Mambo6
R481 Organ Ballad2	R533 Pasodoble3	R585 Soul2
R482 Joropo2	R534 Highland Waltz2	R586 Classic 8Beat2
R483 Reggaeton2	R535 Schlager Polka3	R587 Bolero2
R484 French Waltz2	R536 Grupera2	R588 Soul Brothers2
R485 Merengue2	R537 Danzon2	R589 Happy Reggae2
R486 Pop Ballad2	R538 Schlager Alp2	R590 Pop Latin2
R487 Norteno2	R539 Saeidy2	R591 6-8Slow Rock2
R488 Jig2	R540 Bhajan2	R592 6-8 Modern2
R489 Hawaiian2	R541 Hip Hop Groove2	R593 6-8 Orchestral2
R490 70's Disco3	R542 Hip Shuffle2	R594 Slow Soul2
R491 70's Disco4	R543 Organ Groove2	R595 Piano Ballad2
R492 Club Beat2	R544 Chart Pop3	R596 Disco Trot2
R493 Rap2	R545 Country Ballad2	R597 Disco Hands2
R494 Disco House2	R546 Romantic Ballad2	R598 UK Pop2
R495 MOR Swing2	R547 Analog Ballad2	R599 Italian Mazurka2
R496 Retro Pop2	R548 Electro Pop2	R600 Bohemian Waltz2
R497 Calypso2	R549 Blues Rock2	
R498 Trance Pop2	R550 Rave2	
R499 Big Band Shuffle4	R551 US Chart Hit2	
R500 Big Band Shuffle5	R552 German Rock2	
R501 Big Band Shuffle6	R553 Schlager Beat2	
R502 Finger Pickin2	R554 Disco Funk2	
R503 Hully Gully3	R555 Disco Samba2	
R504 Viennese Waltz3	R556 New Hip Hop2	
R505 Show Tune3	R557 Cat Groove3	
R506 Rumba3	R558 Laff2	
R507 Schlager Rock4	R559 Pop Waltz3	
R508 Jazz Waltz Fast2	R560 Bhangra2	
R509 Country Ballad3	R561 Twist2	
R510 Dixieland2	R562 German March2	
R511 French Jazz2	R563 Enka2	
R512 Easy Country3	R564 Bolero Lento2	
R513 Country Hits2	R565 Midnight Swing2	
R514 Country 8 Beat2	R566 French Jazz3	
R515 Blue Grass7	R567 Latin Party Pop2	
R516 Blue Grass8	R568 Tango7	
R517 Blue Grass9	R569 Tango8	
R518 Gospel Sisters2	R570 Parranda2	
R519 Italian Waltz2	R571 Latin Rock2	
R520 Limbo Rock3	R572 Acoustic Rock2	

 
Demo track list

D01 Jockey Club	D53 When The Saints Go Marchin In
D02 Yang On A Horse To Transport Grain	D54 Oh Susanna
D03 Steping Higher And Higher	D55 Moon River
D04 US Taihu Lake	D56 ABC Word
D05 Osmanthus everywhere open in August	D57 We Wish You A Merry Christmas
D06 Central government	D58 Six Little Ducks
D07 Tathagata	D59 Mary Had A Little Lamb
D08 Aobaoshan	D60 Moonlight Bay
D09 Yangming Chunxiao	D61 American Beauty Rag
D10 Jasmine	D62 Crazy Arms
D11 Jaunty	D63 Before the Next TearDrop Falls
D12 Good Day	D64 Waltz Op64 No.1 By Chopin
D13 Childhood	D65 Piano Sonata
D14 Zi ZhuTiao	D66 The Beautiful Blue Danube
D15 Auspicious TREBLE	D67 The Crave
D16 Trials of a long journey always intelligence	D68 Tea for Two
D17 In that faraway place	D69 Sleigh Ride
D18 Prairie Song	D70 Rudolph The Red Nosed Reindeer
D19 Look at home	D71 Santa Claus Is Coming To Town
D20 On affordable	D72 Traumerei
D21 You set off to the chapeau	D73 Clock
D22 The Qinghai-Tibet Plateau	D74 Humoresque
D23 Same Song	D75 Frohlicher Landmann
D24 Hill Road Bending 18	D76 Canon
D25 Farewell	D77 Waltz
D26 Happy home	D78 Greensleeves
D27 Place peach bloom	D79 Polka
D28 New Century	D80 Arabesque
D29 Gave me a Red Rose	
D30 Kangding Love Song	
D31 Dansolde	
D32 Beijing Tune	
D33 Yi Jian Mei	
D34 Rumanxilou	
D35 Goodbye Dabieshan	
D36 Happy Chinese New Year	
D37 Dreams Of Riverboat	
D38 The Penghu bending Grandmother	
D39 Heart-Throb	
D40 Shepherd Front	
D41 Hotel Pacific	
D42 1900's Madness	
D43 Family Restaurant	
D44 To Flush Waves Johnny	
D45 Zimbada? hand?	
D46 Paradise	
D47 Birthday	
D48 Carmen	
D49 Cavatina	
D50 Jingle Bells	
D51 Silent Night	
D52 O Christmas Santa Claus	

Chord table

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Chord Type Root	M	m	7	m7	dim7	M7	m7 ⁻⁵	dim
C								
C [♯] /(D [♭])								
D								
(D [♯])/E [♭]								
E								
F								
F [♯] /(G [♭])								
G								
(G [♯])/A [♭]								
A								
(A [♯])/B [♭]								
B								

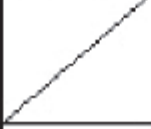Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C [♯] /(D [♭])							
D							
(D [♯])/E [♭]							
E							
F							
F [♯] /(G [♭])							
G							
(G [♯])/A [♭]							
A							
(A [♯])/B [♭]							
B							

 
Percussion keyboard sound table

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

Information about used electrical and electronic equipment

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment - intended for households - is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.

Assembly

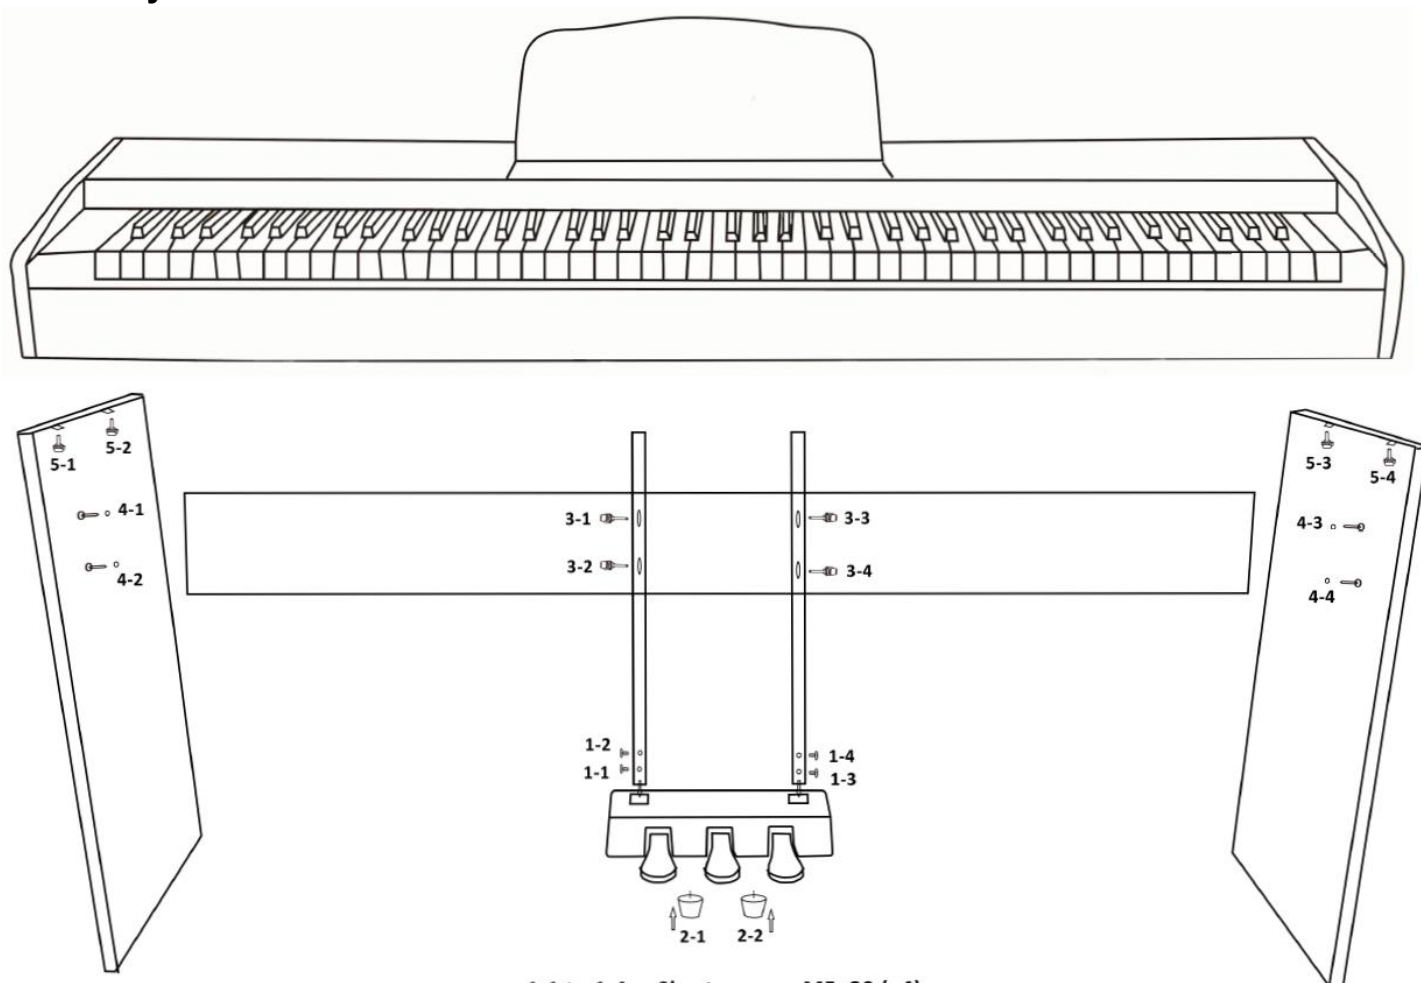

- 1-1 to 1-4 : Short screws M5×20 (×4)
 2-1 to 2-2 : Cylindrical supporting parts (×2)
 3-1 to 3-4 : Mounting knobs M6×40 (×4)
 4-1 to 4-4 : Long screws M5×45 (×4)
 5-1 to 5-4 : Mounting knobs M6×20 (×4)