

V-TONE

BL-130

Instrukcja obsługi / User Manual

Spis treści

Zasady bezpieczeństwa użytkowania.....	2
Konserwacja	2
Budowa i obsługa	3
Informacja o zużytych sprzęcie elektrycznym i elektronicznym	22

Zasady bezpieczeństwa użytkownika

 
	Przed użyciem prosimy o szczegółowe zapoznanie się z instrukcją obsługi. Prosimy również o zachowanie jej na przyszłość. Instrukcja zawiera zasady bezpiecznego korzystania z urządzenia.
	Po otrzymaniu produktu należy go rozpakować i sprawdzić, czy produkt jest kompletny i czy podczas transportu nie powstały żadne uszkodzenia. W przypadku uszkodzeń powstałych podczas transportu, prosimy nie używać produktu i niezwłocznie skontaktować się ze sprzedawcą lub producentem.
	UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH. To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobiegnięcia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi. Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.
	Produkt opisany w tej instrukcji jest zgodny z dyrektywami europejskimi, dlatego jest oznaczony znakiem CE.
	Urządzenie należy trzymać z dala od dzieci i niewykwalifikowanych osób. Producent nie ponosi odpowiedzialności za szkody spowodowane nieprawidłowym użytkowaniem.
	Przed użyciem upewnij się, że obudowa nie jest uszkodzona.
	Korzystać wyłącznie z dołączonego do produktu dedykowanego zasilacza sieciowego! Odłączenie produktu od zasilania odbywa się poprzez pociągnięcie za wtyczkę przewodu zasilającego - nie ciągnąć bezpośrednio za przewód zasilający! Odłącz urządzenie z zasilania przed zdjęciem obudowy lub konserwacją. W razie stwierdzenia uszkodzenia przewodu zasilającego - nie używaj go!
	Urządzenie do użytku wewnętrznego w dobrze wentylowanym pomieszczeniu, trzymać z dala od wilgoci. Nie należy narażać produktu na bezpośrednie działanie słońca. Nie wolno przechowywać i korzystać z urządzenia w pobliżu źródeł ognia!
	Nie wolno narażać urządzenia na pracę w wysokich temperaturach!
	W razie wystąpienia zakłóceń w pracy urządzenia, natychmiast odłącz je od źródła zasilania!

Konserwacja


1. Urządzenie może użytkować tylko wykwalifikowany personel, szkody spowodowane użytkowaniem niezgodnym z przeznaczeniem lub próbą samodzielnej naprawy nie podlegają gwarancji. Wewnątrz opakowania nie ma żadnych części serwisowych, naprawy mogą być wykonywane wyłącznie przez autoryzowany punkt serwisowy.
2. Nie pozwól, aby produkt wszedł w kontakt z olejem, tłuszczem lub jakimkolwiek podobnym płynem.
3. Regularne czyszczenie umożliwia długotrwałe użytkowanie oraz pozwala na zachowanie odpowiedniego funkcjonowania urządzenia. Do czyszczenia używaj miękkiej, suchej szmatki.

Budowa i obsługa

Panel sterowania

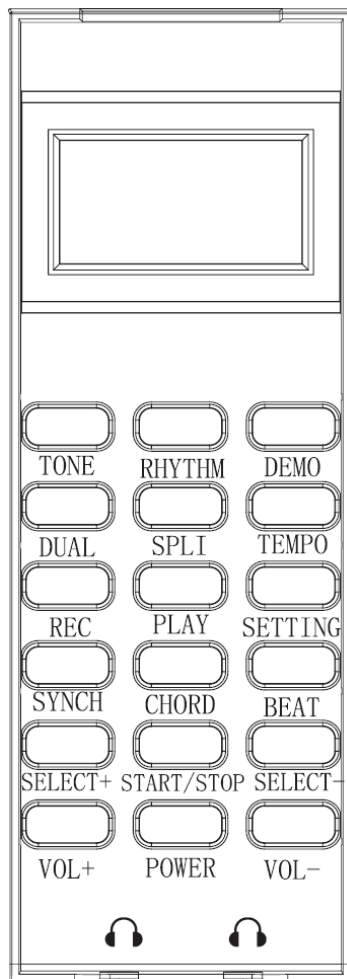

Panel tylny

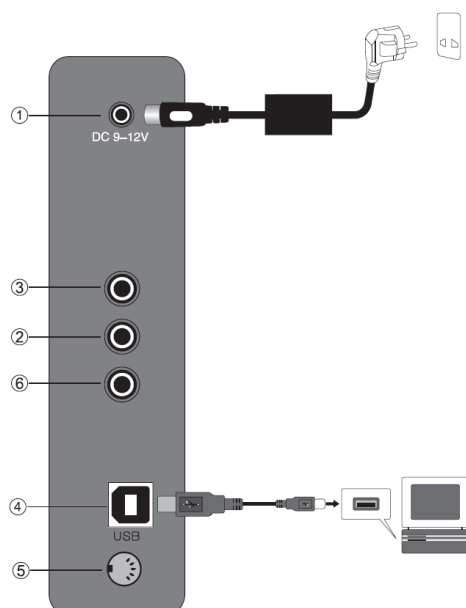 

1. Wejście zasilania.
2. Wejście audio.
3. Wyjście słuchawkowe.
4. Gniazdo USB-B.
5. Gniazdo DIN 5-pinowe na pedał nożny.
6. Wejście jack na pedał nożny.

Przygotowanie urządzenia

Podłączenie zasilacza sieciowego

Podłącz okrągłą wtyczkę zasilacza sieciowego AC/DC do wejścia zasilania znajdującego się na spodzie panelu sterowania urządzenia, a wtyczkę sieciową - do ściennego gniazda sieciowego. Jeżeli urządzenie nie jest używane przez dłuższy czas, odłącz zasilacz sieciowy AC/DC od gniazda.

Wejście audio

Wejście audio umożliwia podłączenie zewnętrznego źródła dźwięku w celu odtwarzania dźwięku.

Wyjście słuchawkowe

Po podłączeniu słuchawek wyjście wbudowanych głośników pianina zostaje automatycznie wyciszone, co umożliwia grę bez zakłócania spokoju otoczenia. Gniazdo to może być również używane jako wyjście audio.

Interfejs transmisji USB

Pianino cyfrowe można podłączyć do komputera za pomocą interfejsu USB. Korzystając z oprogramowania muzycznego zainstalowanego na komputerze, możliwe jest ćwiczenie, granie, komponowanie oraz zapisywanie utworów. Edytowana muzyka oraz akompaniament dostępne w oprogramowaniu mogą być przesyłane do pianina cyfrowego i odtwarzane lub wykorzystywane do gry z akompaniamentem.

Podłączenie pedału nożnego

Podłącz wtyk przewodu pedału do okrągłego gniazda znajdującego się na spodzie pianina, aby korzystać z trzech efektów pedału.

Zasilacz AC/DC

Proszę używać dedykowanego zasilacza AC/DC dostarczonego z tym instrumentem. W przypadku użycia niewłaściwego zasilacza instrument może ulec uszkodzeniu. Nie należy umieszczać zasilacza i/lub przewodu zasilającego w pobliżu źródła ciepła. Nie zginać zbyt mocno przewodu i/lub nie umieszczać na nim ciężkich przedmiotów, aby uniknąć uszkodzenia. Nie należy wkładać wtyczki sieciowej zasilacza do gniazda wielofunkcyjnego. Jeśli nie używasz instrumentu przez dłuższy czas, wyłącz urządzenie i wyjmij wtyczkę zasilacza z gniazda. Należy wyciągnąć wtyczkę - nie ciągnąć za przewód zasilający! Zasilacz może się nagrzewać przy dłuższym użytkowaniu urządzenia - jest to normalne zjawisko. Dym, dziwny zapach i/lub przegrzanie urządzenia mogą zwiastować zagrożenie - w takim przypadku wyłączyć zasilanie, odłączyć zasilacz i skontaktować się z dystrybutorem.

Podstawowa obsługa

Wł./wył. zasilania

Naciśnij przycisk zasilania POWER, a urządzenie uruchomi się - możesz zacząć korzystać z instrumentu. Na wyświetlaczu pojawi się wartość 001 - urządzenie przejdzie w tryb gry. W celu wyłączenia urządzenia naciśnij ponownie przycisk zasilania POWER.

Głośność główna

Naciśnij VOL+ lub VOL-, aby zwiększyć lub zmniejszyć głośność.

Wybór tonu (brzmienia)

Naciśnij TONE, aby uruchomić tryb wyboru tonu (brzmienia). Użyj SELECT+ i SELECT-, aby przełączać się między tonami (brzmieniami). Możesz wybrać pomiędzy tonami (brzmieniami) 001-380. Na wyświetlaczu LED pojawi się wybrany numer tonu.

Wybór rytmu

 
Naciśnij RHYTHM, aby uruchomić tryb wyboru rytmu. Użyj SELECT+ i SELECT-, aby przełączać się między rytmami. Możesz wybrać pomiędzy rytmami 001-128. Na wyświetlaczu LED pojawi się wybrany numer rytmu. Przycisk Start/Stop umożliwi rozpoczęcie i zatrzymanie odtwarzania rytmu.

Tempo

Naciśnij TEMPO, a następnie SELECT+ lub SELECT-, aby zwiększyć lub zmniejszyć tempo. Na wyświetlaczu LED pojawi się aktualna wartość tempa. Zakres tempa instrumentu do wyboru to 20-280 - wartość domyślna to 120. W celu szybkiego zwiększenia lub zmniejszenia tempa można nacisnąć i przytrzymać SELECT+ lub SELECT-.

Akompaniament akordowy

W trakcie odtwarzania rytmu naciśnij CHORD, aby uruchomić funkcję akompaniamentu akordowego. Zagraj dowolny akord jedno- lub wielopalcowy na klawiszach strefy akompaniamentu (klawisze 1-34 od lewej - strefa akordów) - usłyszysz odpowiadający im akompaniament. Szczegółową listę akordów jedno- i wielopalcowych znajdziesz w sekcji „Tabele akordów jedno- i wielopalcowych”. Naciśnij ponownie CHORD, aby wyłączyć funkcję akompaniamentu akordowego.

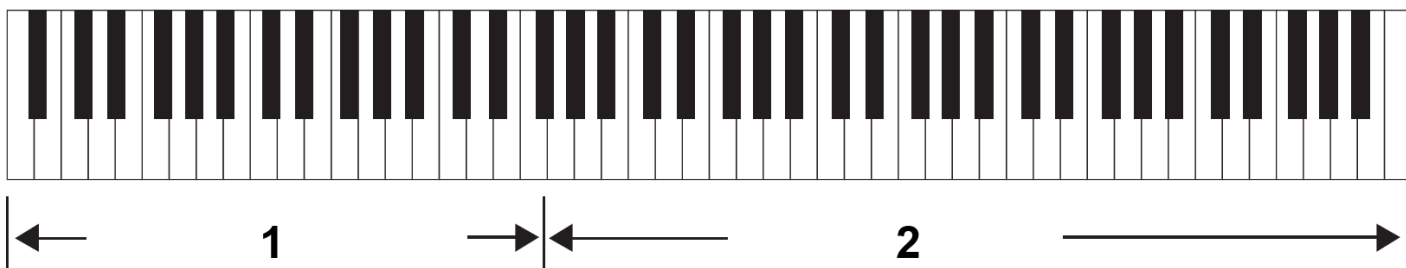

1. Strefa akordów.

2. Strefa melodii.

Synchronizowany start akompaniamentu

Wybierz rytm i uruchom funkcję akompaniamentu akordowego. Naciśnij SYNCH, aby uruchomić funkcję synchronizowanego startu akompaniamentu. Po naciśnięciu dowolnego klawisza w celu zagrania akordu, akompaniament uruchomi się automatycznie. Naciśnij przycisk START/STOP, aby wyłączyć funkcję synchronizowanego startu akompaniamentu.

Dynamika klawiatury, głośność rytmu i transpozycja

Każde krótkie naciśnięcie SETTING umożliwia przechodzenie między ustawieniami funkcji urządzenia:

- pierwsze naciśnięcie SETTING - przejście do trybu regulacji dynamiki klawiatury; użyj SELECT+ i SELECT-, aby ustawić włączyć lub wyłączyć funkcję;
- drugie naciśnięcie SETTING - przejście do trybu regulacji głośności rytmu (0-32); użyj SELECT+ i SELECT-, aby ustawić wartość funkcji;
- trzecie naciśnięcie SETTING - przejście do trybu transpozycji (-12-12); użyj SELECT+ i SELECT-, aby ustawić wartość funkcji.

Metronom

Naciśnij BEAT, aby uruchomić funkcję metronomu. Metronom posiada 4 metra do wyboru: 1/4, 2/4, 3/4 oraz 4/4. Naciśnij ponownie BEAT, aby wyłączyć funkcję metronomu.

Odtwarzanie ścieżek demo

 
Naciśnij DEMO, aby uruchomić tryb wyboru i odtwarzania ścieżki demo. Użyj SELECT+ i SELECT-, aby przełączać się między ścieżkami demo. Możesz wybrać pomiędzy ścieżkami demo 001-088. Na wyświetlaczu LED pojawi się wybrany numer ścieżki demo. Naciśnij ponownie DEMO, aby zatrzymać odtwarzanie ścieżki demo.

Nagrywanie i odtwarzanie nagrania

Naciśnij REC, aby uruchomić funkcję nagrywania. Zaczynaj grać na klawiszach, aby rozpocząć nagrywanie. Maksymalna liczba dźwięków nagrania wynosi 10000. Naciśnij ponownie REC, aby zatrzymać nagrywanie. Naciśnij PLAY, aby odtworzyć nagranie.

Podział klawiatury

Wejść w tryb wyboru tonu (brzmienia) i wybierz ton (brzmienie) lewej strony. Naciśnij SPLI, aby uruchomić funkcję podziału klawiatury. Użyj przycisków SELECT+ i SELECT-, aby wybrać ton (brzmienie) prawej strony. Naciśnij ponownie SPLI, aby wyłączyć funkcję podziału klawiatury

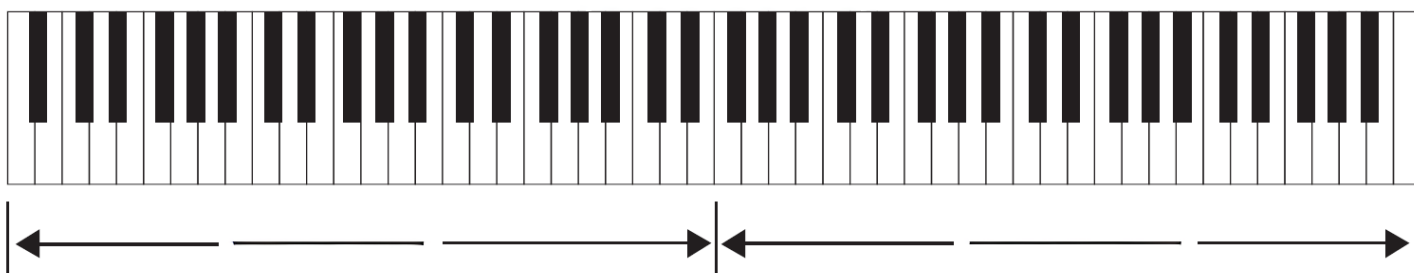

Nakładanie dwóch tonów (brzmień)

Wejść w tryb wyboru tonu (brzmienia) i wybierz ton (brzmienie) główny. Naciśnij DUAL, aby uruchomić funkcję nałożenia drugiego tonu (brzmienia). Użyj przycisków SELECT+ i SELECT-, aby wybrać drugi ton (brzmienie). Naciśnij ponownie DUAL, aby wyłączyć funkcję nałożenia drugiego tonu (brzmienia).

Bluetooth

Połączenie bezpośrednie

1. Uruchom Bluetooth na zewnętrznym urządzeniu mobilnym, wspierającym standard Bluetooth.
2. Na zewnętrznym urządzeniu mobilnym znajdź urządzenie Artplay P1 i połącz się nim.
3. Odtwarzaj muzykę na zewnętrznym urządzeniu mobilnym - źródłem jej dźwięku będą głośniki instrumentu.

Połączenie z wykorzystaniem aplikacji

1. Uruchom Bluetooth na zewnętrznym urządzeniu mobilnym, wspierającym standard Bluetooth.
2. Na zewnętrznym urządzeniu mobilnym znajdź urządzenie Artplay P1 i połącz się nim.
3. Zainstaluj jedną z następujących aplikacji: POP Piano-Anyone can play (Android/iOS), GarageBand (iOS).
3. Uruchom aplikację.
4. Połącz się z instrumentem Artplay P1 w aplikacji.

Lista tonów (brzmień)

No.	Instruments	(guitar)	
(Piano)		025	Nylon String Guitar 1
001	Grand Piano 1	026	Metal String Guitar 1
002	Bright Piano 1	027	Jazz Guitar 1
003	Electronic Piano 1	028	Clear Sound Electronic Guitar 1
004	Bar Piano	029	Muted Electronic Guitar 1
005	Electric Piano 1	030	Overspeed Guitar 1
006	Electric Piano 2	031	Distortion Guitar 1
007	Ancient Pianos	032	Harmonic Guitar
008	Clavina 1	(Bass)	
		033	Original Bass 1
(Glockenspiel)		034	Finger Bass 1
009	Steel Piano	035	Electronic Bass 1
010	Glockenspiel 1	036	Chordless Bass
011	Sound Box 1	037	Hit The Bass 1
012	Vibraphone 1	038	Hit The Bass 2
013	Marimba 1	039	Synthetic Bass 1
014	Xylophone 1	040	Synth Bass 2
015	Bell Tube Bell 1	(Strings)	
016	Desi Marquin 1	041	Violin 1
		042	Viola 1
(Organ)		043	Cello 1
017	Hand Crank Organ 1	044	Double Bass 1
018	Percussion Organ 1	045	Vibraphone Violin 1
019	Rock Organ	046	Pizzling Strings
020	Church Organ 1	047	Orchestral Harp 1
021	Reed Organ 1	048	Timpani 1
022	Accordion 1	(Ensemble)	
023	Harmonica 1	049	String Ensemble 1
024	Tango Accordion 1	050	String Ensemble 2

051	Synth Strings 1	078	Dongxiao
052	Synth Strings 2	079	Whistle 1
053	Ah-Vocal Chorus 1	080	Ocalina
054	Oh Voice Chorus 1	(Synth Wind Music)	
055	Synthesis Sound	081	Square Wave Wind Music
056	Pop Orchestra 1	082	Sawtooth Wind
(Brass)		083	Goddess Wind Music
057	Small 1	084	Birdsong Wind
058	Trombone 1	085	Charan Wind
059	Large 1	086	Vocal Wind Music
060	Muted Trumpet 1	087	Five Degrees Of Wind Music
061	France No. 1	088	Bass-Wind
062	Brass Ensembles 1	(Synthesized Tone)	
063	Synthetic Copper Tube 1	089	New Century
064	Synthetic Copper Tube 2	090	Warm Song
Wind Instruments)		091	Multi-Tone Synthesis
065	Straight Saxophone	092	Choir Pad 1
066	Soprano Saxophone 1	093	Bowstring 1
067	Tenor Saxophone 1	094	Metal Pad 1
068	Bass Saxophone 1	095	Ring Pad 1
069	Oboe 1	096	Brush Eraser
070	English Tube 1	(Synthetic Effect)	
071	Bassoon 1	097	Sound Of Rain
072	Clarinet 1	098	Movie Effects
(Woodwind Instruments)		099	Crystal
073	Piccolo 1	100	Atmosphere
074	Flute 1	101	Bright
075	Gu Xiao 1	102	Elves
076	Paiao	103	Reverberation
077	Bottle Wooden Tube	104	Cosmic Voices

105	Sital 1	132	Stereo Grand Piano 1
106	Banjo 1	133	Stereo Grand Piano 2
107	Shamisen 1	134	Stereo Grand Piano 3
108	Japanese Koto 1	135	Bright Grand Piano 1
109	Kalimba	136	Bright Grand Piano 2
110	Bagpipe	137	Bright Grand Piano 3
111	Fedri Violin	138	Dusky Grand Piano 1
112	Shana	139	Dim Grand Piano 2
		140	Intense Gradation Grand Piano 1
113	Crispy Bell	141	Intensity Gradient Grand Piano 2
114	Ahhhh	142	Soft Grand Piano 1
115	Metal Drum	143	Soft Grand Piano 2
116	Wooden Board Drum	144	Soft Grand Piano 3
117	Japanese Drums	145	Bright Stereo Piano
118	Wonderful Drums	146	Bright Piano 2
119	Synthetic Drum	147	Bright Piano 3
120	Reverberation Cymbals	148	Bright Piano 4
		149	Bright Piano 5
121	String Code Murmur	150	Bright Stereo Piano 1
122	Breathing Sounds 1	151	Bright Stereo Piano 2
123	Sound Of Ocean Waves	152	Soft Bright Piano 1
124	Birdsong 1	153	Soft Bright Piano 2
125	Phone Ringing	154	Deep Bright Piano
126	The Sound Of An Airplane	155	Dynamics Gradient Brightens Piano
127	Cheers	156	Unbalanced Piano 1
128	Gunfire 1	157	Dissonant Piano 2
Other Tones		158	Dissonant Piano 3
129	Grand Piano 2	159	Bright Electronic Piano 1
130	Grand Piano 3	160	Bright Electronic Piano 2
131	Grand Piano 4	161	Bright Electronic Piano 3

162	Bright Electronic Piano 4	192	Hard Electric Piano 1
163	Stereo Electronic Piano 1	193	Hard Electric Piano 2
164	Stereo Electronic Piano 2	194	Electric Short Pitch Piano 1
165	Stereo Electronic Piano 3	195	Electric Short Pitch Piano 2
166	Stereo Electronic Piano 4	196	Bright Electric Piano 1
167	Dusky Electronic Piano 1	197	Bright Electric Piano 2
168	Dusky Electronic Piano 2	198	Harpsichord 1
169	Dim Electronic Piano 3	199	Harpsichord 2
170	Dim Electronic Piano 4	200	Soft Old Piano 1
171	Soft Bar Piano 1	201	Soft Ancient Piano 2
172	Soft Bar Piano 2	202	Bright Ancient Piano 1
173	Force Gradient Bar Piano	203	Bright Ancient Piano 2
174	Dim Bar Piano 1	204	Dusky Ancient Piano 1
175	Dim Bar Piano 2	205	Dusky Ancient Piano 2
176	Stereo Bar Piano 1	206	Hard Antique Piano 1
177	Stereo Bar Piano 2	207	Hard Antique Piano 2
178	Stereo Bar Piano 3	208	Clavina 2
179	Stereo Bar Piano 4	209	Clavina 3
180	Short Tone Bar Piano 1	210	Stereo Clavina
181	Short Tone Bar Piano 2	211	Bright Clavina
182	Stereo Electric Piano 1	212	Dusky Clavina
183	Stereo Electric Piano 2	213	Keystroke Clavina
184	Stereo Electric Piano 3	214	Bright Piano
185	Stereo Electric Piano 4	215	Short Tone Piano
186	Stereo Electric Piano 5	216	Percussion Piano
187	Stereo Electric Piano 6	217	Echo Piano
188	Soft Electric Piano 1	218	Harmonic Piano
189	Soft Electric Piano 2	219	Glockenspiel 2
190	Soft Electric Piano 3	220	Glockenspiel 3
191	Soft Electric Piano 4	221	Glockenspiel 4

222	Bright Glockenspiel	252	Bell Tube Bell 2
223	Silent Glockenspiel	253	Bell Tube Bell 3
224	Stereo Glockenspiel 1	254	Bell Tube Bell 4
225	Stereo Glockenspiel 2	255	Synthetic Tube Bell
226	Sound Box 2	256	Silence Bell Tube Bell
227	Sound Box 3	257	Desi Marquin 2
228	Sound Box 4	258	Desi Marquin 3
229	Toy Eight-Sound Box	259	Santur Piano
230	Bright Eight Sound Box	260	Hand Crank Organ 2
231	Silent Eight-Sound Box	261	Hand Crank Organ 3
232	Vibraphone 2	262	Soft Hand Crank Organ
233	Vibraphone 3	263	Bright Hand Crank Organ
234	Synthetic Vibraphone	264	Unadjusted Hand Crank Organ
235	Hard Vibraphone	265	Percussion Organ 2
236	Stereo Vibraphone 1	266	Percussion Organ 3
237	Stereo Vibraphone 2	267	Bright Percussion Organ
238	Soft Vibraphone	268	Distortion Percussion Organ
239	Marimba 2	269	Revolving Organ
240	Stereo Marimba	270	Slow Rotating Organ
241	Mute Marimba	271	60's Rock Organ
242	Bright Marimba	272	80s Rock Organ
243	Distorted Marimba	273	Bright Rock Organ
244	Harmonic Marimba	274	Dim Rock Organ
245	Xylophone 2	275	Soft Rock Organ
246	Xylophone 3	276	Church Organ 2
247	Intensity Gradient Xylophone	277	Church Organ 3
248	Distorted Xylophone	278	Church Organ 4
249	Bright Xylophone	279	Church Organ 5
250	Fast Xylophone	280	Church Organ 6
251	Slow Xylophone	281	Stereo Church Organ 1

282	Stereo Church Organ 2	312	Sweet Accordion
283	Bright Church Organ 1	313	Dim Accordion
284	Bright Church Organ 2	314	Fast Accordion
285	Dim Church Organ 1	315	Slow Accordion
286	Dim Church Organ 2	316	Harmonica 2
287	Singing Church Organ	317	Harmonica 3
288	Overtone Church Organ	318	Harmonica 4
289	Slow Church Organ	319	Harmonica 5
290	Fast Church Organ	320	Sweet Harmonica
291	Gentle Church Organ	321	Distorted Harmonica
292	Reed Organ 2	322	Slow Harmonica
293	Reed Organ 3	323	Fast Harmonica
294	Reed Organ 4	324	Bright Harmonica
295	Reed Organ 5	325	Dusky Harmonica
296	Bright Reed Organ	326	Soft Harmonica
297	Dim Reed Organ	327	Stereo Harmonica 1
298	Stereo Reed Organ	328	Stereo Harmonica 2
299	Fast Reed Organ	329	Mute Harmonica
300	Slow Speed Reed Organ	330	Tango Accordion 2
301	Soft Reed Organ	331	Tango Accordion 3
302	Hard-Reed Organ	332	60s Tango Accordion
303	Jazz Reed Organ	333	80s Tango Accordion
304	Accordion 2	334	Bright Tango Accordion
305	Accordion 3	335	Dim Tango Accordion
306	Accordion 4	336	Soft Tango Accordion
307	Accordion 5	337	Hard Tango Accordion
308	Distortion Accordion	338	Stereo Tango Accordion 1
309	Bright Accordion	339	Stereo Tango Accordion 2
310	Harmonic Accordion	340	Slow Tango Accordion
311	Rock Accordion	341	Fast Tango Accordion

Lista rytmów

No.	Name	026	Bossanova dance 1A
8 shots		027	Guitar bossa novo dance A
001	8 Shoot 1A	028	Pop bossa novo dance A
002	8 Shoot 2A	029	Tango A
003	8 Shoot 3A	030	Exactly A
004	8 Beats Rock A	031	Rumba A
005	8 Passionate beat A	032	Dex A
006	8 Shoot pop music 1A	rustic	
007	8 Beats Pop 2A	033	Country Music A
Ballad		034	Country Rock A
008	Ballade 1A	035	Country Skiing A
009	Ballade 2A	036	Countryside Swaying A
010	Guitar Ballade A	037	Country Ballad A
011	Organ Ballad A	038	Country Waltz A
012	Blues Ballad A	Rock and heavy metal	
013	Ancient Ballad A	039	50's Rock A
014	Rock Ballad A	040	Heavy metal A
015	Slow Board Ballade A	041	Rock 1A
016	Pop Ballad A	042	Rock 2A
017	Electroacoustic Ballad A	043	Soft Rock A
018	Polka Ballad A	044	Slow board rock A
16 shots		045	Hard Rock A
019	16 Shoot 1A	046	Heavy Metal Rock 1A
020	16 Shoot 2A	047	Heavy Metal Rock 2A
021	16 Shoot 3A	Poetry and blues	
022	16 Shoot 4A	048	Chicago Blues A
023	16 Shoot Fink A	049	Fast Gospel Music A
024	16. Shoot Pop A	050	Traditional Soul A
025	16. Shoot Ballads A	051	Rap A
Latin		052	Slow Board Gospel Music A

053	Bruce A	080	Club Dance A
054	Slow Board Blues A	Jazz and swing	
055	Foxtrot A	081	Boogie Dance A
disco		082	Trendy pop A
056	Passionate Disco A	083	JAZZ ROCK A
057	Double disco A	084	Swaying 1A
058	Double Step Dance A	085	Dixie A
059	Pop Polka A	086	Jazz Samba A
060	Waltz 1A	traditions	
061	Pop Waltz 1A	087	March A
062	Pop Waltz 2A	088	American March A
063	Rae A	089	Samba A
worlds		090	Polka A
064	Twirl Dance 1A	091	Army Polka A
065	Twister 2A	092	Tarantella Dance A
066	Miami Pop A	093	Slow Board Waltz A
067	Detroit A	094	Army Waltz A
068	Reggae Dance A	Piano accompaniment	
069	Swing Rigger A	095	Piano Song A
070	Mambo A	096	Waltz 2 (piano) A
071	Earth Style Dance A	097	Guitar Waltz A
072	Mercette (French folk song) A	098	2/4 Shoot piano accompaniment A
dance music		099	3/4 shot piano accompaniment A
073	House Dance A	100	4/4 Shoot piano accompaniment A
074	Slow Board Foxtrot A	8 shots	
075	Vinina Waltz A	101	8 Shoot 1B
076	Salsa Dance A	102	8 Shoot 2B
077	Disco A	103	8 Shoot 3B
078	Pop Hip-Hop Dance A	104	8. Beat Rock B
079	ANNOG POP A	105	Passion 8 Shoot B

106	8 Shoot pop music 1B
107	8 Beats Pop 2B
Ballad	
108	Ballade 1B
109	Ballade 2B
110	Guitar Ballad B
111	Organ Ballad B
1 12	Blues Ballad B
1 13	Ancient Ballad B
1 14	Rock Ballad B
1 15	Slow Board Ballad B
116	Pop Ballad B
117	Electroacoustic Ballad B
118	Polka Ballad B
16 shots	
119	16 Shoot 1B
120	16 Shoot 2B
121	16 Shoot 3B
122	16 Shoot 4B
123	16 Shoot Fink B
124	16. Shoot Pop B
125	16. Shoot Song Yao B
Latin	
126	Bossanova dance 1B
127	Guitar bossa novo dance B
128	Pop bossa novo dance B



Lista ścieżek demo

No.	Songs
01	Puppy Waltz Chopin - Piano
02	DJ dance music
03	Fountain
04	Beautiful Spanish girl
05	Piano Sonata
06	Prelude to Liszt's Extraordinary Etudes
07	Bee
08	Racehorse
09	Chopin Nocturne
10	Long live Spain
11	Urging horses and whips to carry grain is busy
12	Mexico
13	Mozart Piano Sonata
14	Minuet
15	Female attached horse
16	Disco
17	Pedal waterwheels sing mountain songs
18	The fisherman girl is on the seashore
19	Little stars
20	I love my kindergarten
21	Wahaha
22	Ducklings and chicks
23	Humorous song
24	Ode to joy
25	Miss your hometown
26	Dove
27	Friendships last forever
28	In the moonlight
29	Happy birthday to you

30	Victory Hymn	60	Dobby
31	A doll's dream	61	How happy are we
32	bazaar	62	The little bee is buzzing
33	sweet family	63	Russian songs
34	lullaby	64	Painter
35	At home	65	Harvest Song
36	Four Season Song	66	Jingle Bells
37	Many years ago	67	Selling newspaper songs
38	Little white pigeon	68	Little swallow
39	Voice of the heart	69	Happy new year
40	Violin sonata	70	Edelweiss
41	swans	71	Moon River
42	Bagpipe dance	72	Bayer Etude 10
43	Gypsy roundabout	73	Bayer Etude 20
44	Trumpeter's Serenade	74	Bayer Etude 30
45	Polka Dances	75	Bayer Etude 40
46	Groundhog	76	Bayer Etude 50
47	trout	77	Bayer Etude 60
48	Farewell	78	Bayer Etude 70
49	Soldier's March	79	Bayer Etude 71
50	To Alice	80	Bayer Etude 72
51	Swanee River	81	Bayer Etude 75
52	Old French songs	82	Bayer Etude 76
53	The blue Danube	83	Bayer Etude 77
54	Hungarian dance music	84	Bayer Etude 78
55	cosmonaut	85	Bayer Etude 79
56	Patriots	86	Bayer Etude 80
57	cuckoo	87	Bayer Etude 90
58	Singing kite	88	Bayer Etude 98
59	Children in the Dong family are much happier		

Tabele akordów jedno- i wielopalcowych

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C [♯] /(D [♯])								
D								
(D [♯])/E [♯]								
E								
F								
F [♯] /(G [♯])								
G								
(G [♯])/A [♯]								
A								
(A [♯])/B [♯]								
B								

Informacja o zużytych sprzęcie elektrycznym i elektronicznym











Głównym celem regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstałych ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczanego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.

ENGLISH

Table of Contents

Safety Instructions	24
Maintenance	24
Structure and Operation	25
Information about Waste Electrical and Electronic Equipment.....	44

Safety Instructions


	Please read the user manual in detail before use. Please also keep it for future reference. The manual contains rules for the safe use of the device.
	After receiving the product, please unpack and check whether it is complete and whether there is any damage caused by transportation. If there is damage caused by transportation, please do not use this product and contact the dealer or manufacturer as soon as possible.
	WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.
	The product described in this manual comply with European directives and it is therefore CE marked.
	Keep the device away from children and unqualified persons. The manufacturer is not liable for damage caused by improper use.
	Before use, make sure the housing is not damaged.
	Use only the dedicated power adapter included with the product!! Disconnect the product from the power supply by pulling on the power plug - do not pull directly on the power cord! Disconnect the device from the power supply before removing the housing or performing maintenance. If you find the power cord is damaged - do not use it!
	Indoor device, use in a well-ventilated room, keep away from moisture. Do not expose the product to direct sunlight. Do not store or use the device near a fire source!
	Do not expose the device to high temperatures!
	In the event of a malfunction, disconnect the device from the power supply immediately!

Maintenance


1. The device may only be used by qualified personnel, damage caused by improper use or attempted repair is not covered by the warranty. There are no service parts inside the packaging, repairs may only be carried out by authorized service center.
2. Do not allow the product to come into contact with oil, grease or any similar liquid!
3. Regular cleaning allows of long term use and maintains proper operation. Use soft, dry cloth to clean the product.

Structure and Operation

 Control Panel

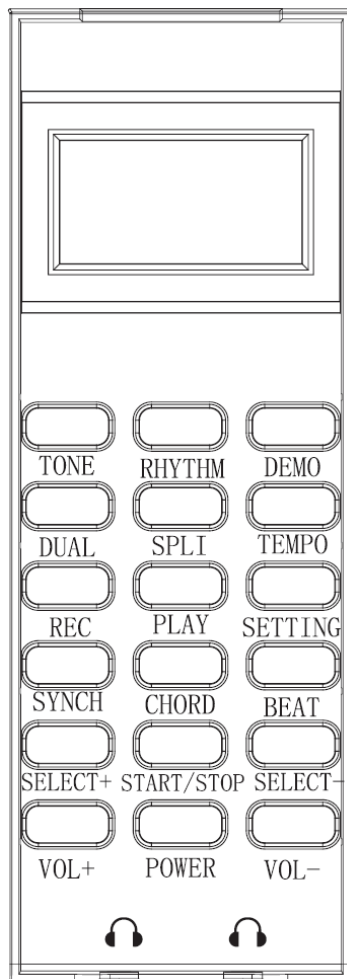

Rear Panel

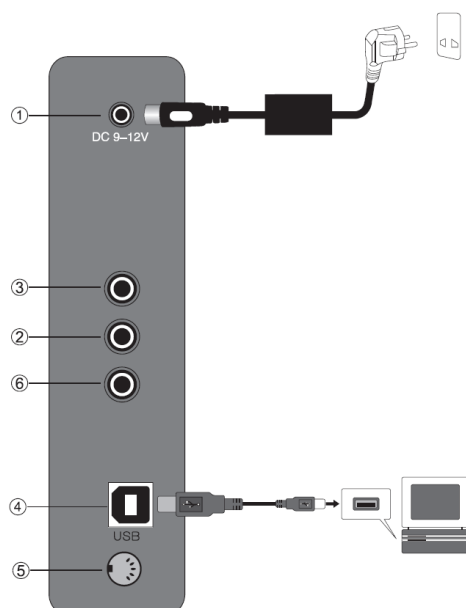 

1. Power input.
2. Audio input.
3. Headphone output.
4. USB-B port.
5. 5-pin DIN socket for foot pedal.
6. Jack input for foot pedal.

Device Preparation

Connecting the AC/DC Power Adapter

Connect the round plug of the AC/DC power adapter to the power input located on the bottom of the device's control panel, and connect the power plug to a wall outlet. If the device is not used for a long time, disconnect the AC/DC power adapter from the outlet.

Audio Input

The audio input allows you to connect an external audio source for playback.

Headphone Output

When headphones are connected, the built-in piano speakers are automatically muted, allowing you to play without disturbing those around you. This socket can also be used as an audio output.

USB Transmission Interface

The digital piano can be connected to a computer via a USB interface. Using music software installed on your computer, you can practice, play, compose, and record songs. Edited music and accompaniment available in the software can be transferred to the digital piano and played back or used to play with accompaniment.

Connecting the Foot Pedal

Connect the pedal cable plug to the round socket on the bottom of the piano to use the three pedal effects.

AC/DC Power Adapter

Please use the AC/DC power adapter supplied with this instrument. Using an incorrect power adapter may damage the instrument. Do not place the power adapter and/or power cable near a heat source. Do not bend the cable excessively or place heavy objects on it to avoid damage. Do not insert the power adapter's AC plug into a multi-function socket. If you are not using the instrument for a long period of time, turn off the device and remove the power adapter plug from the outlet. Pull the plug - do not pull on the power cable! The power adapter may heat up during prolonged use of the device - it is normal. Smoke, strange odors and/or overheating of the device may indicate a hazard - in this case, turn off the power, disconnect the power adapter, and contact your distributor.

Basic Operation

Device On/Off

Press the POWER button and the device will start up - you can now begin using the instrument. The display will show 001 - the device will enter play mode. To turn off the device, press the POWER button again.

Master Volume

Press VOL+ or VOL- to increase or decrease the volume.

Tone (Sound) Selection

Press TONE to enter tone (sound) selection mode. Use SELECT+ and SELECT- to switch between tones (sounds). You can choose between tones (sounds) 001-380. The selected tone (sound) number will appear on the LED display.

Rhythm Selection

 
Press RHYTHM to enter the rhythm selection mode. Use SELECT+ and SELECT- to switch between rhythms. You can choose between rhythms 001-128. The selected rhythm number will appear on the LED display. The Start/Stop button allows you to start and stop rhythm playback.

Tempo

Press TEMPO, then SELECT+ or SELECT- to increase or decrease the tempo. The current tempo value will appear on the LED display. The selectable tempo range for the instrument is 20-280, with a default value of 120. To quickly increase or decrease the tempo, press and hold SELECT+ or SELECT-.

Chord Accompaniment

While playing a rhythm, press CHORD to turn on the chord accompaniment feature. Play any single- or multi-finger chord on the keys of accompaniment zone (keys 1-34 from the left - chord zone) and you will hear the corresponding accompaniment. A detailed list of single- and multi-finger chords can be found in the "Single- and Multi-Finger Chord Tables" section. Press CHORD again to turn off the chord accompaniment feature.

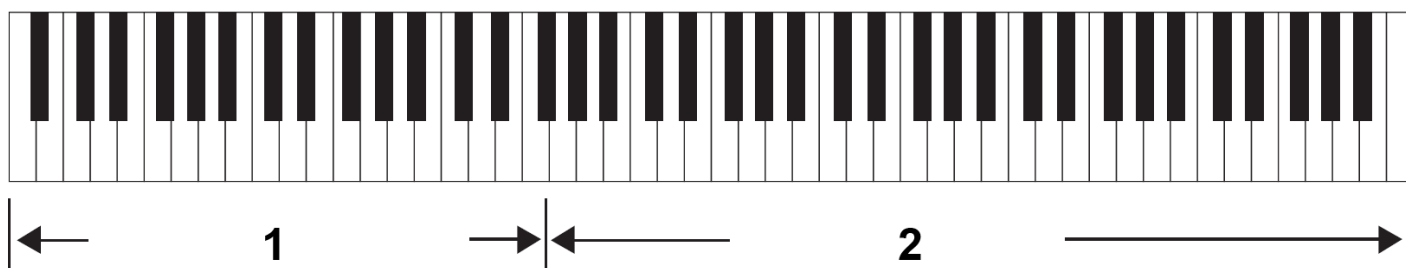

1. Chord zone.

2. Melody zone.

Synchronized Accompaniment Start

Select a rhythm and turn on the chord accompaniment feature. Press SYNCH to turn on the synchronized accompaniment start feature. When you press any key to play a chord, the accompaniment will start automatically. Press the START/STOP button to turn off the synchronized accompaniment start feature.

Keyboard Touch Sensitivity, Rhythm Volume and Transposition

Each short press of SETTING allows you to switch between the device's feature settings:

- first press of SETTING - switch to keyboard touch sensitivity adjustment mode; use SELECT+ and SELECT- to turn the feature on or off;
- second press of SETTING - switch to rhythm volume adjustment mode (0-32); use SELECT+ and SELECT- to set the feature value;
- third press of SETTING - switch to transposition mode (-12-12); use SELECT+ and SELECT- to set the feature value.

Metronome

Press BEAT to turn on the metronome feature. The metronome has 4 meters to choose from: 1/4, 2/4, 3/4 and 4/4. Press BEAT again to turn off the metronome feature.

Demo Track Playback

 
Press DEMO to start the demo track selection and playback mode. Use SELECT+ and SELECT- to switch between demo tracks. You can choose between demo tracks 001-088. The selected demo track number will appear on the LED display. Press DEMO again to stop demo track playback.

Recording and Playback

Press REC to turn on the recording feature. Start playing the keys to begin recording. The maximum number of recording sounds is 10,000. Press REC again to stop recording. Press PLAY to play back the recording.

Keyboard Split

Enter tone (sound) selection mode and select the tone (sound) for the left side. Press SPLI to turn on the keyboard split feature. Use the SELECT+ and SELECT- buttons to select the tone (sound) for the right side. Press SPLI again to turn off the keyboard split feature.

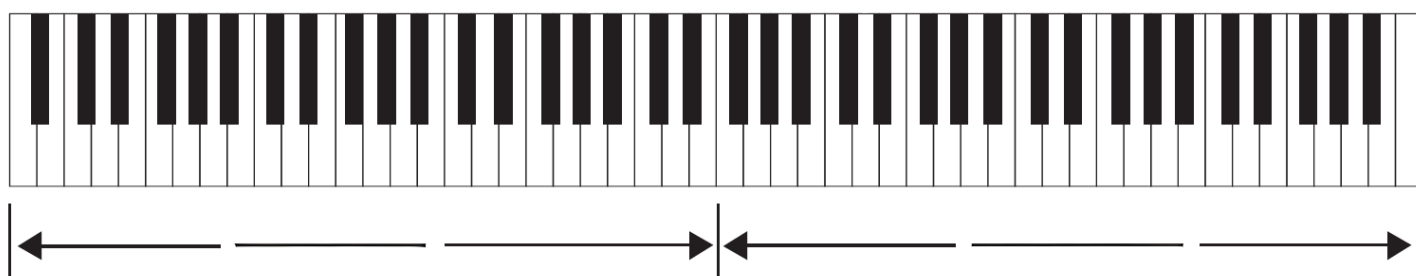

Layering Two Tones (Sounds)

Enter tone (sound) selection mode and select the main tone (sound). Press DUAL to turn on the second tone (sound) overlay feature. Use the SELECT+ and SELECT- buttons to select the second tone (sound). Press DUAL again to turn off the second tone (sound) overlay feature.

Bluetooth

Direct Connection

1. Turn on Bluetooth on your external mobile device that supports the Bluetooth standard.
2. Find the Artplay P1 device on your external mobile device and connect to it.
3. Play music on your external mobile device - the instrument's speakers will be the sound source.

Connection via App

1. Turn on Bluetooth on your external mobile device that supports the Bluetooth standard.
2. Find the Artplay P1 device on your external mobile device and connect to it.
3. Install one of the following apps: POP Piano-Anyone can play (Android/iOS), GarageBand (iOS).
3. Launch the app.
4. Connect to the Artplay P1 instrument in the app.

Tone (Sound) List

No.	Instruments	(guitar)	
(Piano)		025	Nylon String Guitar 1
001	Grand Piano 1	026	Metal String Guitar 1
002	Bright Piano 1	027	Jazz Guitar 1
003	Electronic Piano 1	028	Clear Sound Electronic Guitar 1
004	Bar Piano	029	Muted Electronic Guitar 1
005	Electric Piano 1	030	Overspeed Guitar 1
006	Electric Piano 2	031	Distortion Guitar 1
007	Ancient Pianos	032	Harmonic Guitar
008	Clavina 1	(Bass)	
		033	Original Bass 1
(Glockenspiel)		034	Finger Bass 1
009	Steel Piano	035	Electronic Bass 1
010	Glockenspiel 1	036	Chordless Bass
011	Sound Box 1	037	Hit The Bass 1
012	Vibraphone 1	038	Hit The Bass 2
013	Marimba 1	039	Synthetic Bass 1
014	Xylophone 1	040	Synth Bass 2
015	Bell Tube Bell 1	(Strings)	
016	Desi Marquin 1	041	Violin 1
		042	Viola 1
(Organ)		043	Cello 1
017	Hand Crank Organ 1	044	Double Bass 1
018	Percussion Organ 1	045	Vibraphone Violin 1
019	Rock Organ	046	Pizzling Strings
020	Church Organ 1	047	Orchestral Harp 1
021	Reed Organ 1	048	Timpani 1
022	Accordion 1	(Ensemble)	
023	Harmonica 1	049	String Ensemble 1
024	Tango Accordion 1	050	String Ensemble 2

051	Synth Strings 1	078	Dongxiao
052	Synth Strings 2	079	Whistle 1
053	Ah-Vocal Chorus 1	080	Ocalina
054	Oh Voice Chorus 1	(Synth Wind Music)	
055	Synthesis Sound	081	Square Wave Wind Music
056	Pop Orchestra 1	082	Sawtooth Wind
(Brass)		083	Goddess Wind Music
057	Small 1	084	Birdsong Wind
058	Trombone 1	085	Charan Wind
059	Large 1	086	Vocal Wind Music
060	Muted Trumpet 1	087	Five Degrees Of Wind Music
061	France No. 1	088	Bass-Wind
062	Brass Ensembles 1	(Synthesized Tone)	
063	Synthetic Copper Tube 1	089	New Century
064	Synthetic Copper Tube 2	090	Warm Song
Wind Instruments)		091	Multi-Tone Synthesis
065	Straight Saxophone	092	Choir Pad 1
066	Soprano Saxophone 1	093	Bowstring 1
067	Tenor Saxophone 1	094	Metal Pad 1
068	Bass Saxophone 1	095	Ring Pad 1
069	Oboe 1	096	Brush Eraser
070	English Tube 1	(Synthetic Effect)	
071	Bassoon 1	097	Sound Of Rain
072	Clarinet 1	098	Movie Effects
(Woodwind Instruments)		099	Crystal
073	Piccolo 1	100	Atmosphere
074	Flute 1	101	Bright
075	Gu Xiao 1	102	Elves
076	Paiao	103	Reverberation
077	Bottle Wooden Tube	104	Cosmic Voices

105	Sital 1	132	Stereo Grand Piano 1
106	Banjo 1	133	Stereo Grand Piano 2
107	Shamisen 1	134	Stereo Grand Piano 3
108	Japanese Koto 1	135	Bright Grand Piano 1
109	Kalimba	136	Bright Grand Piano 2
110	Bagpipe	137	Bright Grand Piano 3
111	Fedri Violin	138	Dusky Grand Piano 1
112	Shana	139	Dim Grand Piano 2
		140	Intense Gradation Grand Piano 1
113	Crispy Bell	141	Intensity Gradient Grand Piano 2
114	Ahhhh	142	Soft Grand Piano 1
115	Metal Drum	143	Soft Grand Piano 2
116	Wooden Board Drum	144	Soft Grand Piano 3
117	Japanese Drums	145	Bright Stereo Piano
118	Wonderful Drums	146	Bright Piano 2
119	Synthetic Drum	147	Bright Piano 3
120	Reverberation Cymbals	148	Bright Piano 4
		149	Bright Piano 5
121	String Code Murmur	150	Bright Stereo Piano 1
122	Breathing Sounds 1	151	Bright Stereo Piano 2
123	Sound Of Ocean Waves	152	Soft Bright Piano 1
124	Birdsong 1	153	Soft Bright Piano 2
125	Phone Ringing	154	Deep Bright Piano
126	The Sound Of An Airplane	155	Dynamics Gradient Brightens Piano
127	Cheers	156	Unbalanced Piano 1
128	Gunfire 1	157	Dissonant Piano 2
Other Tones		158	Dissonant Piano 3
129	Grand Piano 2	159	Bright Electronic Piano 1
130	Grand Piano 3	160	Bright Electronic Piano 2
131	Grand Piano 4	161	Bright Electronic Piano 3

162	Bright Electronic Piano 4	192	Hard Electric Piano 1
163	Stereo Electronic Piano 1	193	Hard Electric Piano 2
164	Stereo Electronic Piano 2	194	Electric Short Pitch Piano 1
165	Stereo Electronic Piano 3	195	Electric Short Pitch Piano 2
166	Stereo Electronic Piano 4	196	Bright Electric Piano 1
167	Dusky Electronic Piano 1	197	Bright Electric Piano 2
168	Dusky Electronic Piano 2	198	Harpsichord 1
169	Dim Electronic Piano 3	199	Harpsichord 2
170	Dim Electronic Piano 4	200	Soft Old Piano 1
171	Soft Bar Piano 1	201	Soft Ancient Piano 2
172	Soft Bar Piano 2	202	Bright Ancient Piano 1
173	Force Gradient Bar Piano	203	Bright Ancient Piano 2
174	Dim Bar Piano 1	204	Dusky Ancient Piano 1
175	Dim Bar Piano 2	205	Dusky Ancient Piano 2
176	Stereo Bar Piano 1	206	Hard Antique Piano 1
177	Stereo Bar Piano 2	207	Hard Antique Piano 2
178	Stereo Bar Piano 3	208	Clavina 2
179	Stereo Bar Piano 4	209	Clavina 3
180	Short Tone Bar Piano 1	210	Stereo Clavina
181	Short Tone Bar Piano 2	211	Bright Clavina
182	Stereo Electric Piano 1	212	Dusky Clavina
183	Stereo Electric Piano 2	213	Keystroke Clavina
184	Stereo Electric Piano 3	214	Bright Piano
185	Stereo Electric Piano 4	215	Short Tone Piano
186	Stereo Electric Piano 5	216	Percussion Piano
187	Stereo Electric Piano 6	217	Echo Piano
188	Soft Electric Piano 1	218	Harmonic Piano
189	Soft Electric Piano 2	219	Glockenspiel 2
190	Soft Electric Piano 3	220	Glockenspiel 3
191	Soft Electric Piano 4	221	Glockenspiel 4

222	Bright Glockenspiel	252	Bell Tube Bell 2
223	Silent Glockenspiel	253	Bell Tube Bell 3
224	Stereo Glockenspiel 1	254	Bell Tube Bell 4
225	Stereo Glockenspiel 2	255	Synthetic Tube Bell
226	Sound Box 2	256	Silence Bell Tube Bell
227	Sound Box 3	257	Desi Marquin 2
228	Sound Box 4	258	Desi Marquin 3
229	Toy Eight-Sound Box	259	Santur Piano
230	Bright Eight Sound Box	260	Hand Crank Organ 2
231	Silent Eight-Sound Box	261	Hand Crank Organ 3
232	Vibraphone 2	262	Soft Hand Crank Organ
233	Vibraphone 3	263	Bright Hand Crank Organ
234	Synthetic Vibraphone	264	Unadjusted Hand Crank Organ
235	Hard Vibraphone	265	Percussion Organ 2
236	Stereo Vibraphone 1	266	Percussion Organ 3
237	Stereo Vibraphone 2	267	Bright Percussion Organ
238	Soft Vibraphone	268	Distortion Percussion Organ
239	Marimba 2	269	Revolving Organ
240	Stereo Marimba	270	Slow Rotating Organ
241	Mute Marimba	271	60's Rock Organ
242	Bright Marimba	272	80s Rock Organ
243	Distorted Marimba	273	Bright Rock Organ
244	Harmonic Marimba	274	Dim Rock Organ
245	Xylophone 2	275	Soft Rock Organ
246	Xylophone 3	276	Church Organ 2
247	Intensity Gradient Xylophone	277	Church Organ 3
248	Distorted Xylophone	278	Church Organ 4
249	Bright Xylophone	279	Church Organ 5
250	Fast Xylophone	280	Church Organ 6
251	Slow Xylophone	281	Stereo Church Organ 1

282	Stereo Church Organ 2	312	Sweet Accordion
283	Bright Church Organ 1	313	Dim Accordion
284	Bright Church Organ 2	314	Fast Accordion
285	Dim Church Organ 1	315	Slow Accordion
286	Dim Church Organ 2	316	Harmonica 2
287	Singing Church Organ	317	Harmonica 3
288	Overtone Church Organ	318	Harmonica 4
289	Slow Church Organ	319	Harmonica 5
290	Fast Church Organ	320	Sweet Harmonica
291	Gentle Church Organ	321	Distorted Harmonica
292	Reed Organ 2	322	Slow Harmonica
293	Reed Organ 3	323	Fast Harmonica
294	Reed Organ 4	324	Bright Harmonica
295	Reed Organ 5	325	Dusky Harmonica
296	Bright Reed Organ	326	Soft Harmonica
297	Dim Reed Organ	327	Stereo Harmonica 1
298	Stereo Reed Organ	328	Stereo Harmonica 2
299	Fast Reed Organ	329	Mute Harmonica
300	Slow Speed Reed Organ	330	Tango Accordion 2
301	Soft Reed Organ	331	Tango Accordion 3
302	Hard-Reed Organ	332	60s Tango Accordion
303	Jazz Reed Organ	333	80s Tango Accordion
304	Accordion 2	334	Bright Tango Accordion
305	Accordion 3	335	Dim Tango Accordion
306	Accordion 4	336	Soft Tango Accordion
307	Accordion 5	337	Hard Tango Accordion
308	Distortion Accordion	338	Stereo Tango Accordion 1
309	Bright Accordion	339	Stereo Tango Accordion 2
310	Harmonic Accordion	340	Slow Tango Accordion
311	Rock Accordion	341	Fast Tango Accordion

Rhythm List

No.	Name	026	Bossanova dance 1A
8 shots		027	Guitar bossa novo dance A
001	8 Shoot 1A	028	Pop bossa novo dance A
002	8 Shoot 2A	029	Tango A
003	8 Shoot 3A	030	Exactly A
004	8 Beats Rock A	031	Rumba A
005	8 Passionate beat A	032	Dex A
006	8 Shoot pop music 1A	rustic	
007	8 Beats Pop 2A	033	Country Music A
Ballad		034	Country Rock A
008	Ballade 1A	035	Country Skiing A
009	Ballade 2A	036	Countryside Swaying A
010	Guitar Ballade A	037	Country Ballad A
011	Organ Ballad A	038	Country Waltz A
012	Blues Ballad A	Rock and heavy metal	
013	Ancient Ballad A	039	50's Rock A
014	Rock Ballad A	040	Heavy metal A
015	Slow Board Ballade A	041	Rock 1A
016	Pop Ballad A	042	Rock 2A
017	Electroacoustic Ballad A	043	Soft Rock A
018	Polka Ballad A	044	Slow board rock A
16 shots		045	Hard Rock A
019	16 Shoot 1A	046	Heavy Metal Rock 1A
020	16 Shoot 2A	047	Heavy Metal Rock 2A
021	16 Shoot 3A	Poetry and blues	
022	16 Shoot 4A	048	Chicago Blues A
023	16 Shoot Fink A	049	Fast Gospel Music A
024	16. Shoot Pop A	050	Traditional Soul A
025	16. Shoot Ballads A	051	Rap A
Latin		052	Slow Board Gospel Music A

053	Bruce A	080	Club Dance A
054	Slow Board Blues A	Jazz and swing	
055	Foxtrot A	081	Boogie Dance A
disco		082	Trendy pop A
056	Passionate Disco A	083	JAZZ ROCK A
057	Double disco A	084	Swaying 1A
058	Double Step Dance A	085	Dixie A
059	Pop Polka A	086	Jazz Samba A
060	Waltz 1A	traditions	
061	Pop Waltz 1A	087	March A
062	Pop Waltz 2A	088	American March A
063	Rae A	089	Samba A
worlds		090	Polka A
064	Twirl Dance 1A	091	Army Polka A
065	Twister 2A	092	Tarantella Dance A
066	Miami Pop A	093	Slow Board Waltz A
067	Detroit A	094	Army Waltz A
068	Reggae Dance A	Piano accompaniment	
069	Swing Rigger A	095	Piano Song A
070	Mambo A	096	Waltz 2 (piano) A
071	Earth Style Dance A	097	Guitar Waltz A
072	Mercette (French folk song) A	098	2/4 Shoot piano accompaniment A
dance music		099	3/4 shot piano accompaniment A
073	House Dance A	100	4/4 Shoot piano accompaniment A
074	Slow Board Foxtrot A	8 shots	
075	Vinina Waltz A	101	8 Shoot 1B
076	Salsa Dance A	102	8 Shoot 2B
077	Disco A	103	8 Shoot 3B
078	Pop Hip-Hop Dance A	104	8. Beat Rock B
079	ANNOG POP A	105	Passion 8 Shoot B

106	8 Shoot pop music 1B
107	8 Beats Pop 2B
Ballad	
108	Ballade 1B
109	Ballade 2B
110	Guitar Ballad B
111	Organ Ballad B
1 12	Blues Ballad B
1 13	Ancient Ballad B
1 14	Rock Ballad B
1 15	Slow Board Ballad B
116	Pop Ballad B
117	Electroacoustic Ballad B
118	Polka Ballad B
16 shots	
119	16 Shoot 1B
120	16 Shoot 2B
121	16 Shoot 3B
122	16 Shoot 4B
123	16 Shoot Fink B
124	16. Shoot Pop B
125	16. Shoot Song Yao B
Latin	
126	Bossanovo dance 1B
127	Guitar bossa novo dance B
128	Pop bossa novo dance B

Demo Track List

No.	Songs
01	Puppy Waltz Chopin - Piano
02	DJ dance music
03	Fountain
04	Beautiful Spanish girl
05	Piano Sonata
06	Prelude to Liszt's Extraordinary Etudes
07	Bee
08	Racehorse
09	Chopin Nocturne
10	Long live Spain
11	Urging horses and whips to carry grain is busy
12	Mexico
13	Mozart Piano Sonata
14	Minuet
15	Female attached horse
16	Disco
17	Pedal waterwheels sing mountain songs
18	The fisherman girl is on the seashore
19	Little stars
20	I love my kindergarten
21	Wahaha
22	Ducklings and chicks
23	Humorous song
24	Ode to joy
25	Miss your hometown
26	Dove
27	Friendships last forever
28	In the moonlight
29	Happy birthday to you

30	Victory Hymn	60	Dobby
31	A doll's dream	61	How happy are we
32	bazaar	62	The little bee is buzzing
33	sweet family	63	Russian songs
34	lullaby	64	Painter
35	At home	65	Harvest Song
36	Four Season Song	66	Jingle Bells
37	Many years ago	67	Selling newspaper songs
38	Little white pigeon	68	Little swallow
39	Voice of the heart	69	Happy new year
40	Violin sonata	70	Edelweiss
41	swans	71	Moon River
42	Bagpipe dance	72	Bayer Etude 10
43	Gypsy roundabout	73	Bayer Etude 20
44	Trumpeter's Serenade	74	Bayer Etude 30
45	Polka Dances	75	Bayer Etude 40
46	Groundhog	76	Bayer Etude 50
47	trout	77	Bayer Etude 60
48	Farewell	78	Bayer Etude 70
49	Soldier's March	79	Bayer Etude 71
50	To Alice	80	Bayer Etude 72
51	Swanee River	81	Bayer Etude 75
52	Old French songs	82	Bayer Etude 76
53	The blue Danube	83	Bayer Etude 77
54	Hungarian dance music	84	Bayer Etude 78
55	cosmonaut	85	Bayer Etude 79
56	Patriots	86	Bayer Etude 80
57	cuckoo	87	Bayer Etude 90
58	Singing kite	88	Bayer Etude 98
59	Children in the Dong family are much happier		

Single- and Multi-Finger Chord Tables

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C♯/(D♭)								
D								
(D♯)/E♭								
E								
F								
F♯/(G♭)								
G								
(G♯)/A♭								
A								
(A♯)/B♭								
B								

Information about Waste Electrical and Electronic Equipment

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment - intended for households - is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.